

# FATEK

# M Series

Programmable Controller

## M-Series PLC Expansion Module User Manual



*NEXT Level SOLUTION*

Since the content of the manual will be revised as the version changes, this version may not be the final version.

To download the latest version of the manual, please go to the technical support area of [www.fatek.com](http://www.fatek.com)

# INDEX

<b>Chapter 1</b>	<b>List of Expansion Modules.....</b>	<b>11</b>
<b>Chapter 2</b>	<b>Expansion of M-Series PLC .....</b>	<b>1</b>
2-1	I/O Expansion Specifications .....	2
2-2	Digital I/O Expansion and I/O Channel Numbering.....	3
2-3	Analog I/O Expansion and I/O Channel Numbering .....	5
2-4	Expansion Module Configuration Settings.....	8
2-5	Expansion Module Firmware Update .....	10
<b>Chapter 3</b>	<b>Installation and Wiring.....</b>	<b>1</b>
3-1	Environmental Specifications .....	2
3-2	Installation Precautions .....	3
<b>Chapter 4</b>	<b>Power Wiring, Power Consumption Calculation, and Power Sequence Requirements .....</b>	<b>1</b>
4-1	Specifications and Wiring of AC Power Module.....	2
4-2	Maximum Current Consumption of Expansion Module.....	5
4-3	Calculation Example of Power Capacity.....	7
4-4	Requirement of Power Sequence in CPU Module & Expansion Module .....	8
<b>Chapter 5</b>	<b>Digital Input Circuit.....</b>	<b>1</b>
5-1	Digital Input Circuit Specifications .....	2
5-2	24VDC Single-End Input Circuit and Wiring for SINK/SOURCE Input.....	3
<b>Chapter 6</b>	<b>Digital Output Circuit.....</b>	<b>1</b>
6-1	Digital Output Circuit Specifications .....	2
6-2	Single-End Output Circuit.....	3
6-3	Speed up the Single-End Transistor Output Circuit .....	6
6-4	Output Device Protection and Noise Suppression in DO Circuit.....	7
<b>Chapter 7</b>	<b>Left Side Expansion Module Specifications .....</b>	<b>1</b>
7-1	Power Module Specifications .....	2
<b>Chapter 8</b>	<b>Right Side High Speed Expansion Module Specifications .....</b>	<b>1</b>
8-1	High Speed Communication Expansion Module Specifications.....	2
<b>Chapter 9</b>	<b>Right Side Expansion Module Specifications .....</b>	<b>1</b>
9-1	Digital Input Expansion Module Specifications .....	2
9-2	Digital Output Expansion Module Specifications .....	5
9-3	Digital Input /Output Combo Expansion Module Specifications .....	10
9-4	Analog Input Expansion Module Specifications.....	15
9-5	Analog Output Expansion Module Specifications .....	21
9-6	Analog Input/Output Combo Expansion Module Specifications.....	27
9-7	Temperature Expansion Module Specifications.....	31
9-8	Temperature Combo Expansion Module Specifications.....	35
9-9	Load Cell Expansion Module Specifications.....	38
<b>Chapter 10</b>	<b>Left Side Expansion Dimensions .....</b>	<b>1</b>

10-1	Power Module Dimensions .....	2
<b>Chapter 11 Right Side High Speed Expansion Dimensions .....</b>		<b>1</b>
11-1	High Speed Communication Expansion Module Dimensions .....	2
<b>Chapter 12 Right Side Expansion Dimensions .....</b>		<b>1</b>
12-1	Digital Input Expansion Module Dimensions .....	2
12-2	Digital Output Expansion Module Dimensions.....	3
12-3	Digital Input/Output Combo Expansion Module Dimensions .....	5
12-4	Analog Input Expansion Module Dimensions .....	6
12-5	Analog Output Expansion Module Dimensions .....	8
12-6	Analog Input/Output Combo Expansion Module Dimensions .....	10
12-7	Temperature Expansion Module Dimensions .....	11
12-8	Temperature Combo Expansion Module Dimensions.....	13
12-9	Load Cell Expansion Module Dimensions .....	14
12-10	End Module Cover Dimensions.....	16
<b>Chapter 13 Expansion Module Troubleshooting.....</b>		<b>1</b>
13-1	Digital Input Expansion Module Troubleshooting.....	2
13-2	Digital Output Expansion Module Troubleshooting.....	2
13-3	Digital Input/Output Combo Expansion Module Troubleshooting	
13-4	Analog Input Expansion Module Troubleshooting .....	2
13-5	Analog Output Expansion Module Troubleshooting.....	2
13-6	Analog Input/Output Expansion Module Troubleshooting	
13-7	Temperature Input Expansion Module Troubleshooting .....	3
13-8	Temperature Combo Expansion Module Troubleshooting	
13-9	Load Cell Expansion Module Troubleshooting	
<b>Chapter 14 Repairs and Maintenance.....</b>		<b>1</b>
14-1	Precautions.....	2
14-2	Daily Maintenance .....	3
14-3	Regular Maintenance.....	4

# Manual for the FATEK M-Series PLC Expansion Module

## Preface

This Manual provides important information related to the use of the FATEK M-Series PLC CPU Module. Before using the product, be sure to read this Manual carefully in order to get familiar with and understand its content. Should you have any questions or comments, please contact the FATEK distributor for detailed warranty services and responsibility limit.

### Warranty Service

The warranty period provided by FATEK for its product shall last for one year (or other period as otherwise agreed) starting from the date when the product is sold and it will be offered under the pre-conditions that there are no defects in product use.

Please contact FATEK or the local distributor in the event failure occurs on any of the FATEK products for reasons not caused by man-made factors during the aforesaid warranty period. However, the failure due to any of the following reasons shall not be covered by the warranty services:

1. The malfunction is due to the user' s failure in following the conditions, environment, operations, installation and correct wiring method specified in this Manual.
2. The malfunction is due to the user' s failure in following the operating method originally designed.
3. The malfunction is not due to the reasons of the product.
4. The malfunction is not caused by the modification and the maintenance executed by FATEK.
5. The malfunction is caused by other types of *force majeure* factors such as natural disasters or man-made negligence.

In the meantime, the aforesaid warranty services shall be limited to the FATEK product only and the losses resulting from the product failure will not be covered in the warranty scope.

### Limit of responsibilities

Unless it has been confirmed that the product is properly used, stored, installed and serviced and that it has not been contaminated, abused, misused or improperly modified or repaired as being analyzed by FATEK; otherwise, FATEK shall not be liable for any product-related particular damage, consequential damage or derivative damage or even revenue loss or commercial loss that resulted from whatever means.

## Precautions on using the product

### Compliance with the application-related conditions

The user shall evaluate the suitability of FATEK product and shall install the product in the well-designed equipment or system.

The user needs to check if the system, machinery or device currently used is compatible with the FATEK product. If the user fails to confirm the compatibility or the suitability, then FATEK shall not be liable for the suitability of the product.

When required by the customer, FATEK shall provide correlated third party certification to define the value rating and the application restrictions that will be applicable for the product. However, the aforesaid certification message shall not be considered as sufficient to determine the suitability of the FATEK product, the final product, the machine, the system and other applications or relevant combinations. Described below are certain applications that should be cautiously treated by the user. In spite of this, the content described below shall neither be considered as having included all of the intended product purposes nor suggesting that all of the following purposes shall be entirely suitable for the product. For example, outdoors use, use in an area subjected to potential chemical contamination or electrical interference or used under conditions or functions not mentioned in this Manual or used with the system, machine and equipment that may create risks to life or properties.

Before working with the product, the user will be required to check if the entire system is marked with a hazard sign and shall select the design that can ensure the safety such as the backup design, etc. Otherwise, the user shall not be allowed to use the product in the application that will present personnel and the property safety concerns. In no event shall FATEK be liable for the specifications, statutory regulations or restrictions that will be used by the customer in the product combination or the product operations.

When using the CPU Module, FATEK shall not be liable for the programs edited by the user or the resulting consequences.

## Disclaimers

### Dimensions and weight

The dimensions and the weight specified in the manual are nominal values only. Even if provided with the tolerance, they cannot be used in the manufacturing purposes.

### Performance data

The data specified in this Manual mean that the performance data obtained under FATEK' s test conditions are provided for the user to confirm its compliance only. Therefore, the user is also required to consider the actual application conditions. Therefore, actual performance shall be defined according to the content of the guarantee and the limit of responsibilities established by FATEK.

### Errors and negligence

The content of this Manual is provided through careful checking process and is considered as correct. However, FATEK shall not be liable for the errors or the negligence that may be found in the text, printing content and proofreading.








### Change of specifications





The product specifications and accessories may be subject to change along with the technical improvement or other reasons. In the event that the published specifications or performance need to be changed or where significant structural change is required, FATEK will change the model number of the product accordingly. If certain specifications of the product have changed, then FATEK will not give the notice under the following situation: when it is required to use a special model number or create particular specifications in order to support the customer' s application according to the instructions given by the customer. To confirm actual specifications of the product to be purchased, please contact the local FATEK distributor.

## Precautions for safety





### Signs and meaning of safety precautions

The following signs will be used in this Manual in order to provide precautions that will be required for using the M-Series PLC safely. These precautions are extremely important for using the product safely. Please read the safety precautions carefully in order to get familiar with and understand the content and the meaning of the aforesaid instructions.

 <b>Warning</b>	Means a potentially dangerous situation that will result in death or serious injury if not avoided. In the meantime, it may also lead to serious property losses.
 <b>Caution</b>	Means a potentially dangerous situation that may result in minor or medium level injury or property losses if not avoided.
	Means operations that must not be executed.
	Means operations that must be executed.
	Means general precautions.
	Means the precautions relating to hot surfaces.
	Means the precautions related to the wiring, grounding and electrocution of the electrical system.

<b>Warning</b>	
Do not attempt to dismantle any module or touch the internal side of the module when it is under energized status or it may lead to electrocution injury.	
Do not attempt to touch any terminal or terminal board when the module is under energized status, or it may lead to electrocution injury.	
<p>To ensure the system safety in order to avoid abnormal actions that may be caused by man-made external factors or false actions resulting from the faulty PLC, it is required to install the following safety measures in the external circuit (not within the PLC procedure); otherwise, it may lead to serious accident.</p> <p>The externally controlled circuit must be provided with emergency stop switch, interlocking circuit, limit switch and similar safety measures. The PLC will stop outputting the signals when encountering major failure alarm during the operations. However, the errors in the I/O controller and the I/O register as well as other undetectable errors will still trigger unexpected actions. To deal with the aforesaid errors, you are required to install external safety measures to protect the system safety. If the output relay is jammed, burnt or if the output transistor is damaged, then the PLC may still maintain its output at the ON or OFF status.</p> <p>To solve the aforesaid issues, it is required to install external safety measures to protect the system safety. By installing the corresponding safety measures in the system and the equipment, it allows you to maintain the safety of the entire system in spite of the fact that communication errors or false actions have occurred during the operating process.</p>	
The user must take corresponding failure preventive measures in order to ensure safety when the signal line is damaged or when the power is instantly disconnected or when the signal is wrong, missing or abnormal as may be caused by other reasons. If failing to taking the appropriate measures, it may lead to improper operations that may result in serious accidents.	



<b>Precautions</b>	
Do not touch the power module when the PLC is under energized status or when the power source is disconnected. At this time, the power module might still present extremely high temperature that can cause a scorching injury.	
When connecting with the terminal board of the power module, the cable should be secured with the appropriately sized Ferrule. If the cable is loose, it may lead to burning or the failure of the power module.	
The online editing shall be allowed only after confirming that the extended PLC cycle duration will not result in any adverse impact or the system may not be able to read the input signal.	
After confirming that the I/O terminal is safe, you may transmit the required parameters to other terminals such as PLC setting, I/O table and I/O register data, etc. Otherwise, it may lead to unexpected actions if transmitting or modifying the aforesaid data before that.	

## Precautions for use

When using the M-Series PLC, please observe the precautions provided below.

### Using the power

- Please use the voltage specified in the Manual. Incorrect voltage will lead to false action or burning damage to the equipment.
- If the number of the module being connected exceeds the current rating of the power module, you may not be able to start the CPU module or other modules.
- Please use the designated power source and then supply the power according to the specified voltage and frequency rating. Special attention should also be given to the location subjected to unsteady power supply, as incorrect power supply may result in false action.
- Before starting any of the following operations, be sure to disconnect the PLC power; or it may lead to false action or electrocution injury.
  - (1) When installing or dismantling power module, I/O module, CPU module or any other type of module.
  - (2) When connecting cables or executing the system wiring.
  - (3) When connecting or disconnecting the connector.
- When using the power module, be sure to observe following precautions.
  - (1) The voltage applied at the equipment output point or the connected load shall not be higher than the rated specifications established for the power module.
  - (2) If it is required to put aside the power module for over 3 months, it shall be stored in a cool and dry location in order to maintain its function at normal status.
  - (3) If the power module is improperly installed, it will result in the accumulation of heat as to cause the aging or the damage of the component within. Therefore, it shall be properly connected and you are also required to use the standard installation method.

### Installation

- Do not install the PLC at the location near a high frequency noise interfering source.
- Confirm that the terminal board, the connector, the memory card, the peripheral communication wires and other buckle-mounted devices are latched in position. Improper latching will result in false action.
- After connecting to the adjacent module, the buckle at the top or the bottom must be securely locked (*i.e.*, properly latched). If failing to lock the buckle tightly, the module may not be able to achieve the intended function.

## Wiring

- Please follow the instructions provided in the Manual in order to execute the wiring operations correctly.
- Before connecting the power, please check the setting status of all wires and switches. Incorrect wiring may result in burning damage to the equipment.
- After checking the installation position, you may start installing the terminal board and the connector.
- During the wiring process, the label should be tagged on the module. If you tear off the label, foreign matters may get into the module as to cause a false action.
- To ensure normal heat dissipating function, please tear off the label after completing the wiring operations. If retaining the label, it may lead to false action.
- Please use an EU-standard terminal to execute the wiring operations. Do not connect the terminal with bare stranded wires. The aging or the breaking of wires may result in burning damage to the equipment.
- The voltage applied to the input module shall not be higher than the input voltage rating or it may result in burning damage to the equipment.
- The voltage or the load applied to the output module shall not be higher than the maximum switch capacity. The over-voltage or the overload may result in burning damage of the equipment.
- Do not drag or bend the cable excessively. Such action may cause the breaking of the cable.
- Do not place any objects on the cable or other type of wires or it may cause the breaking of the cable.
- Please set the grounding wire correctly for the power module and communication port to avoid communication error and equipment malfunction caused by noise interference.
- It is recommended to use M series dedicated AC power modules to supply power to MPLC related modules.
- It is recommended to use twisted-pair shielded cables for communication cables and ground them properly.

## Operating

- Before supplying power to the MPLC to start the operations, ensure that the setting of the data register is correct without any mistakes.
- Before executing any of the following tasks, confirm that it will not bring about any adverse impact on the system; otherwise, it may result in unexpected action.
  - (1) When changing the operating mode of the PLC (RUN Mode/STOP Mode).
  - (2) When executing compulsory enable/ compulsory disable for any of the data retained in the register.
  - (3) When changing the present value of any bit or setting that has been logged in the register.
- Do not attempt to dismantle, repair or modify any module; or it may result in false action, fire or electrocution.

- It is required to protect the PLC from falling or from excessive vibration or impact.
- If the I/O is located at the “ON” position, when switching the “RUN Mode” to the “STOP Mode,” the system will set the PLC output at the “OFF” position and then all output actions will be disabled. Please ensure that the external load will not generate hazardous factors during the aforesaid process.
- If the CPU module stops running due to catastrophic error, please set all of the output points on the output module at the “OFF” position. The output status will be retained after being set as the holding-type memory configuration parameters.
- If the status monitoring pages or the parameters are improperly set, it may result in unexpected action. Even though the status monitoring pages or the parameters are correct, it is also required to confirm that the controlled system will not be subject to adverse impact before starting.
- When applying maximum level of voltage or when the power supplied to the operating switch is interrupted suddenly during the Insulation Strength Test, it may result in the damage of the CPU module. In this case, please use the variable resistor to increase or reduce the voltage level gradually.
- Before conducting the Withstand Voltage Test or the Insulation Resistance Test, please separate the wire grounding terminal of the power module from the functional grounding terminal. Otherwise, it may result in burning damage to the equipment.

## **Precautions for the application environment**

- Please follow the instructions described in this Manual for carrying out the installation activities correctly.
- Do not operate the control system in any of the following locations:
  - (1) The location exposed to direct sunlight.
  - (2) The location with temperature or humidity exceeding the specified range.
  - (3) The location vulnerable to dewing effect due to abrupt temperature changes.
  - (4) The location exposed to corrosive or combustible gases.
  - (5) The location exposed to dust (especially iron chips) or smoke.
  - (6) The location exposed to water, oil or chemicals.
  - (7) The location vulnerable to impact or vibration.
- When installing the system in any of the following locations, appropriate and effective preventive measures should be taken:
  - (1) The location exposed to electrostatic or other type of noise.
  - (2) The location exposed to strong electromagnetic field.
  - (3) The location that may be exposed to radioactive pollution.
  - (4) The location near the power supply source.

# 1

## List of Expansion Modules

---

## List of Expansion Modules

Module Name		Specifications
Left Side Expansion Modules	Power Modules	MPA024-24 Input: 100~240VAC(50/60Hz) · output: 24VDC 1A(Shared CPU dedicated power supply and external Sensor power supply) · Max. Power Consumption 24W.
		MPA048-24 Input: 100~240VAC(50/60Hz) · output: 24VDC 2A(Shared CPU dedicated power supply and external Sensor power supply) · Max. Power Consumption 48W.
Right Side Expansion Modules	High Speed Communication Modules	MHCM25 1 port RS232 + 1 port RS485 communication module.
		MHCM55 2 ports RS485 communication module.
	DI Modules	M16X 16 points 24VDC digital input
	DO Modules	M16Y◇ 16 points relay or transistor output
	DIO Combo Modules	M1616XY◇ 16 points high-density 24VDC digital input · 16 point high-density transistor output · hybrid 40 pin I/O extension cable.
	AI Modules	M04AD 4 channels, 14-bit analog input module (-10V~0V~+10V or -20mA~0mA~+20mA...)
		M04ADR 4 channels, 18-bit analog input module (-10V~0V~+10V or -20mA~0mA~+20mA...)
	AO Modules	M04DA 4 channels, 14-bit analog output module (-10V~0V~+10 or 0mA~+20mA...)
		M04DAR 4 channels, 16-bit analog output module (-10V~0V~+10 or 0mA~+20mA...)
	AIO Combo Modules	M0202AH 4 channels, 14-bit analog input module (-10V~0V~+10V or -20mA~0mA~+20mA...) 4 channels, 14-bit analog output module (-10V~0V~+10 or 0mA~+20mA...)
	Temperature measurement Modules	M04TC 4 channels, TC temperature input module with (K, J, T, E, R, B, N, S, mV) · 0.1°C resolution.
		M04TCR 4 channels, TC temperature input module with (K, J, T, E, R, B, N, S, mV) · 0.1°C resolution.
	Temperature Measurement Combo Modules	M0202TH 2 channels, TC temperature input module with (K, J, T, E, R, B, N, S, mV) · 0.1°C resolution. 2 channels, RTD temperature input module with (Pt-100, Pt-1000, JPt-100, JPt-1000) · 0.1°C resolution.
	Load Cell Module	M02LC 2 channel, load cell measurement module with 24-bit resolution · Conversion precision ±0.5% ( 25° C±5° C)
		M02LCR 2 channel, load cell measurement module with 24-bit resolution · Conversion precision ±0.01% ( 25° C±5° C)
	End module	MRE End module · This must be connected to the rightmost side of the CPU module or the entire string of modules.
Remote Expansion Modules	Communication Connector	MCOMN Remote I/O Coupler (Modbus/ TCP)

Peripheral and Accessory	High Density DIO Cable	MFW40I-50	High-density I/O extension cable · 40 pin Socket, 28AWG I/O cable · length 50cm
	External terminal module	MFT40T	40 pin External terminal module
	European terminal Block	MFT18C	18 Pin European terminal Block
		MFT06C	6 Pin European terminal Block
MFT04C		4 Pin European terminal Block	

- ◇: R-Relay output (CPU module and combo high-density DIO does not have); T-Transistor SINK(NPN) output; J-Transistor SOURCE(PNP) output.
- Right side expansion modules are divided into standard type and high-speed type. High-speed type can only accept up to 6 units. And it must be installed in the first 6 positions on the right side of the CPU module.



# 2

## Expansion of M-Series PLC

- 2-1    I/O Expansion Specifications .....2
- 2-2    Digital I/O Expansion and I/O Numbering.....3
- 2-3    Analog I/O Expansion and I/O Numbering.....5
- 2-4    Expansion Module Configuration Settings.....8
- 2-5    Expansion Module Firmware Update ..... 10

The expansion of M-series PLC means when the resources provided by the M-series CPU module are insufficient or the interface not provided by the CPU module. The number of I/O or interface types can be expanded by adding expansion modules. The expansion of M series PLC can be divided into two categories: I/O expansion and communication port expansion.

## 2-1 I/O Expansion Specifications

The expansion of M Series PLC I/O consists of Digital I/O (DI/O, which status is represented by a single bit) and the Numeric I/O (NI/O, which status is represented by a 16-bit Word). Either the DI/O or the NI/O expansion is realized through expansion modules cascaded thru the usage of the "I/O Output Expansion Connector" located at the right side of M Series PLC or expansion module.

The I/O points of M-Series PLC are limited to 2048 points of DI/O (1024 points each for DI and DO), 512 words of NI/O (256 points each for NI and NO). Hardware limitations: ①. A maximum number of 64 modules can be used in the expansion. ②The number of expansion modules that can be connected in series in each segment of the M-series PLC is limited to 16 units, and expansion modules or branch modules must be used for extension between each segment.

### Caution

1. If the I/O points of the application system exceed one of the limitations (1024 DI, 1024 DO, 256 NI, 256 NO), while startup the M-Series PLC will treat this as an illegal I/O configuration, which in return will flag as an error situation by turn on the "ERR" LED. The corresponding error code will also be indicated in the CPU status register (DR35361).
2. The maximum number of expansion modules of M-Series PLC is 64. Beyond this numbers will be treated as an invalid I/O configuration and the CPU Module will stop its operation, which in return will flag as an error situation by turn on the "ERR" LED. The corresponding error code will also be indicated in the CPU status register (DR35361).
3. The number of expansion modules that can be connected in series in each segment of the M-series PLC is limited to 16 units, and expansion modules or branch modules must be used for extension between each segment.

### Warning


1. The maximum length of the I/O expansion cable for M-Series PLC is @5 meters. Cables longer than that will cause incorrect I/O operation because of excess signal delay in hardware or noise pickup, resulting in damage to equipment or posing hazard to operating personnel. Since this kind of situation cannot be detected by the CPU Module, users are advised to take extra cautions and necessary measures.

## 2-2 Digital I/O Expansion and I/O Numbering

Digital I/O means I/O with the discrete type status, including digital input (with initial X in DI numbering) and digital output (with initial with Y in DO numbering). The DI and DO of M Series PLC can both be expanded up to 1024 points (numbered as X0~X1023 and Y0~Y1023, each with 1024 points).


The status of input contacts (X0~X1023) of PLC come from the input signal connected to the digital input terminal block on CPU Module or expansion module; while the status appears at digital output terminal block of CPU Module and expansion module reflects the digital output relay (Y0~Y1023) status inside PLC.

On M Series CPU Module, at the position right of the external terminal connector, there have labels indicate the corresponding signal name. They label each terminal with numbers representing the corresponding digital input contact Xn and digital output relay Yn. In the example of the CPU module in ME3C6-1616T, The labels of the digital input contacts on the left side of the external terminal connector are X0~15, S/S and the labels of the digital input contacts on the right side of the external terminal connector are Y0~Y15, COM. Users only need to locate the printed label for each terminal to find out its I/O number. The LED status display region also indicates the ON/OFF status for all DI(X0~X15) and DO(Y0~Y15) on the main unit. Users can easily find each terminal with its I/O number and LED status indication.

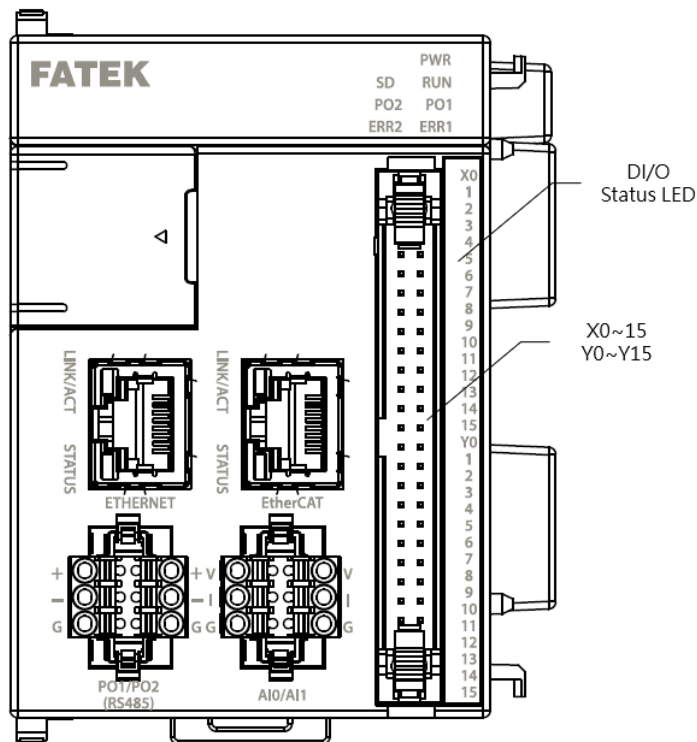

CPU Module Digital I/O Number

While the various expansion modules other than the CPU module have the same printed labels on the input/output terminals as the CPU module do, these labels are only relative I/O numbers, different from the absolute I/O numbers on CPU module. The number of a terminal only represents its order on the expansion module. For example, the first contact is 1, the second is 2, etc. All numbers on the expansion module begin with 1. The actual number of digital input contact or the output relay, however, is determined by summing the numbers on all previous expansion modules and the CPU module. See the following figure and its calculation.

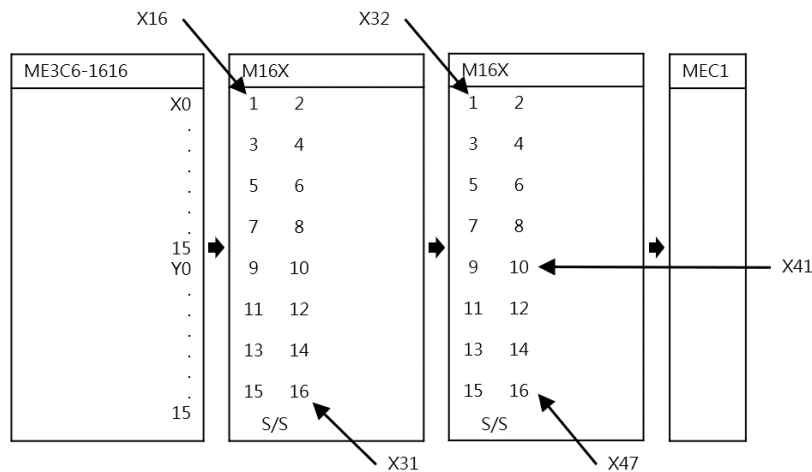

Expansion Module Digital I/O Number

As shown in the above figure, 10 output points on the 2nd expansion module M16X. Because the top X numbers of the previous two units are 15 and 16, respectively, the number of input contact X41 on second expansion unit should be:

$$X( 15+16+10 ) = X41$$

## 2-3 Analog I/O Expansion and I/O Numbering

The numeric I/O in M-Series PLC treat 16 single-bit data as one 16-bit numeric data (Word) ranging from the 0~65535. Since all numeric data of M-Series PLC are stored in the register inside PLC (16-bit width), therefore numeric I/O is also called register I/O. The Input Register (IR) has 256 Word (R34768 ~ R35023) for inputs from external numeric input (NI) module, and the Output Register (OR) also has 256 Word (R35024 ~ R35279) for outputs to external numeric output (NO) module.


Analog Input Modules, Temperature Modules, and Load Cell Modules are of Numeric Input (NI) Modules which use Input Register (IR) to convey the status. Analog Output Modules are of Numeric output (NO) modules which output is directly from the Output Register (OR). The Analog Input, Temperature Input, and Analog Output is of analog voltage or current. Either the magnitude of voltage or current is represented by the 16-bit value of the corresponding register. The corresponding current/voltage signal of any IR or OR on the NI/O module is named as a Channel (CH). The channels on the NI module are called numeric input channels (NI channels) and those on NO module numeric output channels (NO channels). The number of IR/OR used by NI and NO channels on each module varies depending on the module type or working mode. The following table lists the numbers of IR and OR used by NI and NO channels on each NI/O module:

**Analog I/O Expansion and I/O Numbering**

Module Name	NI Channel Label	NO Channel Label	Number of IR occupied (Word)	Number of OR occupied (Word)	Note
M04AD	CH0		1		The voltage and current inputs can't be used in the same channel at the same time. (Choose only one from V or I)
	CH1		1		
	CH2		1		
	CH3		1		
M04ADR	CH0		2		The voltage and current inputs can't be used in the same channel at the same time. (Choose only one from V or I)
	CH1		2		
	CH2		2		
	CH3		2		
M04DA		CH0		1	The voltage and current inputs can't be used in the same channel at the same time. (Choose only one from V or I)
		CH1		1	
		CH2		1	
		CH3		1	
M04DAR		CH0		2	The voltage and current inputs can't be used in the same channel at the same time. (Choose only one from V or I)
		CH1		2	
		CH2		2	
		CH3		2	
M0202AH	CH0		1		The voltage and current inputs can't be used in the same channel at the same time. (Choose only one from V or I)
	CH1		1		
		CH0		1	The voltage and current inputs can't be used in the same channel at the same time. (Choose only one from V or I)
		CH1		1	

Module Name	NI Channel Label	NO Channel Label	Number of IR occupied (Word)	Number of OR occupied (Word)	Note
M04TC	TC0		2		
	TC1		2		
	TC2		2		
	TC3		2		
M04TCR	TC0		2		
	TC1		2		
	TC2		2		
	TC3		2		
M0202TH	TC0		@2		
	TC1		@2		
	RTD0		@2		
	RTD1		@2		
M02LC	CH0		4		
	CH1		4		
M02LCR	CH0		4		

The corresponding IR or OR number calculation of the NI/O module starts from the first expansion module. The first NI channel corresponds to the first IR register (R34768). Adding R34768 with the number of IR used by the first NI channel gives the IR number of the second NI channel. Adding the IR number of the second NI channel with the number of IR used by the second NI channel gives the IR number of the third NI channel. All other numbers can be obtained accordingly. Similarly, the first NO channel corresponds to the first OR (R35024). Adding R35024 with the number of OR used by the first NO channel gives the OR number of the second NO channel. (In the cumulative calculation of NI channels, care only for NI channels and disregard DI/O and NI. Similarly, in the case of NO channels, disregard DI/O and NI channels.) The following figure helps users find out the relation between NI/O channels and PLC's IR and OR.

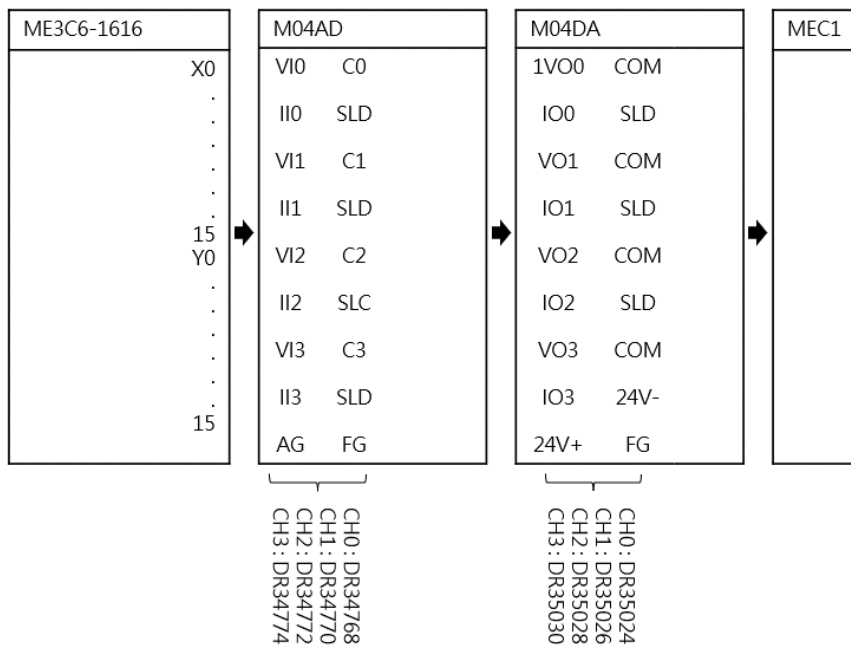


Analog expansion module IR, OR number

The M-series PLC will automatically detect the expansion module when it is turned on, and then automatically set the IR and OR, the user does not need to make any settings.

## 2-4 Expansion Module Configuration Settings

The Expansion Module Configuration of the M-Series PLC is implemented in the 【UperLogic】 → 【Project】 → 【Device View】 → 【Expansion Module】 → 【Configuration】. The Device View is designed to concurrently display the outline dimensions, Module Information (Module ID and Firmware Version), Power Consumption and Module Resources (occupying the register) of different expansion modules, as indicated below.

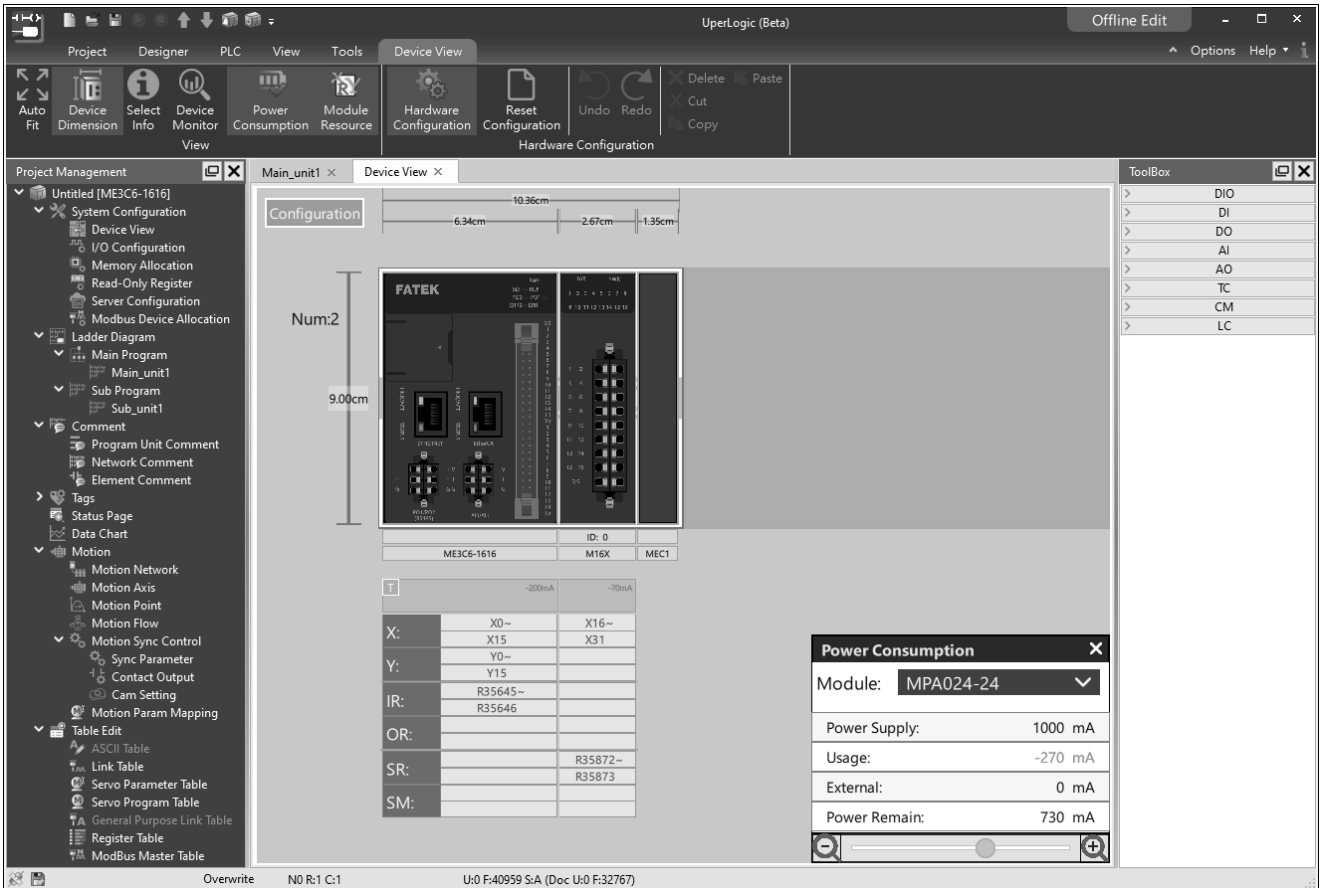

Device View




When being installed in different types of expansion modules, the Expansion Module Configuration of the M-Series PLC will display different types of configuration pages, as indicated below.

The Expansion Module Configuration of the M-Series PLC is saved in the expansion module directly. Even if the CPU module is damaged, such expansion module can still operate independently to show the corresponding processing action. In this way, it not only improves the system stability but also intensifies the system security.

**⚠ Caution**


The expansion module configuration of M-Series PLC is saved in the project and the expansion module instead of being saved in the CPU module. Before replacing the expansion module, you need to set the expansion module configuration in the expansion module or save the project on the SD Card and then the CPU module will write the expansion module configuration being saved to the corresponding expansion module.

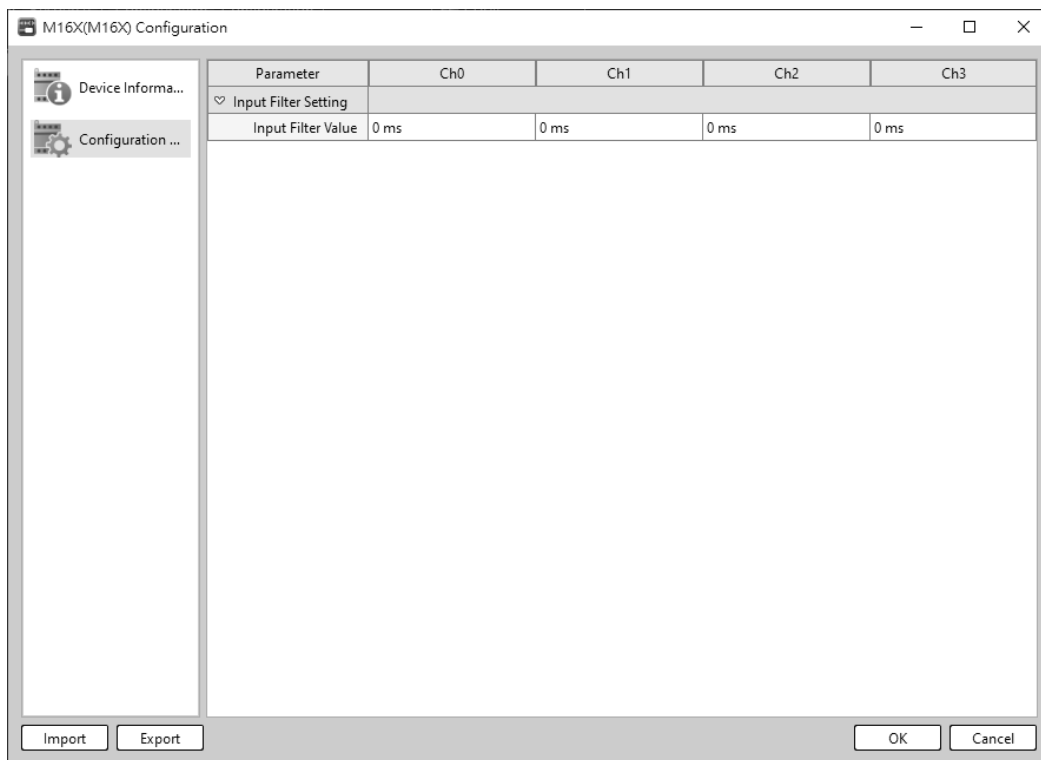

**Configuration**


## 2-5 Expansion Module Firmware Update

The expansion module firmware of the M-Series PLC is updated in the 【UperLogic】 → 【Project】 → 【Device View】 → 【Expansion Module】 → 【Device information】 profile. In this regard, the equipment information displays the module name, module ID, module description, module firmware version, module hardware version and module serial number of the expansion module, as indicated below:

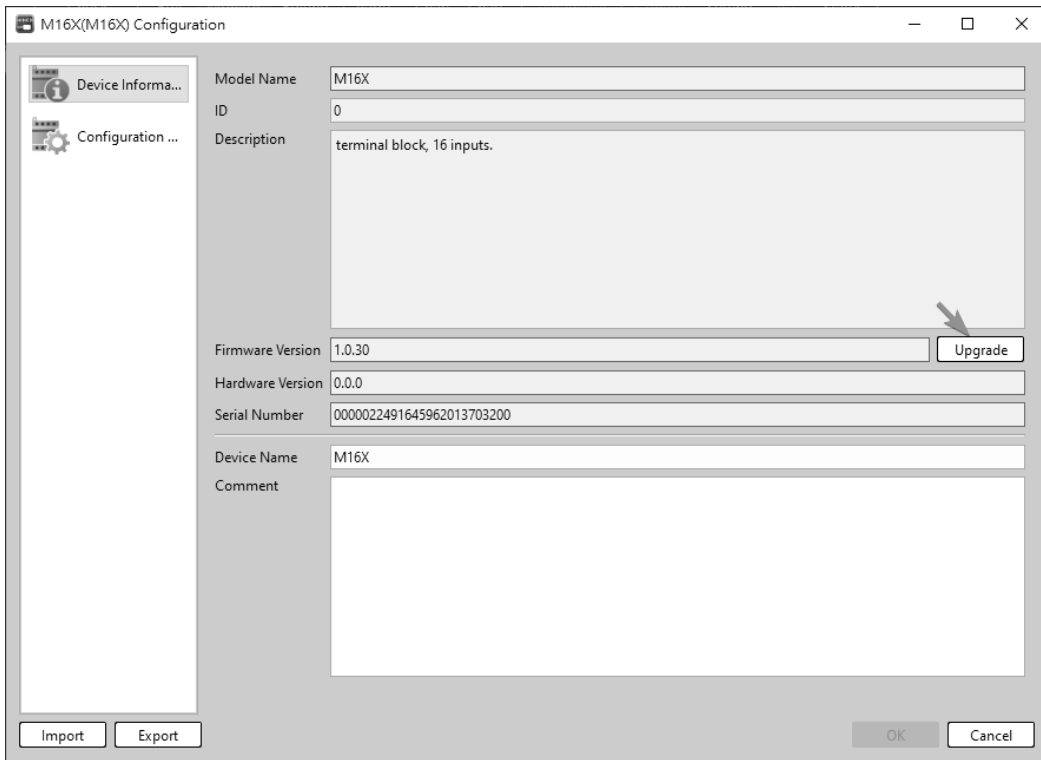

Device Information

The expansion module firmware update of M-series PLC can be updated individually or multiple expansion modules can be updated at the same time.

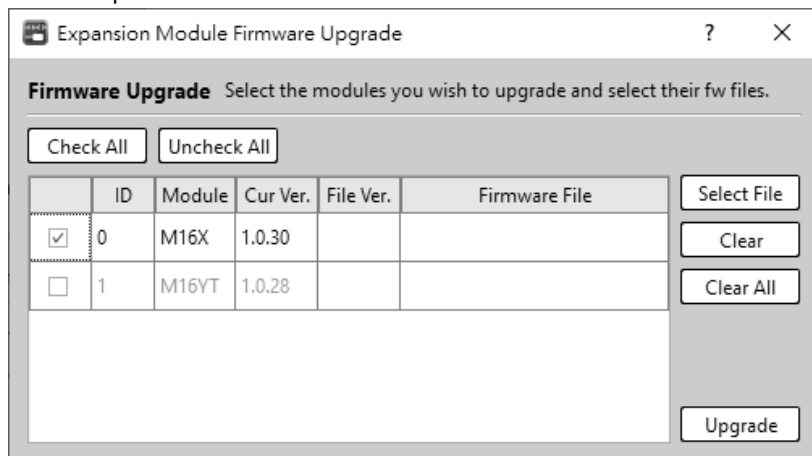

Firmware update

# 3

## Installation and Wiring

3-1    Environmental Specifications .....2  
3-2    Installation Precautions .....3

**⚠ Danger**

1. Turn off all power during installation of M Series PLC or related equipment to prevent electric shock or damage to equipment.
2. During installation, never remove the dust cover sheet that were surrounded the PLC before wiring is completed to avoid complications such as fire hazards, breakdown, or malfunction caused by drill dust or wire shreds falling inside PLC.
3. Upon completion of installation and wiring, remember to remove the dust cover sheet to avoid fire, breakdown or malfunction, caused by overheating.

### 3-1 Environmental Specifications

---

**⚠ Caution**

1. Environmental specifications of M Series PLC cannot exceed those listed in this manual. In addition, do not operate this equipment in environments with oil smoke, conductive dust, high temperatures, high humidity, corrosion gases, inflammable gases, rain or condensation, and high vibrations and shock.
2. This product has to be housed appropriately whether it's used in a system or standalone. The choice and installation of housing must comply with local national standards.

#### Environmental Specifications Table

Item	Specification	note
Operating Ambient Temperature	0~55°C	Permanent Installation
Storage Temperature	-25 ~ +70°C	
Relative Humidity (non-condensing, RH-2)	5 ~ 95%	
Pollution Level	Degree II	
Altitude	≤2000m	
Vibration Resistance (Fixed by DIN RAIL)	5~8.4Hz Amplitude: 3.5 8.4~150Hz Constant acceleration:19.6m/s <sup>2</sup> (2G) 10G, 10 times each along the 3 axes (IEC61131-2 Standard)	
Shockproof	10G, 3 times each along the 3 axes	
Noise Suppression	1500Vp-p, Width: 1us	
Withstand Voltage	1500 VAC 1 minute (Between power terminals and input/output terminals, and between all external terminals and the housing)	

**⚠ Warning**

The listed environmental specifications are for M Series PLC under normal operation. Any operation in environment not conform to above conditions should be consulted with FATEK.

## 3-2 Installation Precautions

To avoid interference, the PLC should be installed to keep from noise sources such as high-voltage or high-current lines and high-power switches. Other precautions are:

### 3-2-1 Placement of PLC


Fixation of M-Series PLC, which can be fixed by DIN RAIL, should place vertically and start from the CPU module on the left to the expansion module on the right. A typical figure of placement is shown below:

@Advanced Module


Placement of M series PLC installation

### 3-2-2 Ventilation Space for Installation

The heat in M-Series PLC is ventilated via air circulation. There should reserve more than 20mm space, both below and above PLC, and with vertical installation, for ventilation. as shown in the figure below:

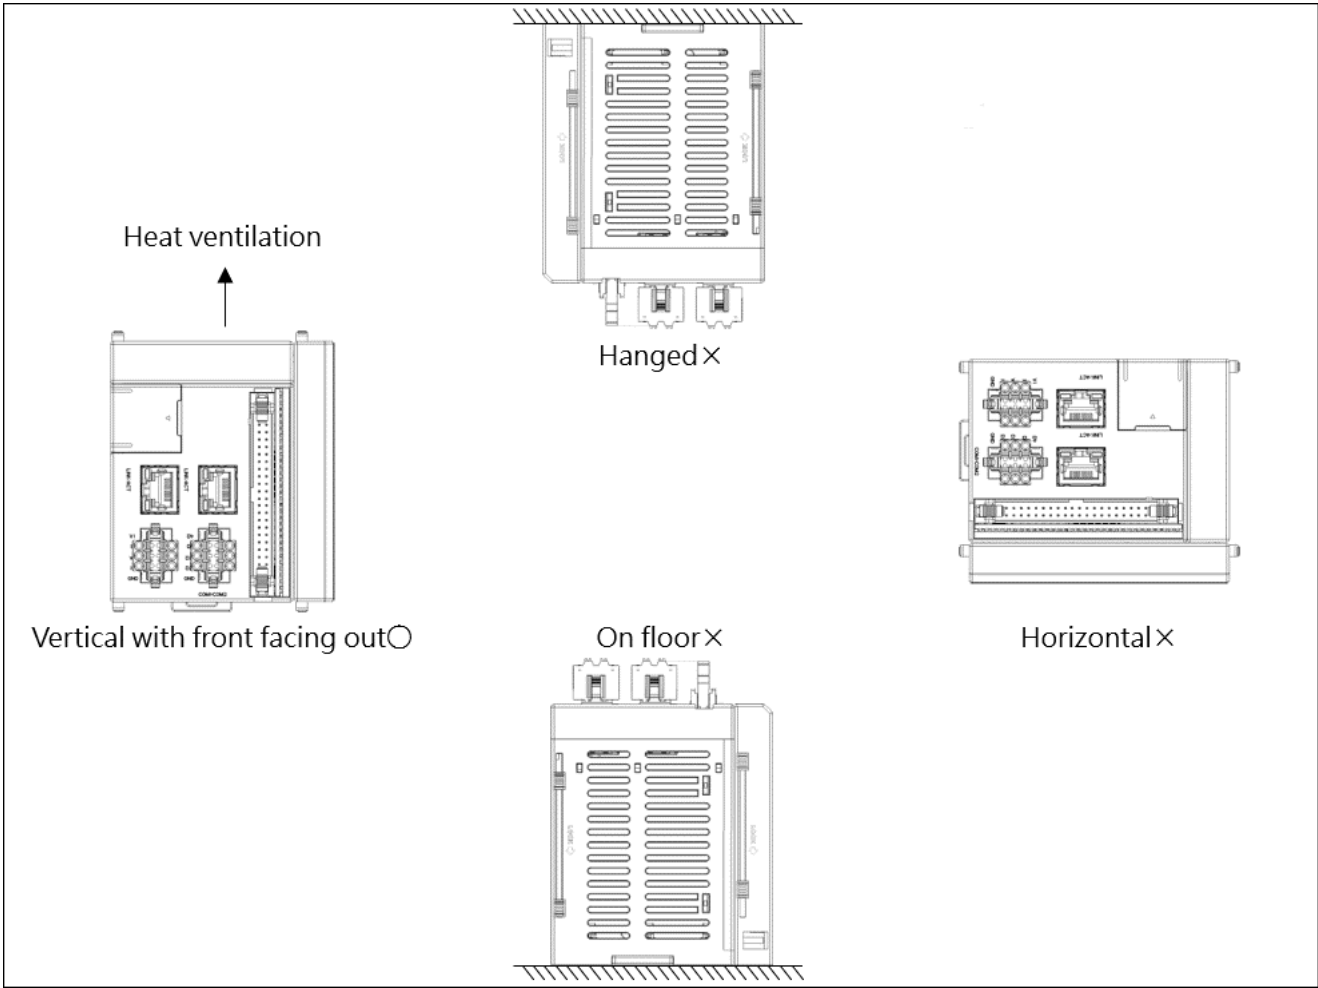


M Series PLC installation direction

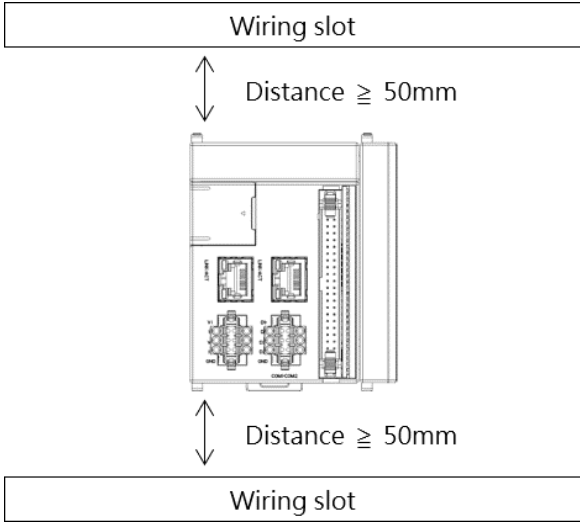

M Series PLC ventilation space

### 3-2-3 Fixation by DIN RAIL


In an environment with slight vibration (less than 0.5G), this is the most convenient way of fixation and is easy for maintenance. Please use DIN EN50022 DIN RAIL, as shown in the figure below.

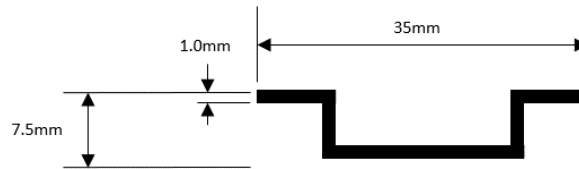

DIN RAIL SIZE

#### Mount


Hold PLC facing its front, press it down with a 15-degree tilt onto the DIN RAIL. Swing it down until the upper edge of DIN RAIL groove on PLC back touches the upper tab of DIN RAIL. Then use this locked-in point as a pivot to press the PLC forward on the bottom and lock it in position. The procedure is illustrated below.

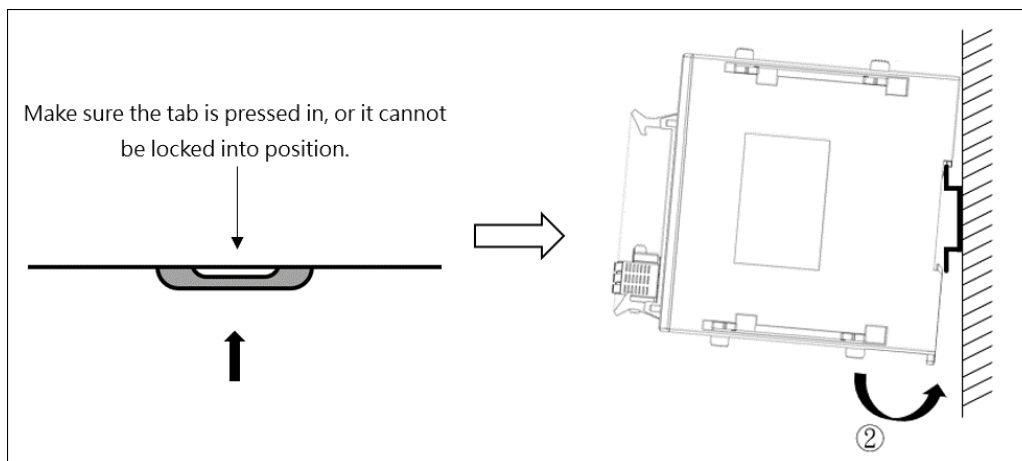

Mount DIN RAIL


#### Dismount

Use a long screwdriver to reach in the hole on the DIN RAIL tab. Pull out the tab to "pulled out" position to remove PLC, as shown in the figure below.

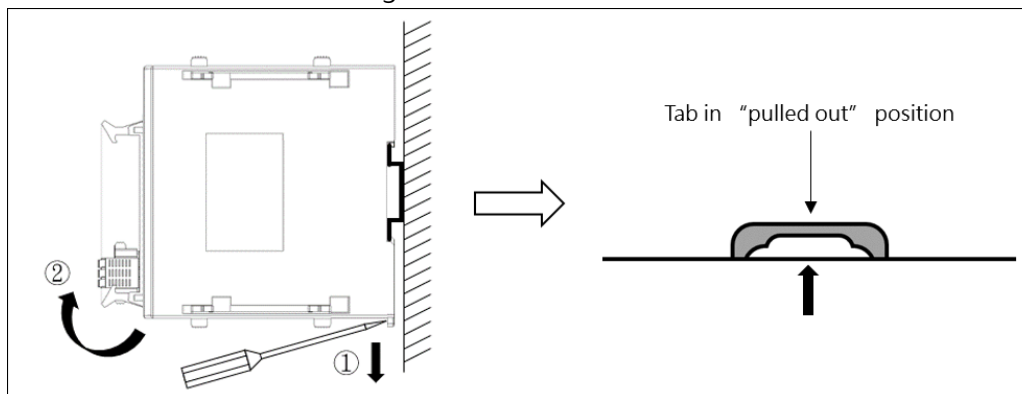

Dismount DIN RAIL


When used in the vibration source, it is recommended that a DIN RAIL damper should be installed on the leftmost and rightmost sides of the M-Series PLC, respectively. In this way, it can stabilize all of the modules, including the CPU module and expansion module per the leftmost and rightmost DIN RAIL dampers indicated in the figure below.

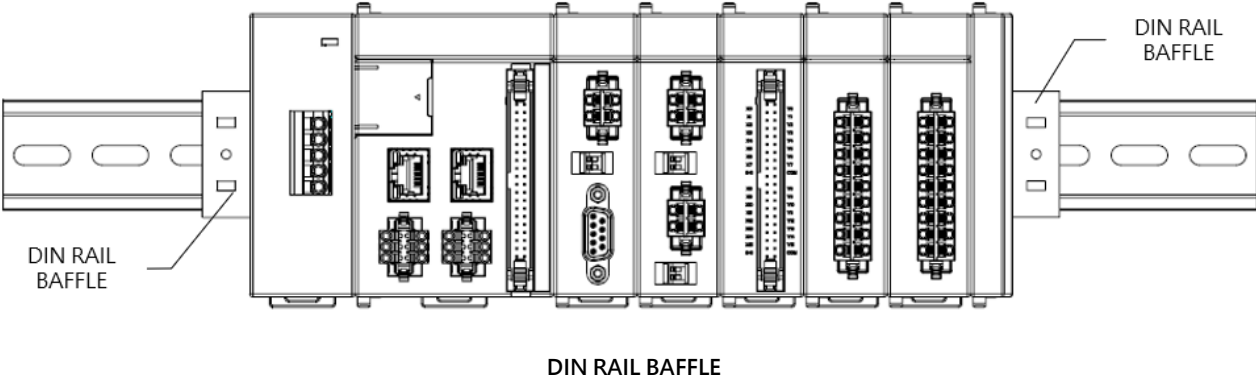




### 3-2-4 Installation of Expansion Modules

Expansion module installation method: after aligning the expansion module with the CPU Module slot or with the slot of the previous expansion module, insert the module and then push the latch-hook straight down to the base, as indicated in the figure below.

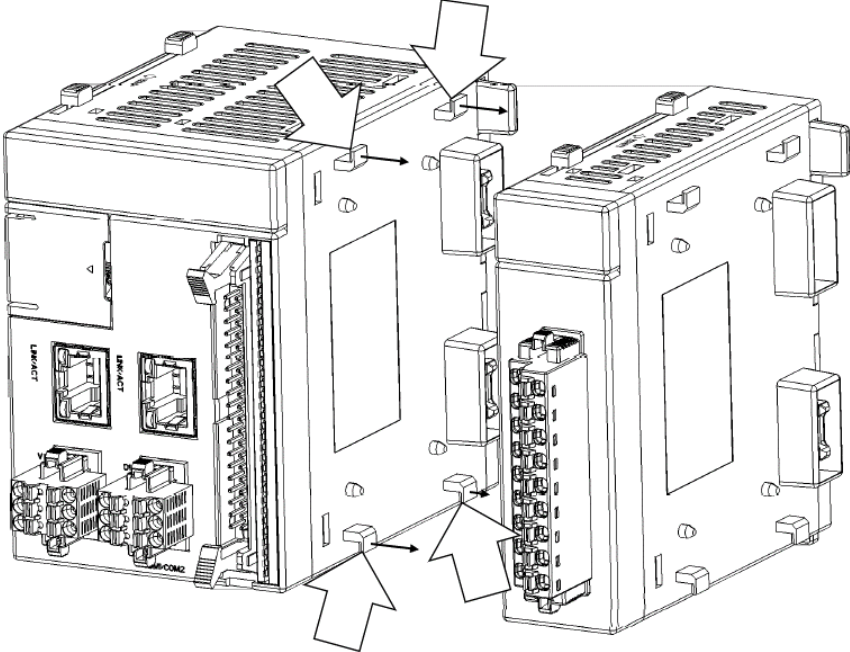


Install expansion module

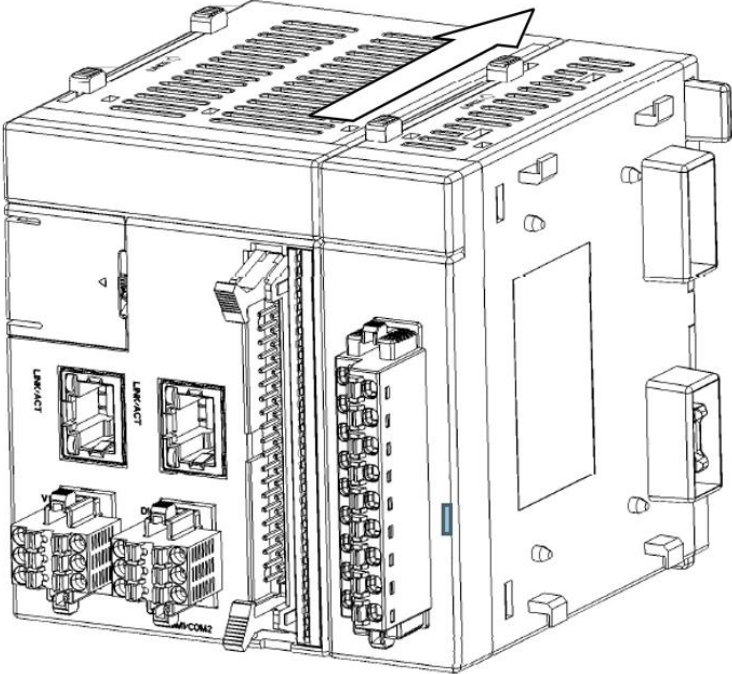

Install the expansion module buckle


### 3-2-5 Mount European Terminal Block

- EU-standard terminal block installation method: align the EU-standard terminal block with the slot of the expansion module and then push it straight downward, as indicated in the figure below.

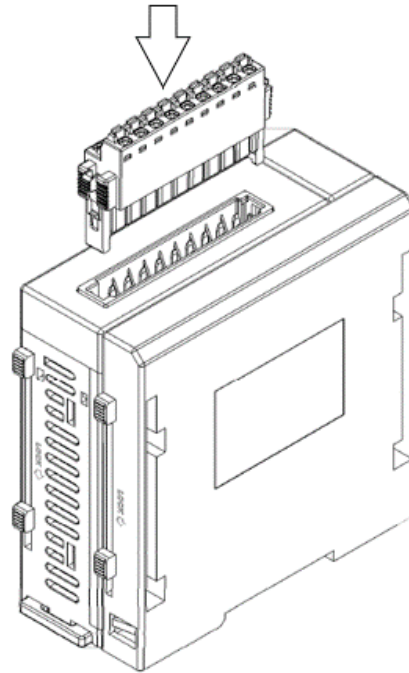

Mount European terminal Block


- EU-standard terminal block removing method: push the fastener on both ends of the EU-standard terminal block downward and then lift both of them upward and you can take out the terminal, as indicated in the figure below.

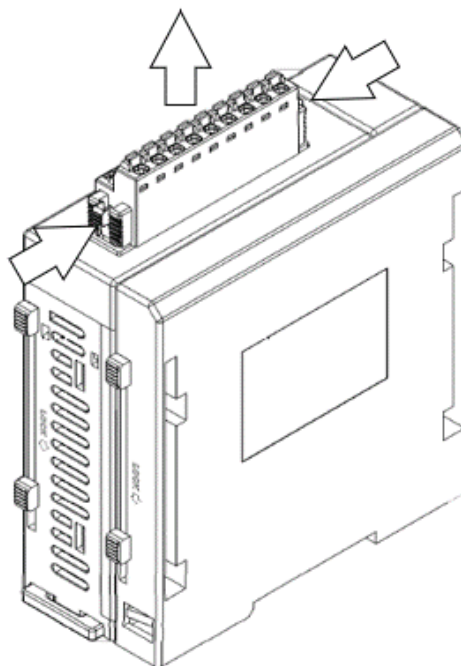

Dismount European terminal Block

### 3-2-6 External terminal module and European terminal block wiring


1. During the wiring of M-Series PLC, please follow local national standards or regulations for installation.
2. The suitable I/O wiring diameter for M-series PLC is AWG28~AWG22 · Please choose the wires with proper wire gauge for I/O wiring according to the current loads.
3. Shorter wires are preferred. It is advised that the length of I/O wiring does not exceed 100m (@10m for high-speed input).
4. Input wiring should be separated from output or power wiring (at least 30~50mm apart). In case separation is not possible, adopt vertical crossing, no parallel wiring is allowed.
5. The specifications of the crimp sleeve for the External terminal module and the European terminal are as follows:

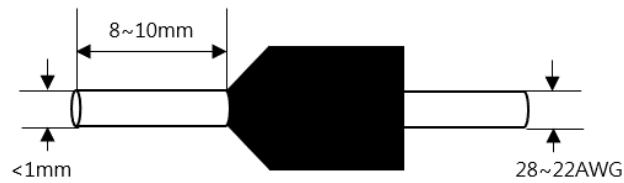

Crimp Sleeve Specifications


### 3-2-7 External terminal module installation

- First fix the upper clip, and then install the External terminal module into the DIN RAIL in the direction of the arrow.

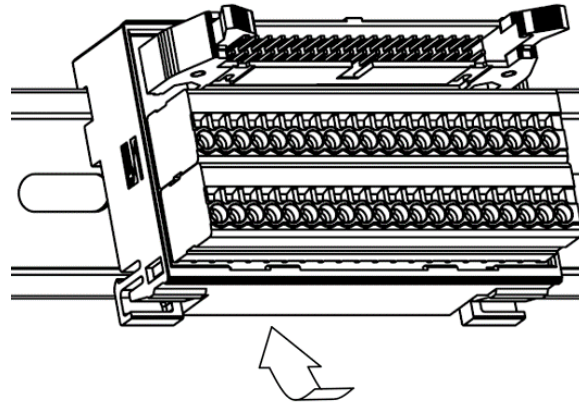

Install External terminal module

- Please push up in the direction of the No. 1 arrow first, and then pull out in the direction of the No. 2 arrow to disassemble.

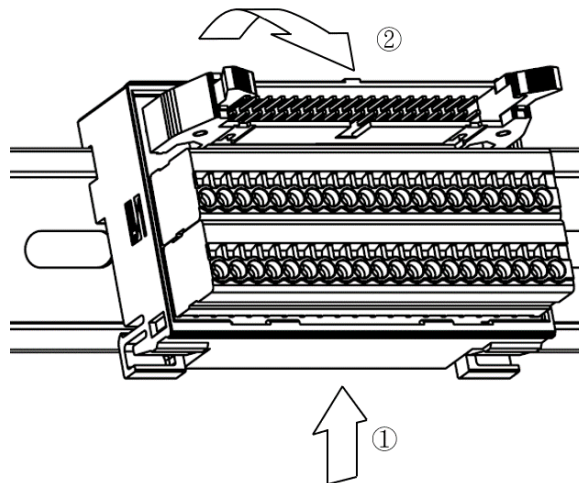

Disassemble External terminal module


# 4

## Power Wiring, Power Consumption Calculation, and Power Sequence Requirements

---

<u>4-1</u>	<u>Specifications and Wiring of AC Power Module</u> .....	2
<u>4-2</u>	<u>Maximum Current Consumption of Expansion Module</u> .....	5
<u>4-3</u>	<u>Calculation Example of Power Capacity</u> .....	7
<u>4-4</u>	<u>Requirement of Power Sequence in CPU Module &amp; Expansion Module</u> .....	8

There are two kinds of power for M-series PLC power module. The 1st one is CPU dedicated power supply. The 2nd one is external Sensor power supply. The CPU module and the extension module are also divided in 2 parts of circuits. The 1st one is 24VDC (Output Circuit), the 2nd one is 24VDC (Input Circuit). The 24VDC (Output Circuit) is supplied by the CPU dedicated power supply of the M series PLC power module. The 24VDC (Output Circuit) can be supplied by an external power supply or by the external Sensor power supply of the M series PLC power module. Neither the CPU module nor the extension module has a power supply, and both must consume the power of the power module to supply power.

 Caution	
In industrial environments, main power may irregularly experience a surge current or high voltage pulse caused by the start or shut down of high-power equipment. Users are advised to take necessary measures (for example, the use of isolation transformer or other MOV suppression devices) for the protection of PLC and its peripherals.	

## 4-1 Specifications and Wiring of Power Module

**Power Module Specification Table**


Specification		Model	MPA024-24	MPA048-24
Input	Input Voltage		100~240VAC	100~240VAC
	Input Frequency		50/60Hz	50/60Hz
	Max. Input Current		1A max.	1A max.
	Inrush Current (Cold Start)		22A/115Vac (44A/230Vac)	22A/115Vac (44A/230Vac)
	Withstand voltage		3,000 VAC (Primary-secondary), 1,500 VAC (Primary-PE), 500 VAC (Secondary-PE)	3,000 VAC (Primary-secondary), 1,500 VAC (Primary-PE), 500 VAC (Secondary-PE)
	Insulation resistance		>100MΩ/500VDC	>100MΩ/500VDC
	Fuse Spec.		2A	2A
	Hold-up time		>15ms/ 115VAC · >60ms/ 220VAC	>15ms/ 115VAC · >60ms/ 220VAC
	Isolation Type		Transformer/ Photocoupler Isolation · 1500VAC/1 minute	Transformer/ Photocoupler Isolation · 1500VAC/1 minute
	Operation indication		LED (Green)	LED (Green)
Output	Rated output power		24W (Shared CPU dedicated power supply and external Sensor power supply)	48W (Shared CPU dedicated power supply and external Sensor power supply)
	Rated output current		1A (Shared CPU dedicated power supply and external Sensor power supply)	2A (Shared CPU dedicated power supply and external Sensor power supply)
	Output voltage range		24VDC±1%	24VDC±1%
	Conversion efficiency		86%/110VAC · 87%/220VAC	86%/110VAC · 87%/220VAC
Protection	Overvoltage		Latching overvoltage protection, re-power	Latching overvoltage protection, re-power

## Chapter 4 Power Wiring, Power Consumption Calculation, and Power Sequence Requirements

	protection	on to recover 34V~36V	on to recover 34V~36V
	Overcurrent protection	Method: Foldback overload protection, automatically recover when overload is removed 101%~133% rated output power	Method: Foldback overload protection, automatically recover when overload is removed 101%~133% rated output power
Environmental Specifications	Operating Ambient Temperature	0°C~55°C	0°C~55°C
	Relative Humidity	20 ~ 90% (non-condensing)	20 ~ 90% (non-condensing)
	Storage Temperature	-25 ~ +70°C	-25 ~ +70°C
Certifications		CE	CE
External dimensions		90mmX33.7mmX90mm	90mmX33.7mmX90mm


**⚠ Caution**

The schematic diagram of power module is shown below. Also be cautious about the following:

1. Please follow the wiring schemes regulated by local national standards to use single-pole switch ( break hot wire “L” ), or double-pole switch ( break both “L” and “N” ), to turn on or off the AC input power.
2. In wiring, hot wire “L” must be connected to the L terminal on unit, while the ground line “N” connected to the N terminal. Please use wires with diameters  $1\text{mm}^2 \sim 2\text{mm}^2$ .
3. All  terminals on CPU module or Power module have to be connected to the EG (Earth Ground) terminal of main power system as shown in the figure below, with wire diameters larger than  $2\text{mm}^2$ .

**⚠ Warning**

Output of 24VDC power for input circuit cannot be connected in parallel with other powers, in which the conflict between two sets of power will decrease their lifetime or cause immediate damage. This will induce unexpected malfunction of PLC and cause serious or even deadly damage to people or equipment.

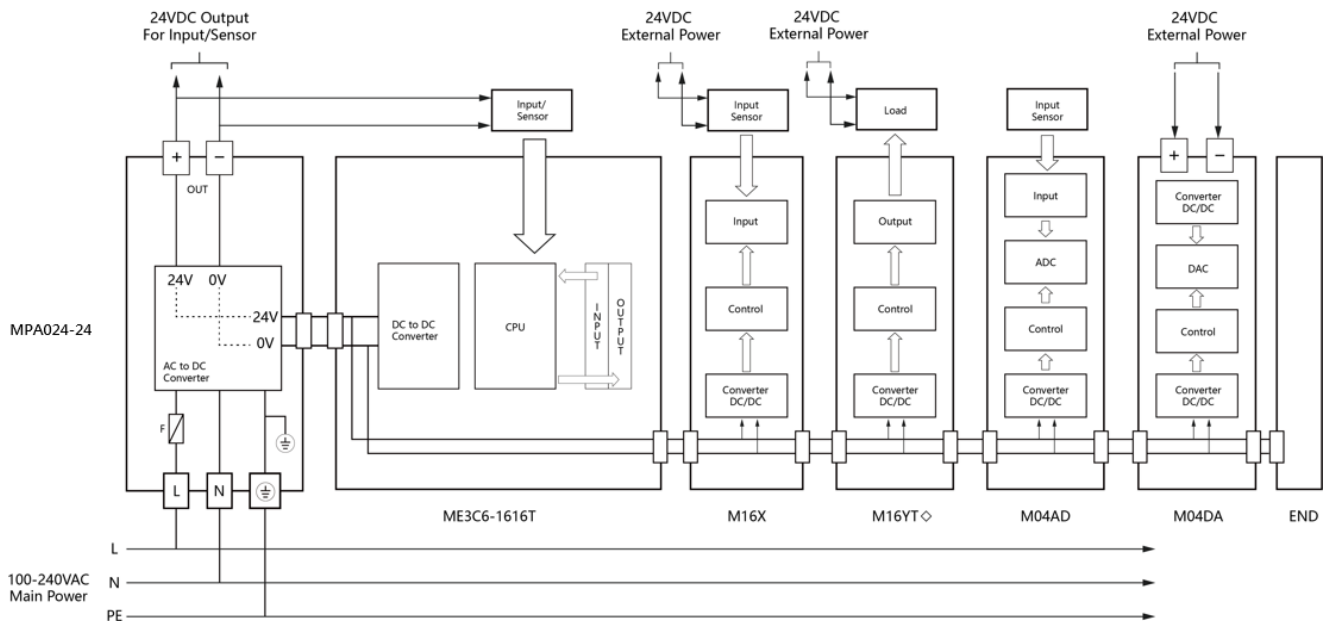


PLC System Wiring



## 4-2 Maximum Current Consumption of Expansion Module

The CPU Module is powered by M-Series PLC Power Module instead of its own power supplier. The table below shows the Maximum Current Consumption of each Expansion Module.

 Warning	
Any output of M series PLC power module, the total amount of current cannot exceed the value listed in the above table. Any violation will cause a voltage drop by overloading the power supply, or intermittent powered with the supply in protection mode, either of which will result in unexpected action of PLC and cause harm to people or damage to equipment.	

**Maximum Current Consumption of Expansion Module Table**

Model		Current	24VDC (Output Circuit)	24VDC (Input Circuit)
Left Side Expansion Modules	Power Modules	MPA024-24	-	-
		MPA048-24	-	-
CPU Modules	Basic CPU Modules	MA1N1-1616◇	150mA	DI: 7.5mA/ point DO: Max.0.1A/ point
		MA1N2-1616◇	150mA	DI: 7.5mA/ point DO: Max.0.1A/ point
		MA1N3-1616◇	150mA	DI: 7.5mA/ point DO: Max.0.1A/ point
		MA1I4-1616◇	150mA	DI: 7.5mA/ point DO: Max.0.1A/ point
		MA1M3-1616◇	150mA	DI: 7.5mA/ point DO: Max.0.1A/ point
		MA2M3-1616◇	150mA	DI: 7.5mA/ point DO: Max.0.1A/ point
	Basic Motion Control CPU Module	MA3M3-1616◇	150mA	DI: 7.5mA/ point DO: Max.0.1A/ point
		MS1C1-1616◇	200mA	DI: 7.5mA/ point DO: Max.0.1A/ point
		MS1C2-1616◇	200mA	DI: 7.5mA/ point DO: Max.0.1A/ point
		MS2C4-1616◇	200mA	DI: 7.5mA/ point DO: Max.0.1A/ point
		MS2C5-1616◇	200mA	DI: 7.5mA/ point DO: Max.0.1A/ point
	Advanced Motion Control CPU Module	MS3C6-1616◇	200mA	DI: 7.5mA/ point DO: Max.0.1A/ point
		ME1C1-1616◇	200mA	DI: 7.5mA/ point DO: Max.0.1A/ point

Chapter 4 Power Wiring, Power Consumption Calculation, and Power Sequence Requirements

		ME2C3-1616◇	200mA	DI: 7.5mA/ point DO: Max.0.1A/ point
		ME2C4-1616◇	200mA	DI: 7.5mA/ point DO: Max.0.1A/ point
		ME2C5-1616◇	200mA	DI: 7.5mA/ point DO: Max.0.1A/ point
		ME3C6-1616◇	200mA	DI: 7.5mA/ point DO: Max.0.1A/ point
Right Side Expansion Modules	High-Speed Communication Modules	MHCM25	30mA	-
		MHCM55	35mA	-
	DI Modules	M16X	70mA	7.5mA/ Point
	DO Modules	M16YT	150mA	Max.0.5A/ Point
		M16YJ	163mA	Max.0.5A/ Point
		M16YR	90mA	Max.2A/ Point
	DIO Combo Modules	M1616XYT	202mA	X:7.5mA Y:0.5A/ Point
		M1616XYJ	202mA	X:7.5mA Y:0.5A/ Point
	AI Modules	M04AD	78.2mA	-
		M04ADR	78.2mA	-
	AO Modules	M04DA	14.2mA	107mA
		M04DAR	14.2mA	107mA
	AIO Combo Modules	M0202AH	22.58mA	39.85mA
	Temperature measurement Modules	M04TC	30.7mA	-
		M04TCR	30.7mA	-
	Temperature Measurement Combo Modules	M0202TH	@	-
Load Cell Modules	M02LC	40.64mA	-	
	M02LCR	56.1mA	-	
End Modules	MRE	-	-	
Remote Side Expansion Modules	Communication Connector	MCOMN	@	

## 4-3 Calculation Example of Power Capacity

Power module selection is depending on the sum of current consumption of all modules. Therefore, user must know the current consumption of each module. Please refer to the maximum current consumption of expansion module table, which has the maximum current consumption of each expansion module. User must consider the match between power and expansion modules cannot cause output power of any one group of overload use.

Example 1: The below diagram is a System Modules, try to calculate the power supply used of the system.


Type	Power Module	CPU Module	Expansion Module	Expansion Module	Expansion Module	Expansion Module	END Module	Extra Capacity
Module Name	MPA024-24	MS2C2-1616	M16X	M16YT	M04AD	M04TC	MRE	
Internal 24V Circuit	+1000mA	-200mA	-70mA	-150mA	-78.2mA	-30.7mA	-	231.1mA
External 24V Circuit		-7.5mA*16 Points	-7.5mA*16 Points	-	-	-	-	

**CPU Module - Internal 24V Circuit - External 24V Circuit**

$$【1000mA】 - 【200mA+70mA+150mA+78.2mA+30.7mA】 - 【(7.5mA*16)+(7.5mA*16)】 =231.1mA$$

## 4-4 Requirement of Power Sequence in CPU Module & Expansion Module

When the power is on, the M-Series PLC first detects the type and number of expansion module attached to its expansion interface and get the actual I/O configuration. Therefore, while the CPU module performs detection, the power in expansion module should be already UP, otherwise, the detected I/O configuration will not correct. Namely, the power of expansion module should be ON simultaneously or even earlier. There will be no time sequence error when CPU module/expansion module are connected together to one power. If the expansion module and CPU module powered by different powers (or the same power but different switches), or external power supply is used for expansion modules, time sequence of both powers should be considered. To solve the problem of the expansion module power not get ready before CPU module power does, M-Series PLC provides a special R35367 register which can delay the detection time of I/O configuration. The time base of R35367 is 0.01sec with a default value of 0, which can be set from 0~1000 (0~10sec), as shown in the figure below. If the expansion module power cannot be UP within 1sec after main unit power is ON, the R35367 time needs to be set longer to delay the detection by CPU. It cannot exceed 10sec, however, otherwise the configuration of expansion interface cannot be detected.

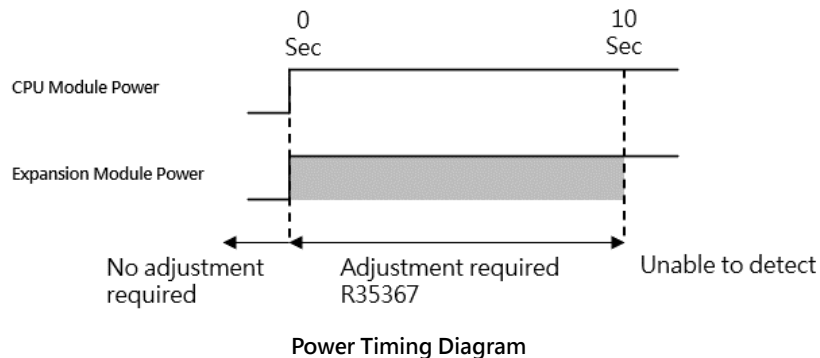

# 5

---

## Digital Input (DI) Circuit

<u>5-1</u>	<u>Digital Input Circuit Specifications</u> .....	2
<u>5-2</u>	<u>24VDC Single-End Input Circuit and Wiring for SINK/SOURCE Input</u> .....	3

M-Series PLC provides the single-end 24VDC inputs which use the common terminal to save terminals. The response speeds of single-end common input circuits are available in high, medium and low. The single-end input circuit can be set to SINK or SOURCE type by varying the wiring of the common terminal S/S inside PLC and external common wire of input circuits.

## 5-1 Digital Input Circuit Specifications


### Digital Input Circuit Specifications

Specifications	Item	24VDC Single-end input		Note
		High-Speed (HSC)	Medium-Speed	
Maximum input frequency		200KHz	1kHz	
Input Signal Voltage		24VDC±10%		
Input Current Threshold	ON Current	> 8mA	> 4mA	
	OFF Current	< 2mA	< 1.5mA	
Maximum Input Current		10.5mA	7.6mA	
Input Resistance		5.6kΩ	3.3kΩ	
Input Status Indication		Displayed by LED: Lit when "ON", dark when "OFF"		
Isolation Type		Transformer/ Photocoupler Isolation · 1500VAC/1 minute		
SINK /SOURCE Wiring		Via variation of internal common terminal S/S and external common wiring		
CPU Modules	MA1N1-1616◇	X0~X15	-	
	MA1N2-1616◇	X0~X15	-	
	MA1N3-1616◇	X0~X15	-	
	MA1I4-1616◇	X0~X15	-	
	MA1M3-1616◇	X0~X15	-	
	MA2M3-1616◇	X0~X15	-	
	MA3M3-1616◇	X0~X15	-	
	MS1C1-1616◇	X0~X15	-	
	MS1C2-1616◇	X0~X15	-	
	MS2C4-1616◇	X0~X15	-	
	MS2C5-1616◇	X0~X15	-	
	MS3C6-1616◇	X0~X15	-	
	ME1C1-1616◇	X0~X15	-	
	ME2C3-1616◇	X0~X15	-	
	ME2C4-1616◇	X0~X15	-	
	ME2C5-1616◇	X0~X15	-	
ME3C6-1616◇	X0~X15	-		
Expansion Modules	M16X	-	X1~X16	
	M1616XY	-	X1~X16	
Noise Filtering Time Constant		DHF(0 ~ 15ms) + AHF(0.47μs)	DHF(0 ~ 70ms) + AHF(0.47μs)	DHF : Digital Hardware Filter AHF : Analog Hardware Filter


## 5-2 24VDC Single-End Input Circuit and Wiring for SINK/SOURCE Input

The 24VDC single-end digital input circuits of M-Series PLC are available for high, medium and low speed. They all have the similar circuit structures but with different response speeds. To save input terminals, the circuit of single-end input is implemented by connecting one end of all input points (photo coupler) inside the PLC to the same internal common terminal labeled as S/S. The other end of each input circuit is connected to corresponding terminals such as X0, X1, X2, etc. The S/S common terminal and N single-end inputs comprise of N digital inputs (i.e., only N+1 terminals are used for N terminals). Therefore, we call this type of input structure the single-end input. The user also needs to do the same thing when making the connection of external digital input devices. Namely, the one end of all input devices (e.g., buttons, switches) are connected together and called the external common wire, while the other ends of input circuits are connected to the input terminals X0, X1, X2, etc., of PLC. Then finish it by connecting the external common wiring and internal common terminal S/S to the positive/negative terminals of the 24VDC power. When connect the internal common terminal S/S to 24V+(positive) and the external common wire to 24V - (negative), then the circuit serve as SINK input. On the contrary, while exchange the wiring of the above internal and external common will serve as a SOURCE input. The above wiring schemes can illustrate below

### ➤ Wiring of single-end common SINK input

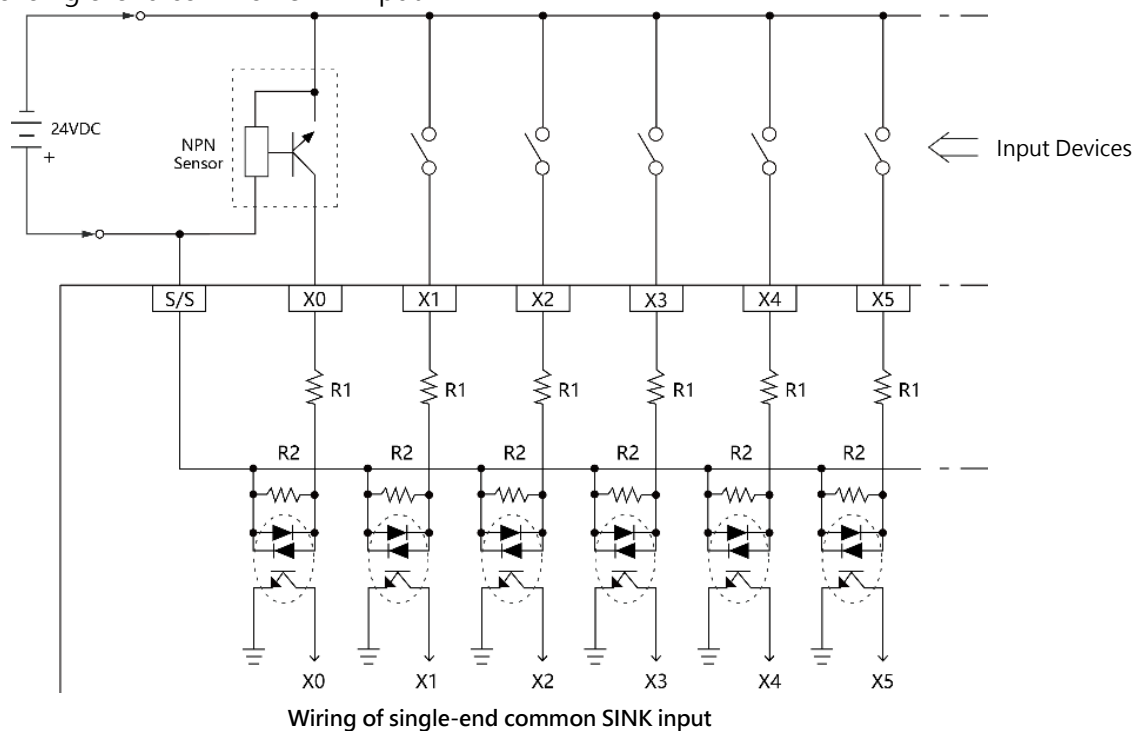

➤ Wiring of single-end common SOURCE input

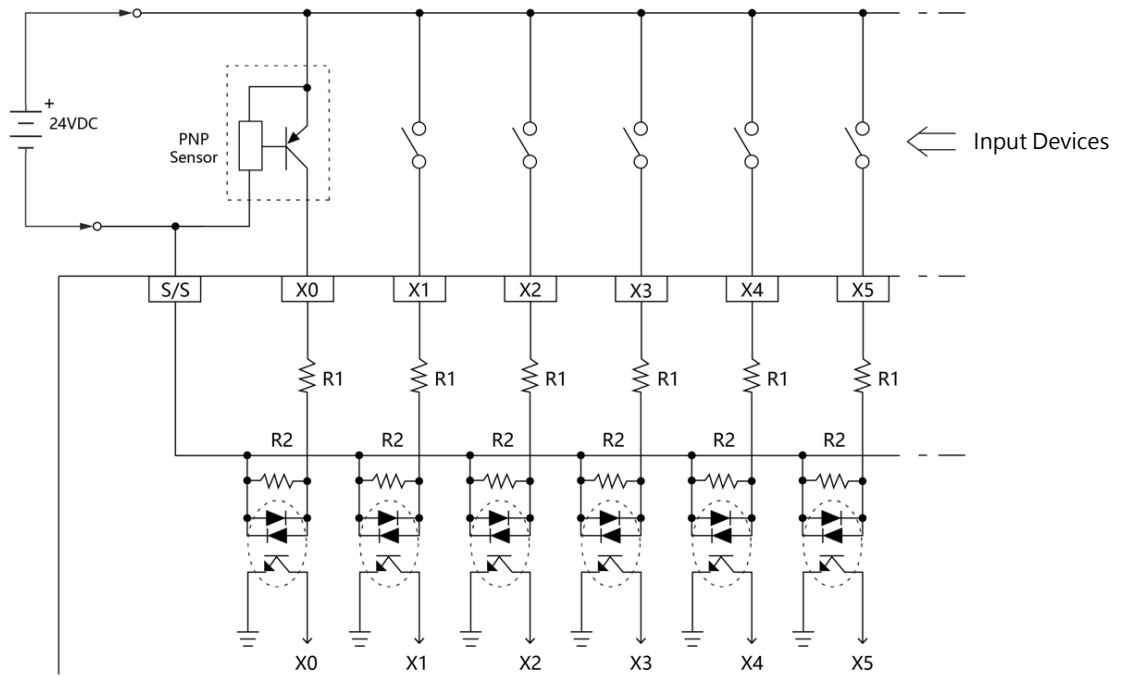

Wiring of single-end common SOURCE input



# 6

## Digital Output (DO) Circuit

<u>6-1</u>	<u>Digital Output Circuit Specifications .....</u>	<u>2</u>
<u>6-2</u>	<u>Single-End Output Circuit.....</u>	<u>3</u>
<u>6-3</u>	<u>Speed up the Single-End Transistor Output Circuit (High/ Medium).....</u>	<u>6</u>
<u>6-4</u>	<u>Output Device Protection and Noise Suppression in DO Circuit.....</u>	<u>7</u>

## 6-1 Digital Output Circuit Specifications

### Digital Output Circuit Specifications

Specification		Single-End Transistor Output		Single-End Relay Output
		High-Speed (HSC)	Medium-Speed	
Maximum output frequency		200KHz	1kHz	For ON/OFF · not for frequent exchange
Working Voltage		5~30VDC		<250VAC,30VDC
Maximum Load Current	Resistive	0.1A/single · 0.4A/common	0.5A/single · 4A/common	2A/single · 8A/common
	Inductive			80VA(AC)/24VA(DC)
Maximum Voltage Drop/conducting resistance		0.6V	2.2V	0.06V(initial)
Minimum Load		-	-	2mA/DC power
Leakage Current		< 0.1mA/30VDC		-
Maximum Output Delay Time	ON > OFF	< 2μS	< 10μS	10ms
	OFF > ON		< 40μS	
Output Status Indication		Displayed by LED: Lit when "ON" , dark when "OFF"		
Over Current Protection		N/A		
Isolation Type		Photocoupler Isolation, 500VAC, 1 minute		Electromagnetic Isolation, 1500VAC, 1 minute
SINK /SOURCE Type		Choose SINK/SOURCE by models and non-exchangeable		Bilateral device, can be arbitrarily set to SINK/SOURCE output
CPU Modules	MA1N1-1616◇	Y0~Y15	-	-
	MA1N2-1616◇	Y0~Y15	-	-
	MA1N3-1616◇	Y0~Y15	-	-
	MA1I4-1616◇	Y0~Y15	-	-
	MA1M3-1616◇	Y0~Y15	-	-
	MA2M3-1616◇	Y0~Y15	-	-
	MA3M3-1616◇	Y0~Y15	-	-
	MS1C1-1616◇	Y0~Y15	-	-
	MS1C2-1616◇	Y0~Y15	-	-
	MS2C4-1616◇	Y0~Y15	-	-
	MS2C5-1616◇	Y0~Y15	-	-
	MS3C6-1616◇	Y0~Y15	-	-
	ME1C1-1616◇	Y0~Y15	-	-
	ME2C3-1616◇	Y0~Y15	-	-
	ME2C4-1616◇	Y0~Y15	-	-
	ME2C5-1616◇	Y0~Y15	-	-
Expansion Modules	M16YT	-	Y1~Y16	-
	M16YJ	-	Y1~Y16	-
	M16YR	-	-	Y1~Y16
	M1616XYT	-	Y1~Y16	-
	M1616XYJ	-	Y1~Y16	-


## 6-2 Single-End Output Circuit M-Series

M-Series PLC output circuits such as relays, transistors or TRIAC are single-end output structure. A single-end output in each digital output (DO) takes up only one terminal. But since any output device has two ends, the one end of several output devices has to be connected together to one common point (called output common) for single-end output. Then each output point can output via this common point. The more output device shares same common points, the more terminals are saved, while relatively increasing the current running through the common point. Combination of any output common with its individual single-end outputs are called a Common Output Block. The various single-end common output circuits are described below :


### 6-2-1 Structure and Wiring of Single-End Relay Output Circuit

Because relay contacts have no polarity, it can be applied for AC or DC load power. Each relay can provide current up to 2A. The maximum rated current in all output commons of M Series PLC is 8A. Its mechanical lifetime can reach up to 2 million times, while the contacts have a shorter lifetime. The lifetime also varies depending on working voltage, load type (power factor  $\cos \phi$ ) and contact current. The relation between them is plotted in the figure below. In the case of pure resistive load ( $\cos \phi = 1.0$ ) at 120VAC and 2A, the lifetime of contacts is about 250 thousand times. While for high inductive or capacitive load with  $\cos \phi$  up to 0.2 and current within 1A, the lifetime decreases rapidly to about 50 thousand times (AC200V) or 80 thousand times (AC120V).

#### ➤ Single-End Relay Output Circuit

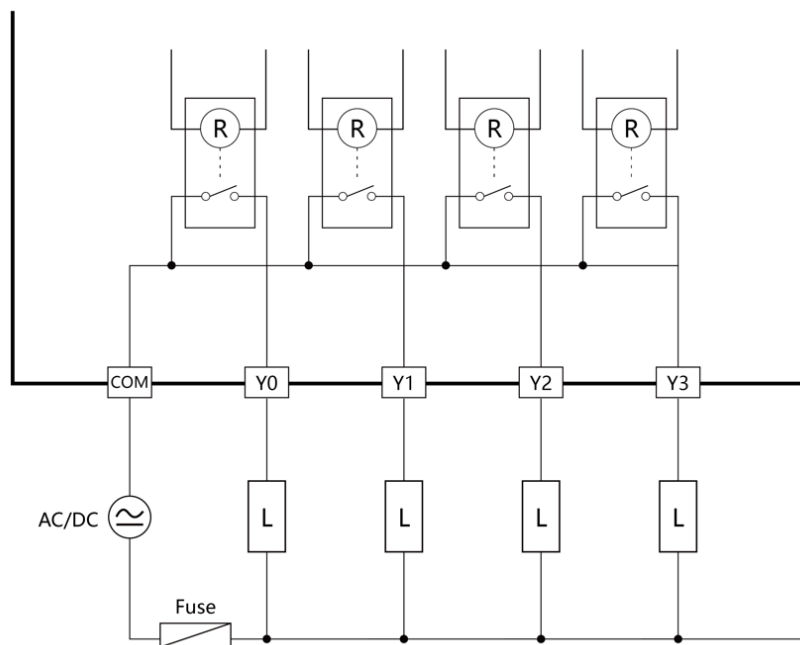

Single-End Relay Output Circuit

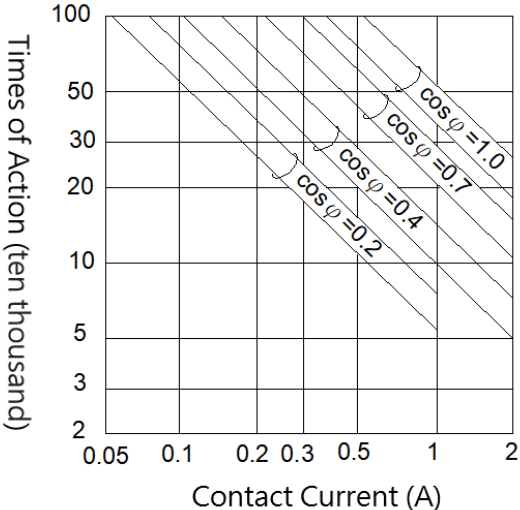


Relay life at different currents and phases

## 6-2-2 Structure and Wiring of Single-End Transistor SINK and SOURCE Output Circuit


The transistor contacts are divided into SINK and SOURCE output circuit. Each transistor contact can provide a max current of 0.5A. The max current limit of the output common point of the transistor can be divided into 2A current or 4A current according to different models.

### ➤ Transistor Single-End SINK Output

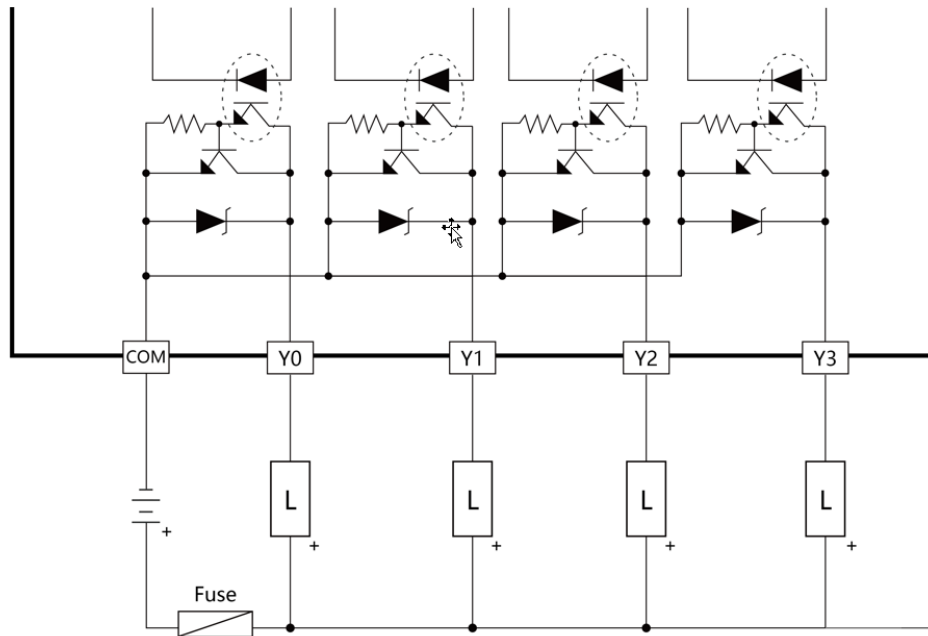

Transistor Single-End SINK Output


### ➤ Transistor Single-End SOURCE Output

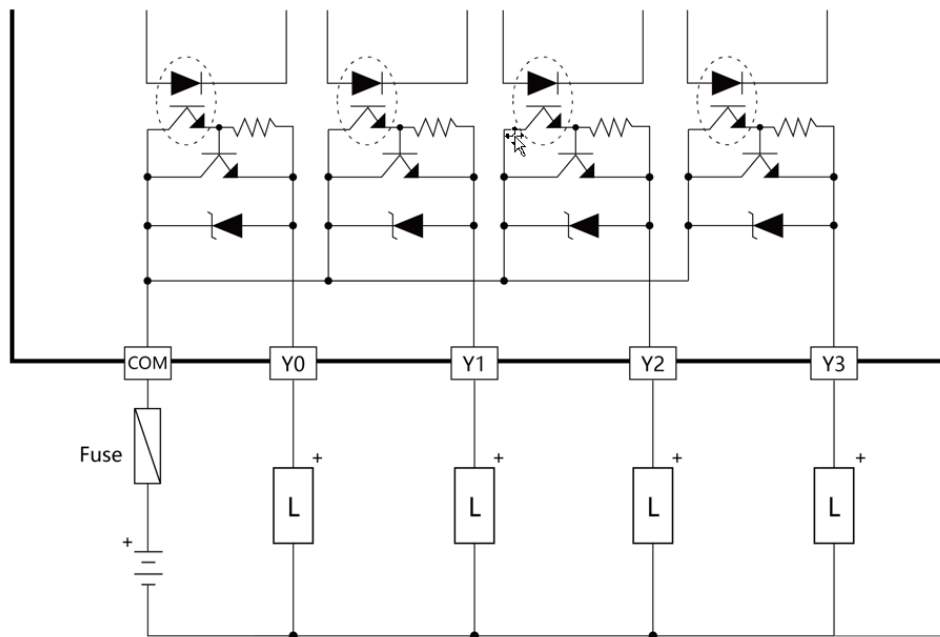

Transistor Single-End SOURCE Output

### 6-3 Speed up the Single-End Transistor Output Circuit (High/ Medium)

Either with the SINK or SOURCE structure in single-end output transistor circuit, when the transistor switches from ON to OFF, the junction capacitor between transistor CE electrodes should be charged to near the load voltage VDD before it can stop the current running through the photocoupler inside the load, which increase the OFF time and decrease the response speed. This problem can be solved by adding a Dummy load to accelerate charging rate and speed up the working frequency of transistor output. For the transistor output in M-Series PLC, Dummy load that are added to the high- and medium-speed transistor output and generate a load current of 20~50mA is adequate. For low-speed transistor where its driving capability (0.5A) but speed is concerned, adding a Dummy load only decreases its driving capability without any significant improvement and hence is not recommended. The following diagram shows how to add a Dummy load to SINK and SOURCE transistor output. (Applicable only to high and medium-speed)

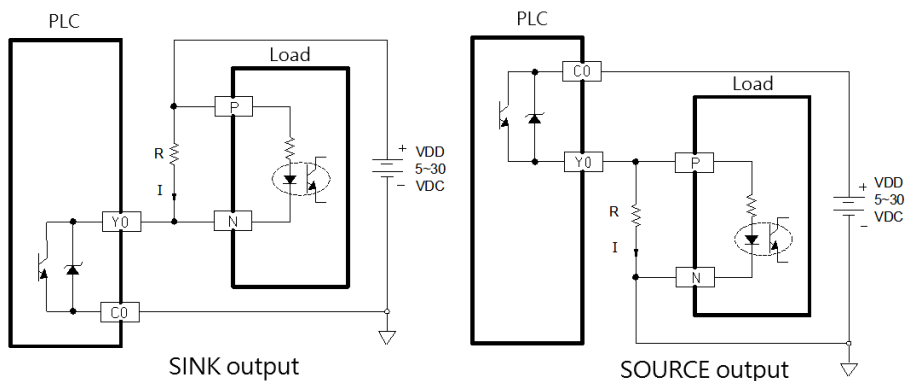

$$I = \frac{VDD}{R} = 20 \sim 50mA$$

Speed up the Single-End Transistor Output Circuit

## 6-4 Output Device Protection and Noise Suppression in DO Circuit


Since the digital output circuits are mainly used for the ON/OFF switching operation, the output components such as relays, transistors and TRIAC can be deemed as kinds of switch components. Normally, surge currents or counter-electromotive force voltages are generated during the ON/OFF operation of these switch components. The effect of surge currents or counter-electromotive force voltages is particularly serious when heavy capacitive or inductive loads are incorporated, which may cause damage to the output components or generate noises in other electronic circuits and equipment. Among those three M-PLC output components, where TRIAC require no special treatment because of their features of smaller rated current, zero cross in ON/OFF, and built-in protection circuits, special consideration should be given to relays and transistors when they are used in high power applications or connected with capacitive or inductive loads and are described in the following:

### 6-4-1 Protection of Relay Contacts and Noise Suppression

Because the relay contacts are used to contact switch components having extremely low resistance, the surge current  $I_r$  generated instantly upon turning on the relay is normally pretty strong (even if the steady load current is very small). Under such strong surge, the contact tends to melt and stick due to extreme temperature in such a way that the relay cannot trip when it is disconnected. In addition, when the relay connections are OFF, large  $di/dt$  is generated because of the instantaneous change from low resistance to open circuit ( $\infty$ ) soon after following the tripping of contact. As a result, an extremely strong counter-electromotive force voltage is induced, which creates sparks between the electrodes of two relay contacts and results in poor contact due to carbon deposits. Among those three output components, either in ON or OFF state, very serious interference can be caused by the surge current or the counter-electromotive of the relay. The solutions to this problem are listed as follows:

#### Suppression of Surge Current

Connect a small resistor  $R$  in series to lower the surge current, but note that too large  $R$  will affect the driving capability or cause too much voltage drop.

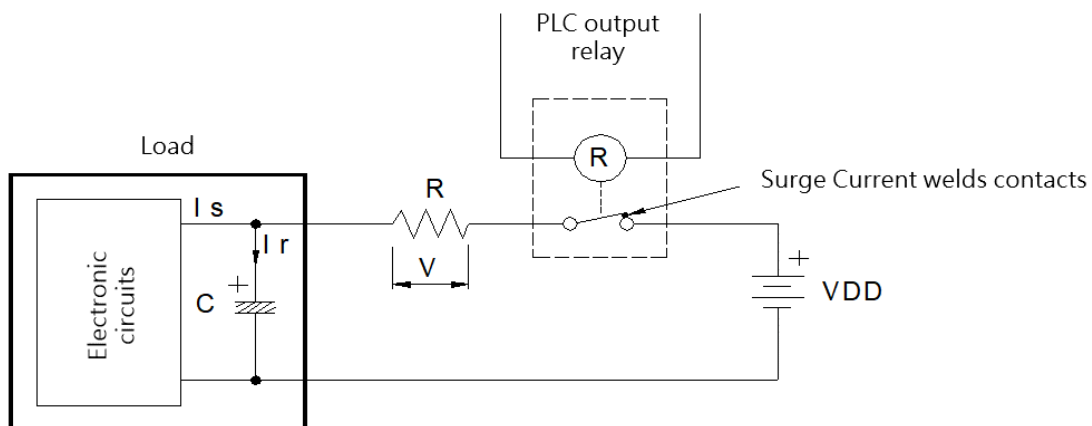


$$R \geq \frac{VDD}{I_r \max} \quad (\text{note power dissipation } P = I_s^2 R \text{ and voltage drop } V = I_s R)$$


$$I_r \max \text{ of relay in M Series PLC} = 2A$$

**Suppression of Counter-Electromotive Force**


For the inductive load, whether in AC or DC power, suppression devices must be connected in parallel to both its ends to protect the relay contacts and lower noise interference. The schematic diagrams for AC and DC powers are shown below, respectively:

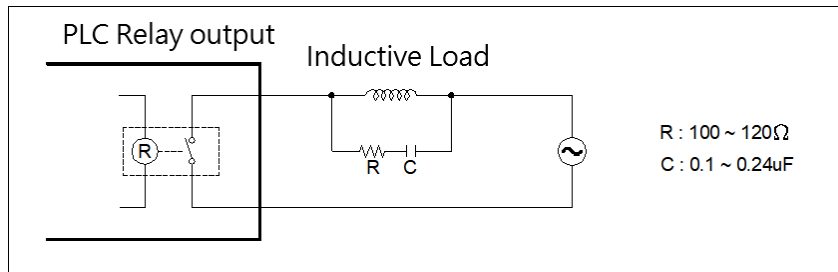

Scheme of AC power load

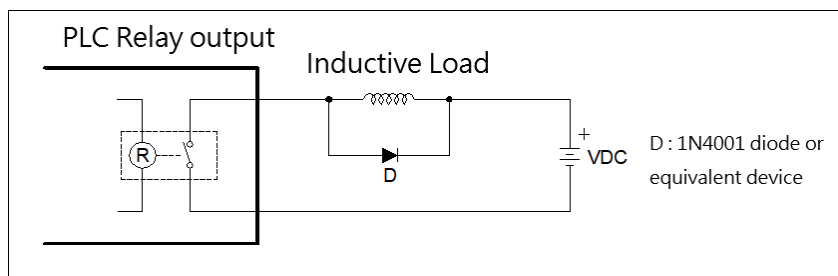

Suppress by a diode in DC power load (for low power )

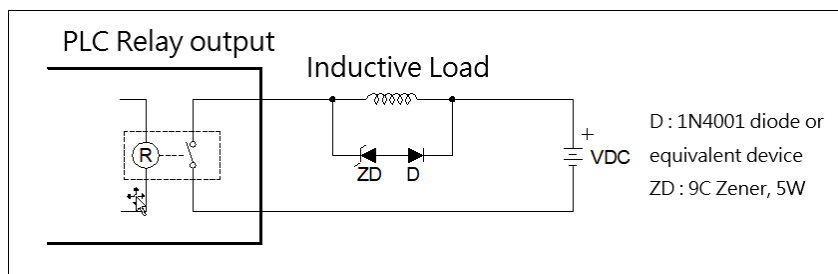


Suppress by a diode + Zener in DC power load (for high power and frequent ON/OFF)


**6-4-2 Protection of Transistor Output and Noise Suppression**

The transistor output in M-Series PLC already includes Zener diode for counter-electromotive force, which is sufficient for low power inductive load and medium frequency of ON/OFF application. In conditions of high power or frequent ON/OFF, please construct another suppression circuit to lower noise interference and prevent voltage from exceeding the limit or overheating that may damage the transistor output circuit.



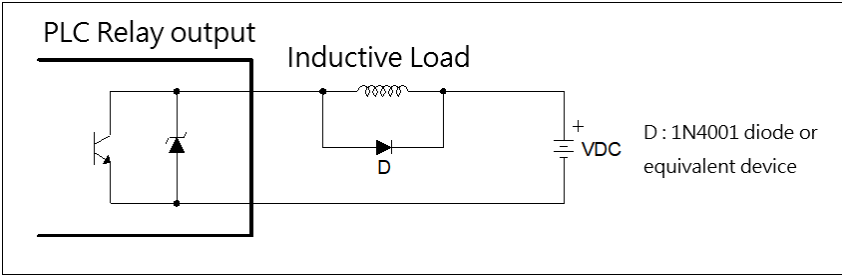

Suppress by a diode (for low power)

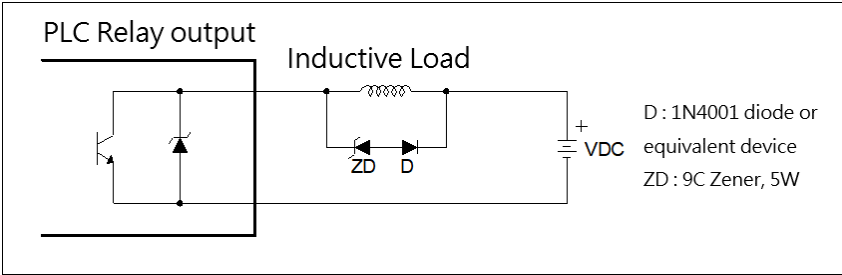

Suppress by a diode + Zener (high power and frequent ON/OFF)

# 7

## Left Side Expansion Module Specifications


---

<u>7-1</u>	<u>Power Module Specifications</u> .....	2
------------	--	---

# 7-1 Power Module Specifications

## 7-1-1 MPA024-24 Specification

### Appearance and Function

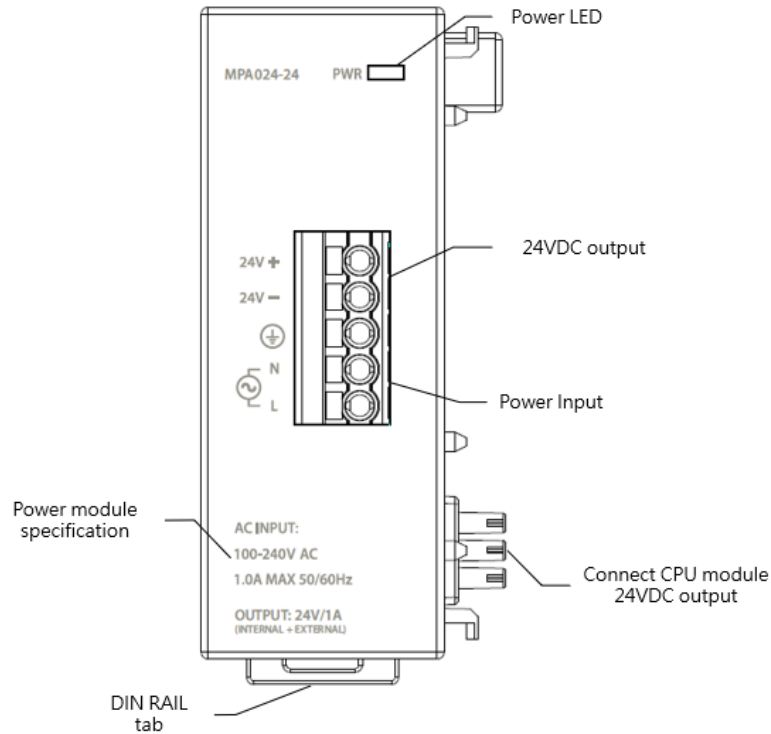

MPA024-24 部位名稱

### Technical Specifications

MPA024-24 Technical Specifications Table

Item		Technical Specifications
Model		MPA024-24
Input	Input voltage	100~240VAC
	Input frequency	50/60Hz
	Maximum input current	1A max.
	Inrush current ( cold start )	22A/115Vac (44A/230Vac)
	Withstand voltage	3,000 VAC (Primary-secondary), 1,500 VAC (Primary-PE), 500 VAC (Secondary-PE)
	Insulation resistance	>100MΩ/500VDC
	Fuse	2A
	Hold-up time	>15ms/ 115VAC · >60ms/ 220VAC
	Isolation Type	Transformer/ Photocoupler Isolation · 1500VAC/1 minute
	Power indication	LED (Green)
Output	Rated output power	24W (Shared CPU dedicated power supply and external Sensor power supply)
	Rated output current	1A (Shared CPU dedicated power supply and external Sensor power supply)
	Output voltage range	24VDC±1%
	Conversion efficiency	86%/110VAC · 87%/220VAC
Protection	Overvoltage protection	Latching overvoltage protection, re-power on to recover

		34V~36V
	Overcurrent protection	Method: Foldback overload protection, automatically recover when overload is removed 101%~133% rated output power
Operating Ambient Temperature		0~55°C
Relative Humidity		20 ~ 95% (non-condensing, RH-2)
Altitude		≤2000m
Vibration Resistance (Fixed by DIN RAIL)		5~8.4Hz Amplitude: 3.5 8.4~150Hz Constant acceleration:19.6m/s <sup>2</sup> (2G) 10G, 10 times each along the 3 axes (IEC61131-2 Standard)
Shockproof		10G, 3 times each along the 3 axes
Noise Suppression		1500Vp-p, Width: 1us
Withstand Voltage		1500 VAC 1 minute (Between power terminals and input/output terminals, and between all external terminals and the housing)
Certification		CE


**Status Indicator**

**MPA024-24 Status Indicator Table**

Name	instruction
PWR LED	Power ON: Green Light Power OFF: NO Lights

## 7-1-2 MPA048-24 Specifications

### Appearance and Function

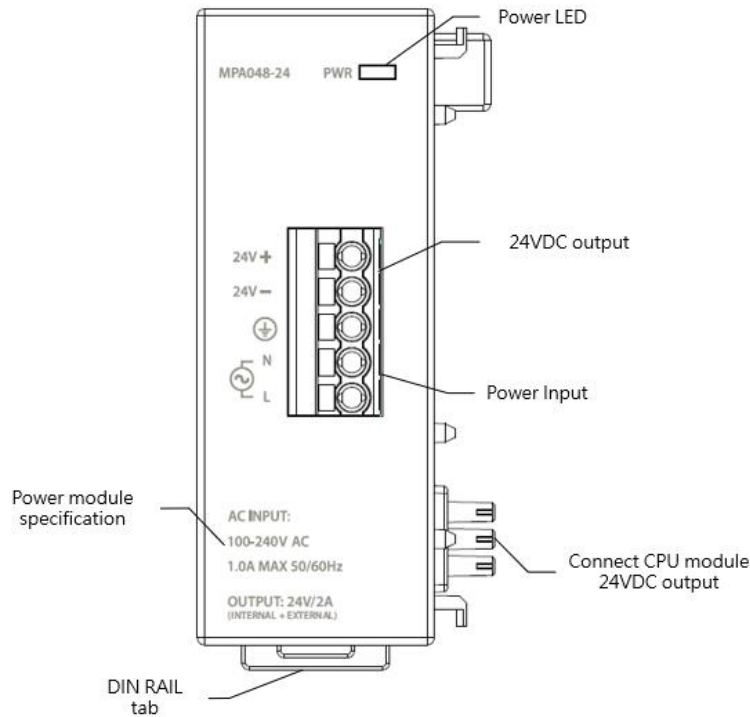

MPA048-24 Appearance

### Technical Specifications

#### MPA048-24 Technical Specifications Table

Item	Technical Specifications	
Model	MPA048-24	
Input	Input voltage	100~240VAC
	Input frequency	50/60Hz
	Maximum input current	1A max.
	Inrush current ( cold start )	22A/115Vac (44A/230Vac)
	Withstand voltage	3,000 VAC (Primary-secondary), 1,500 VAC (Primary-PE), 500 VAC (Secondary-PE)
	Insulation resistance	>100MΩ/500VDC
	Fuse	2A
	Hold-up time	>15ms/ 115VAC · >60ms/ 220VAC
	Isolation Type	Transformer/ Photocoupler Isolation · 1500VAC/1 minute
	Power indication	LED (Green)
Output	Rated output power	48W (Shared CPU dedicated power supply and external Sensor power supply)
	Rated output current	2A (Shared CPU dedicated power supply and external Sensor power supply)
	Output voltage range	24VDC±1%
	Conversion efficiency	86%/110VAC · 87%/220VAC
Protection	Overvoltage protection	Latching overvoltage protection, re-power on to recover 34V~36V
	Overcurrent protection	Method: Foldback overload protection, automatically recover when overload is removed

	101%~133% rated output power
Operating Ambient Temperature	0~55°C
Relative Humidity	20 ~ 95% (non-condensing, RH-2)
Altitude	≤2000m
Vibration Resistance (Fixed by DIN RAIL)	5~8.4Hz Amplitude: 3.5 8.4~150Hz Constant acceleration:19.6m/s <sup>2</sup> (2G) 10G, 10 times each along the 3 axes (IEC61131-2 Standard)
Shockproof	10G, 3 times each along the 3 axes
Noise Suppression	1500Vp-p, Width: 1us
Withstand Voltage	1500 VAC 1 minute (Between power terminals and input/output terminals, and between all external terminals and the housing)
Certification	CE

Status Indicator

**MPA048-24 Status Indicator Table**

Name	instruction
PWR LED	Power ON: Green Light Power OFF: NO Lights

# 8

## Right Side High-Speed Expansion Module Specifications

---


<u>8-1</u>	<u>High-Speed Communication Expansion Module Specifications .....</u>	<u>2</u>
------------	---	----------

## 8-1 High Speed Communication Expansion Module Specifications

If the communication Port of the M-Series CPU module is not enough for a specific application, then expand it with the additional expansion modules.

### 8-1-1 MHCM25 Specifications

#### Appearance and Functions

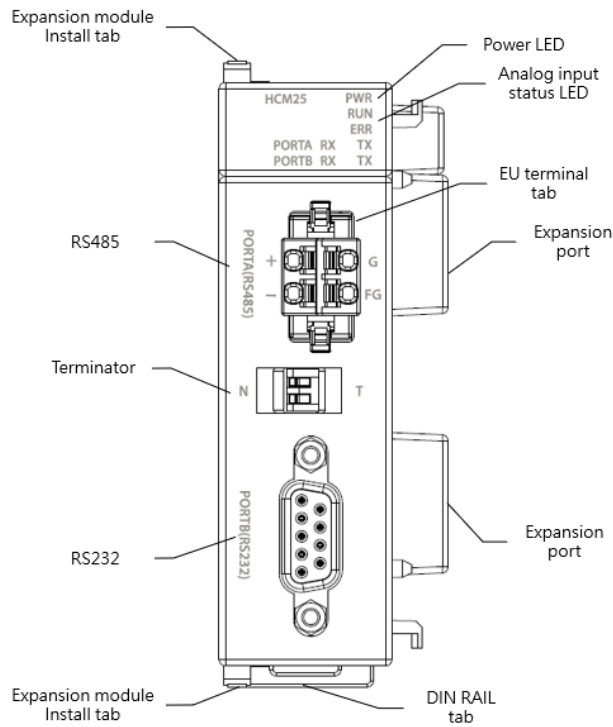

MHCM25 Appearance

#### Technical Specifications

##### MHCM25 Technical Specifications Table

Item	Technical Specifications
Model	MHCM25
connection interface	1 Port RS232 + 1 Port RS485
Maximum number of connections	RS232: 1 Slave RS485: 32 Slaves
Connector type	RS232: D-Sub 9-Pin RS485: 4 pin European terminal block
Transmission rate	RS232: Max 115200 RS485: Max 230400
Maximum cable length	RS232: 15M RS485: 1200M
Isolation method	Internal power isolation




Status Indicator

MHCM25 Status Indicator Table


Name	instruction
PWR Indicator	Power ON: Green Light Power OFF: No LightS
RUN Indicator	Running: Green Light
ERR Indicator	In ERROR: Red Light
Port A RX Indicator	Port A is receiving: Orange Light
Port A TX Indicator	Port A is transmitting: Orange Light
Port B RX Indicator	Port B is receiving: Orange Light
Port B TX Indicator	Port B is transmitting: Orange Light

Pin assignment of the connector

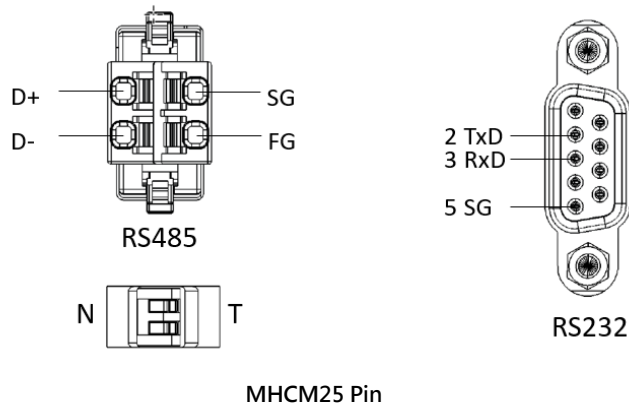

## 8-1-2 MHCM55 Specifications

### Appearance and Function

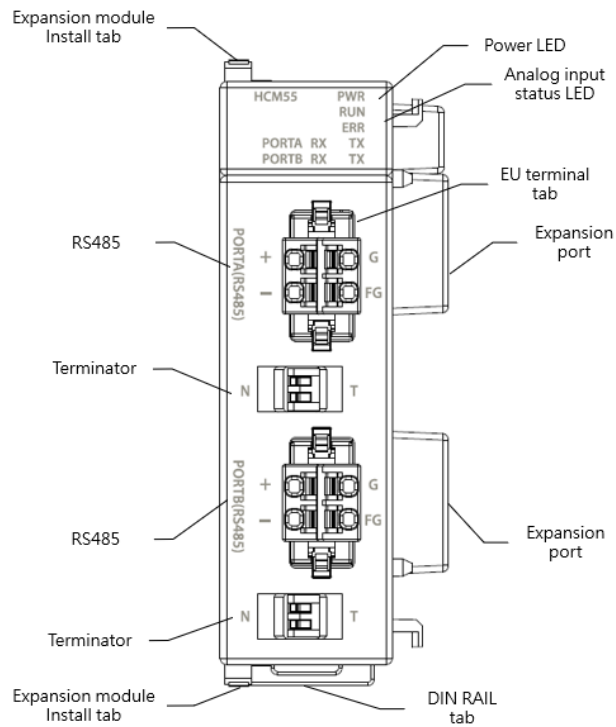

MHCM55 Appearance

### Technical Specifications

#### MHCM55 Technical Specifications Table


Item	Technical Specifications
Model	MHCM55
connection interface	2 Port RS485
Maximum number of connections	RS485: 32 Slaves
Connector type	RS485: 4 pin European terminal block
Transmission rate	RS485: Max 230400
Maximum cable length	RS485: 1200M
Isolation method	Internal power isolation

Status Indicator

MHCM55 Status Indicator Table

Name	instruction
PWR Indicator	Power ON: Green Light Power OFF: No Lights
RUN Indicator	Running: Green Light
ERR Indicator	In ERROR: Red Light
Port A RX Indicator	Port A is receiving: Orange Light
Port A TX Indicator	Port A is transmitting: Orange Light
Port B RX Indicator	Port B is receiving: Orange Light
Port B TX Indicator	Port B is transmitting: Orange Light

Pin assignment of the connector

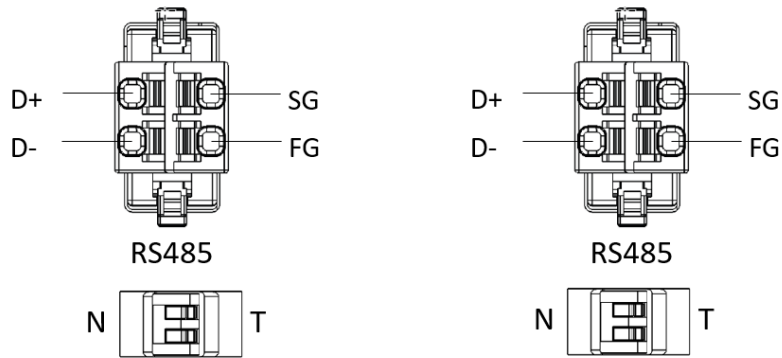

MHCM55 Pin

# 9

## Right Side Expansion Module Specifications

---


<u>9-1</u>	<u>Digital Input Expansion Module Specifications</u> .....	2
<u>9-2</u>	<u>Digital Output Expansion Module Specifications</u> .....	5
<u>9-3</u>	<u>Digital Input /Output Combo Expansion Module Specifications</u> .....	10
<u>9-4</u>	<u>Analog Input Expansion Module Specifications</u> .....	15
<u>9-5</u>	<u>Analog Output Expansion Module Specifications</u> .....	21
<u>9-6</u>	<u>Analog Input/Output Combo Expansion Module Specifications</u> .....	27
<u>9-7</u>	<u>Temperature Expansion Module Specifications</u> .....	31
<u>9-8</u>	<u>Temperature Combo Expansion Module Specifications</u> .....	35
<u>9-9</u>	<u>Load Cell Expansion Module Specifications</u> .....	38

## 9-1 Digital Input Expansion Module Specifications

If the digital input expansion module of the M-Series CPU module is not enough for a specific application, then expand it with the additional expansion modules.

### 9-1-1 M16X Specifications

#### Appearance and Function

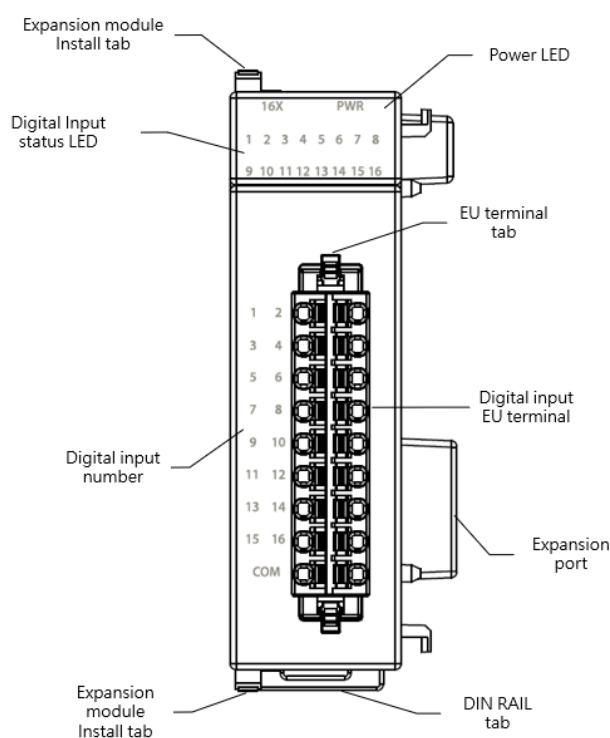

M16X Appearance

#### Technical Specifications

##### M16X Technical Specifications Table

item	Technical Specifications	
Model	M16X	
Input Points	16	
Input Points Type	24VDC Single-end input	
Maximum input frequency	Medium Speed · 1kHz	
Input Signal Voltage	24VDC±10%	
Input Current Threshold	ON Current	> 4mA
	OFF Current	< 1.5mA
Maximum Input Current	7.6mA	
Input Resistance	5.6kΩ	
Isolation Type	Transformer/ Photocoupler Isolation · 1500VAC/1 minute	
SINK /SOURCE Wiring	Via variation of internal common terminal S/S and external common wiring	
Noise Filtering Time Constant	DHF(0 ~ 70ms) + AHF(0.47μs)	
Operating Ambient Temperature	0~55°C	
Relative Humidity	5 ~ 95% (non-condensing, RH-2)	

Altitude	≤2000m
Vibration Resistance (Fixed by DIN RAIL)	5~8.4Hz Amplitude: 3.5 8.4~150Hz Constant acceleration:19.6m/s <sup>2</sup> (2G) 10G, 10 times each along the 3 axes (IEC61131-2 Standard)
Shockproof	10G, 3 times each along the 3 axes
Noise Suppression	1500Vp-p, Width: 1us
Withstand Voltage	1500 VAC 1 minute (Between power terminals and input/output terminals, and between all external terminals and the housing)


Status Indicator

M16X Status Indicator Table

Indicator	instruction
PWR Indicator	Power ON: Green Light Power OFF: No Light
1~16 Input Indicator	ON: Green Light OFF: No Light


Wiring

➤ Wiring of single-end common SINK input

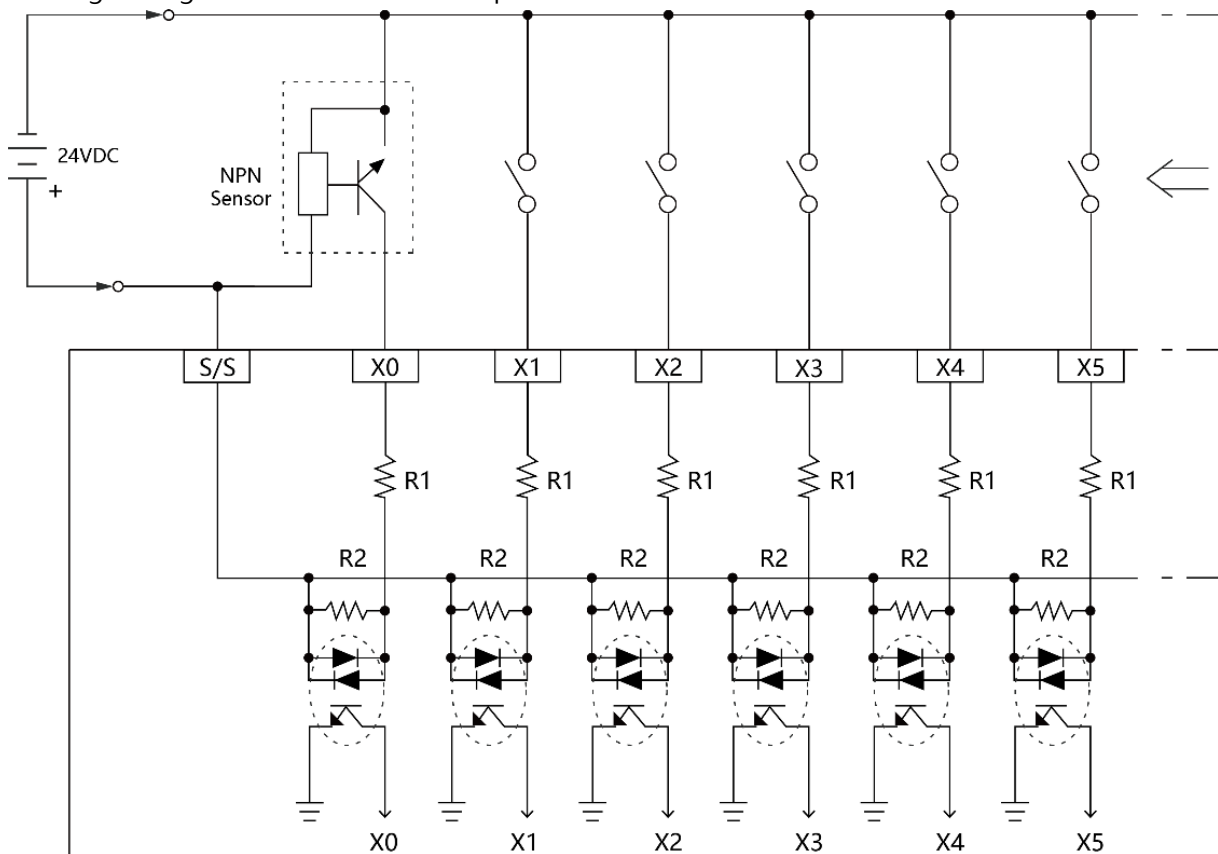

Wiring of single-end common SINK input

➤ Wiring of single-end common SOURCE input

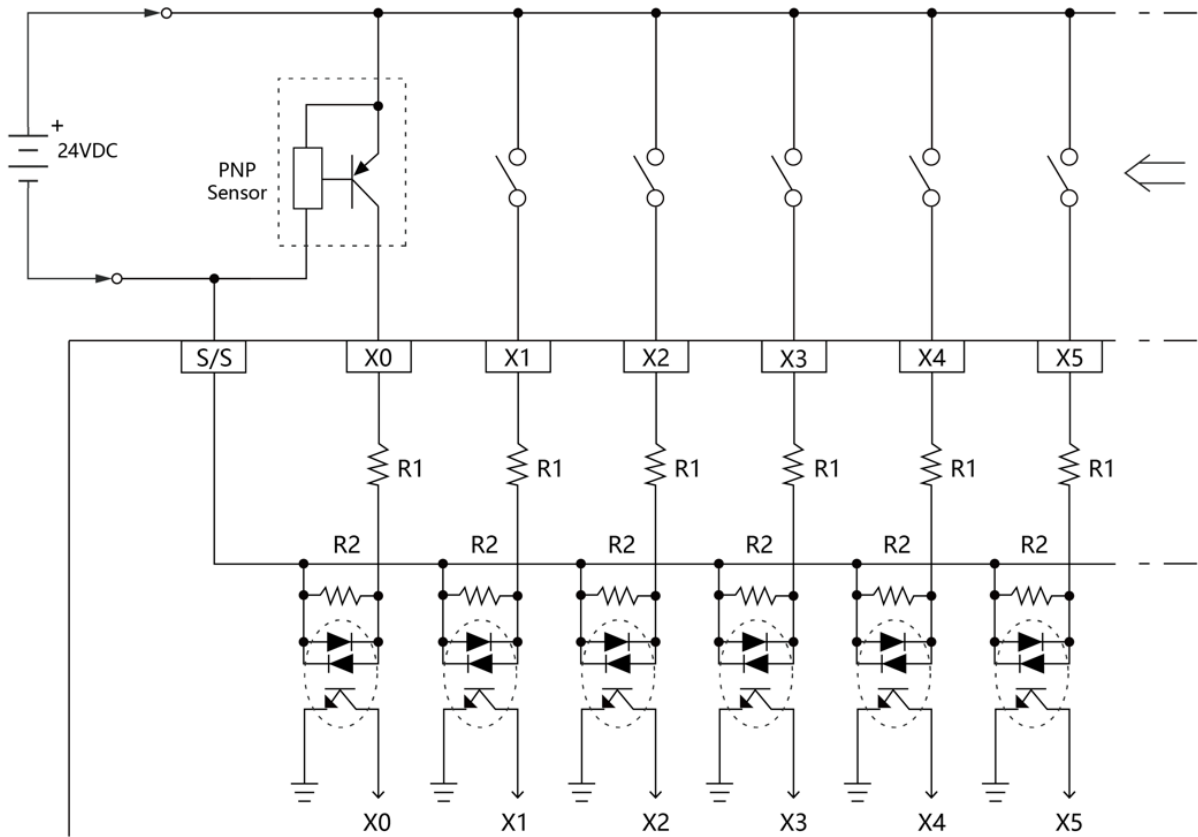


Wiring of single-end common SOURCE input

## 9-2 Digital Output Expansion Module Specifications

If the digital output expansion module of the M-Series CPU module is not enough for a specific application, then expand it with the additional expansion modules.

### 9-2-1 M16YT / M16YJ Specifications

#### Appearance and Function

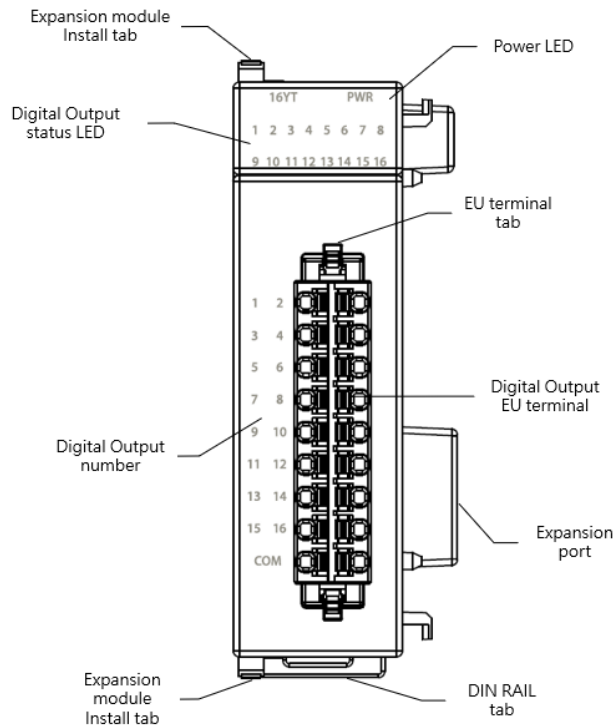

M16Y Appearance

#### Technical Specifications

##### M16YT / M16YJ Technical Specifications Table

item		Technical Specifications
model		M16YT / M16YJ
Output Points		16
Output Points Type		Single-End Transistor Output; T-Transistor SINK(NPN) output ; J-Transistor SOURCE(PNP) output
Maximum output frequency		Medium · 1kHz
Working Voltage		5~30VDC
Maximum Load Current	Resistive	0.5A
	Inductive	
Maximum Voltage Drop/conducting resistance		2.2V
Minimum Load		-
Leakage Current		< 0.1mA/30VDC
Maximum Output	ON > OFF	< 10μS
	OFF > ON	< 40μS



Delay Time	
Over Current Protection	N/A
Isolation Type	Photocoupler Isolation, 500VAC, 1 minute
SINK /SOURCE Type	Choose SINK/SOURCE by models and non-exchangeable
Operating Ambient Temperature	0~55°C
Relative Humidity	5 ~ 95% (non-condensing, RH-2)
Altitude	≤2000m
Vibration Resistance (Fixed by DIN RAIL)	5~8.4Hz Amplitude: 3.5 8.4~150Hz Constant acceleration:19.6m/s <sup>2</sup> (2G) 10G, 10 times each along the 3 axes (IEC61131-2 Standard)
Shockproof	10G, 3 times each along the 3 axes
Noise Suppression	1500Vp-p, Width: 1us
Withstand Voltage	1500 VAC 1 minute (Between power terminals and input/output terminals, and between all external terminals and the housing)


### Status Indicator

#### M16YT / M16YJ Status Indicator Table

Indicator	instruction
PWR LED	Power ON: Green Light Power OFF: No Lights
1~16 Output Indicator	ON: Green Light OFF: No Lights


**Wiring**

➤ Transistor Single-End SINK Output

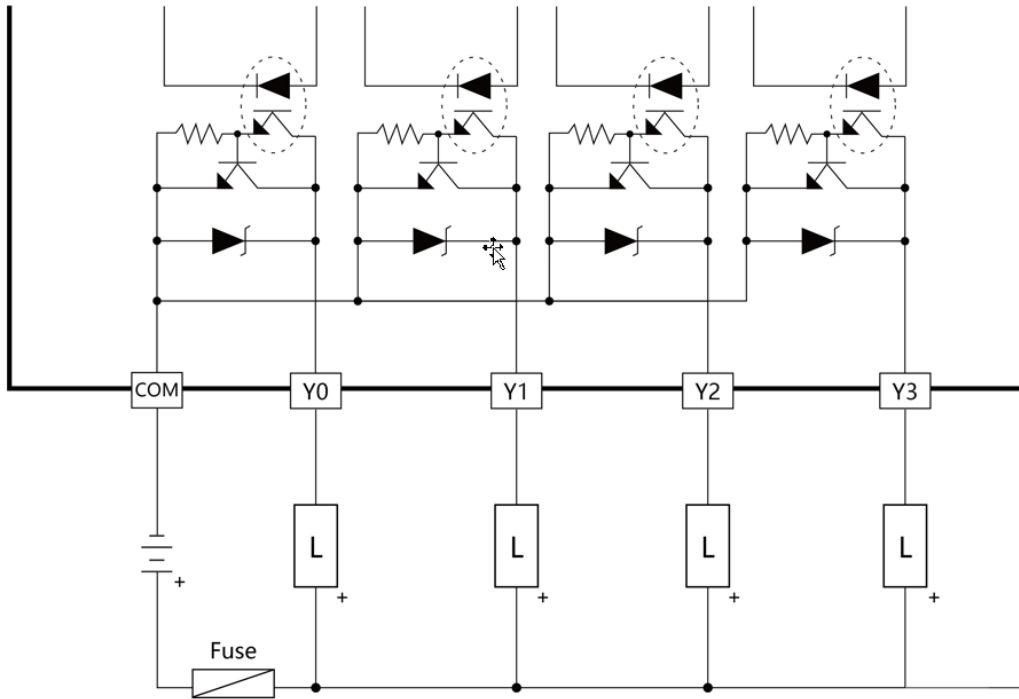

Transistor Single-End SINK Output


➤ Transistor Single-End SOURCE Output

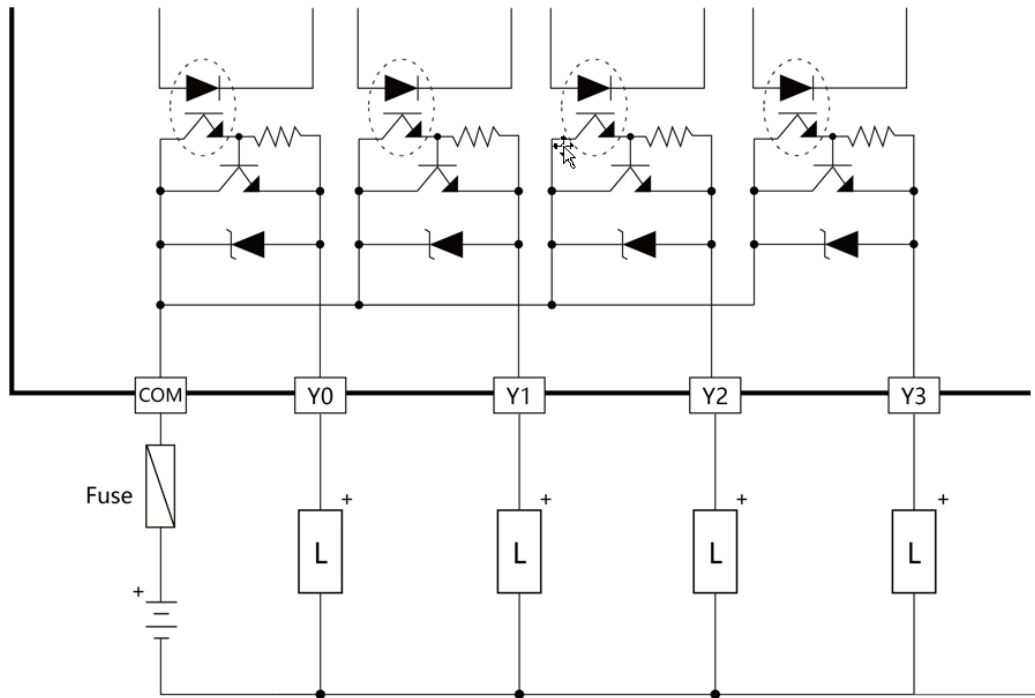

Transistor Single-End SOURCE Output

## 9-2-2 M16YR Specifications

### Appearance and Function

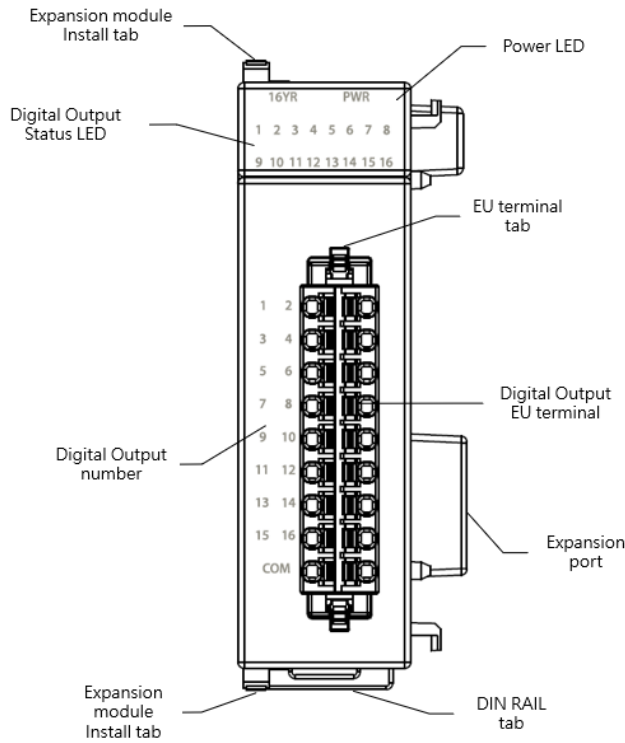

M M16R Appearance

### Technical Specification

#### M16YR Technical Specification Table

item		Technical Specifications
Model		M16YR
Output Points		16
Output Points Type		Single-End Relay Output
Maximum output frequency		For ON/OFF · not for frequent exchange
Working Voltage		<250VAC,30VDC
Maximum Load Current	Resistive	2A/single · 8A/common
	Inductive	80VA(AC)/24VA(DC)
Maximum Voltage Drop/conducting resistance		0.06V(Initial)
Minimum Load		2mA/DC Power
Leakage Current		-
Maximum Output Delay Time	ON > OFF	10ms
	OFF > ON	
Over Current Protection		N/A
Isolation Type		Electromagnetic Isolation, 1500VAC, 1 minute
SINK /SOURCE Type		Bilateral device, can be arbitrarily set to SINK/SOURCE output

Operating Ambient Temperature	0~55°C
Relative Humidity	5 ~ 95% (non-condensing, RH-2)
Altitude	≤2000m
Vibration Resistance (Fixed by DIN RAIL)	5~8.4Hz Amplitude: 3.5 8.4~150Hz Constant acceleration:19.6m/s <sup>2</sup> (2G) 10G, 10 times each along the 3 axes (IEC61131-2 Standard)
Shockproof	10G, 3 times each along the 3 axes
Noise Suppression	1500Vp-p, Width: 1us
Withstand Voltage	1500 VAC 1 minute (Between power terminals and input/output terminals, and between all external terminals and the housing)


Status Indicator

M16YR Status Indicator Table

Indicator	instruction
PWR Indicator	Power ON: Green Light Power OFF: No Lights
1~16 Output Indicator	ON: Green Light OFF: No Lights

Wiring

➤ Single-End Relay Output Circuit

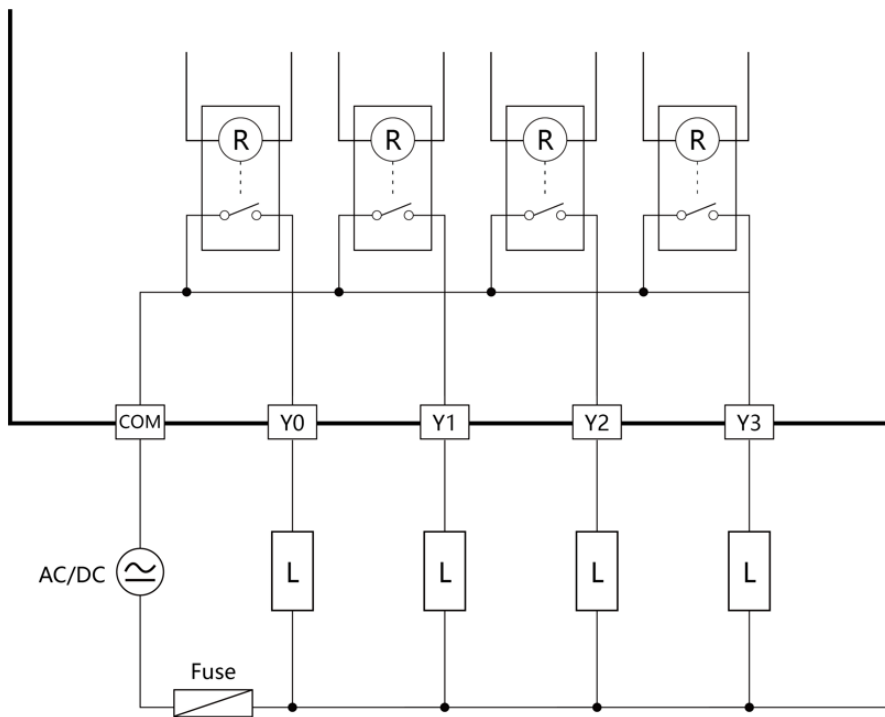


Single-End Relay Output Circuit

## 9-3 Digital Input /Output Combo Expansion Module Specifications

If the digital I/O combo expansion module of the M-Series CPU module is not enough for a specific application, then can expand it with the additional expansion modules.

### 9-3-1 M1616XYT / M1616XTJ Specification

#### Appearance and Function

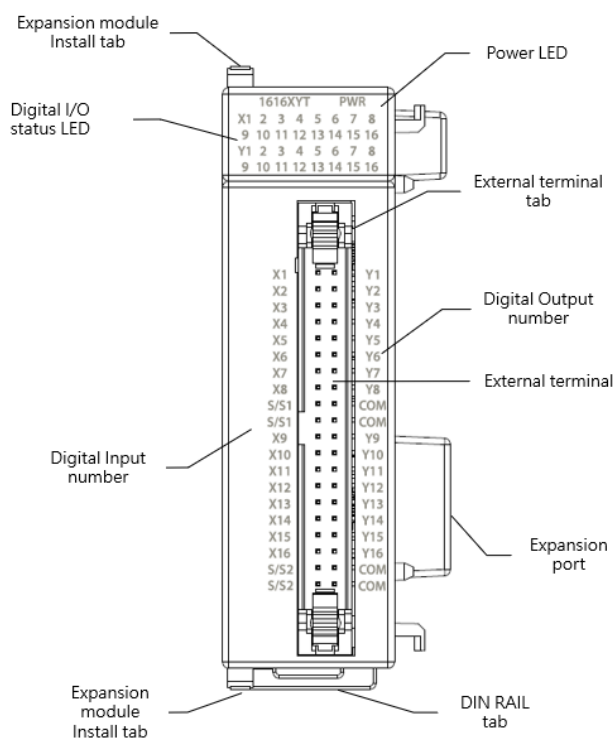

M1616XYT / M1616XYJ Appearance

#### Technical Specifications

#### M1616XYT / M1616XYJ Input Technical Specifications Table

item	Technical Specifications	
Model	M1616XYT / M1616XYJ	
Input Points	16	
Input Points Type	24VDC Single-end input	
Maximum input frequency	Medium Speed · 1kHz	
Input Signal Voltage	24VDC±10%	
Input Current Threshold	ON Current	> 4mA
	OFF Current	< 1.5mA
Maximum Input Current	7.6mA	
Input Resistance	5.6kΩ	
Isolation Type	Transformer/ Photocoupler Isolation · 1500VAC/1 minute	
SINK /SOURCE Wiring	Via variation of internal common terminal S/S and external common wiring	
Noise Filtering Time Constant	DHF(0 ~ 70ms) + AHF(0.47μs)	
Operating Ambient Temperature	0~55°C	
Relative Humidity	5 ~ 95% (non-condensing, RH-2)	
Altitude	≤2000m	

Vibration Resistance (Fixed by DIN RAIL)	5~8.4Hz Amplitude: 3.5 8.4~150Hz Constant acceleration:19.6m/s <sup>2</sup> (2G) 10G, 10 times each along the 3 axes (IEC61131-2 Standard)
Shockproof	10G, 3 times each along the 3 axes
Noise Suppression	1500Vp-p, Width: 1us
Withstand Voltage	1500 VAC 1 minute (Between power terminals and input/output terminals, and between all external terminals and the housing)

### M1616XYT / M1616XYJ Output Technical Specifications Table


item		Technical Specifications
model		M1616XYT / M1616XYJ
Output Points		16
Output Points Type		Single-End Transistor Output; T-Transistor SINK(NPN) output; J-Transistor SOURCE(PNP) output
Maximum output frequency		Medium · 1kHz
Working Voltage		5~30VDC
Maximum Load Current	Resistive	0.5A
	Inductive	
Maximum Voltage Drop/conducting resistance		2.2V
Minimum Load		-
Leakage Current		< 0.1mA/30VDC
Maximum Output Delay Time	ON > OFF	< 10μS
	OFF > ON	< 40μS
Over Current Protection		N/A
Isolation Type		Photocoupler Isolation, 500VAC, 1 minute
SINK /SOURCE Type		Choose SINK/SOURCE by models and non-exchangeable
Operating Ambient Temperature		0~55°C
Relative Humidity		5 ~ 95% (non-condensing, RH-2)
Altitude		≤2000m
Vibration Resistance (Fixed by DIN RAIL)	5~8.4Hz Amplitude: 3.5 8.4~150Hz Constant acceleration:19.6m/s <sup>2</sup> (2G) 10G, 10 times each along the 3 axes (IEC61131-2 Standard)	
Shockproof	10G, 3 times each along the 3 axes	
Noise Suppression	1500Vp-p, Width: 1us	
Withstand Voltage	1500 VAC 1 minute (Between power terminals and input/output terminals, and between all external terminals and the housing)	

**Status Indicator****M16X Status Indicator Table**

Indicator	instruction
PWR Indicator	Power ON: Green Light Power OFF: No Lights
1~16 Input Indicator	ON: Green Light OFF: No Lights
1~16 output Indicator	ON: Green Light OFF: No Lights


**Wiring**

➤ Wiring of single-end common SINK input

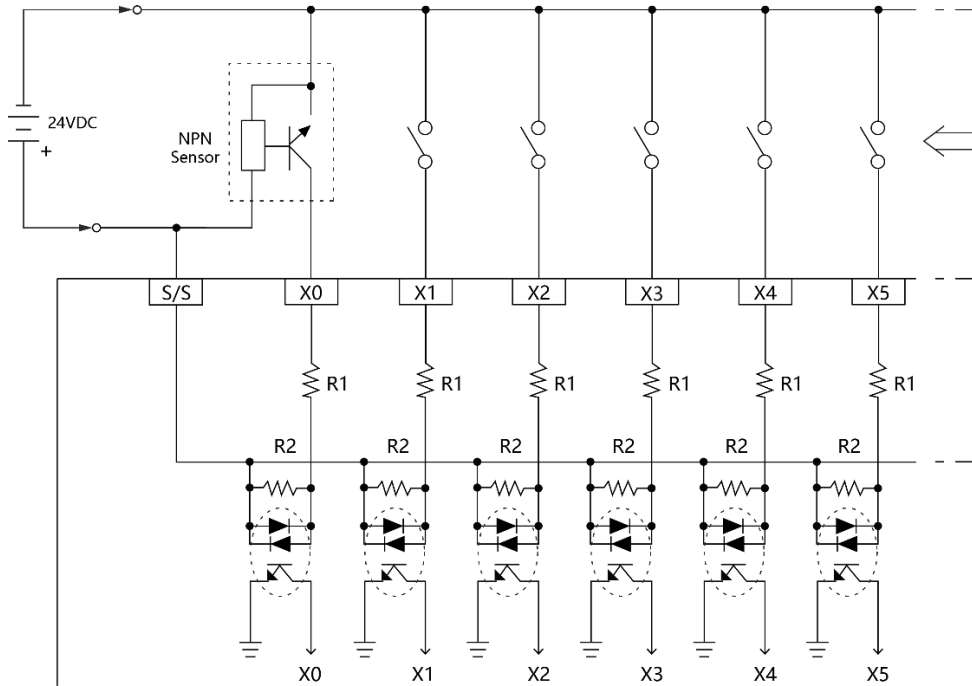

Wiring of single-end common SINK input


➤ Wiring of single-end common SOURCE input

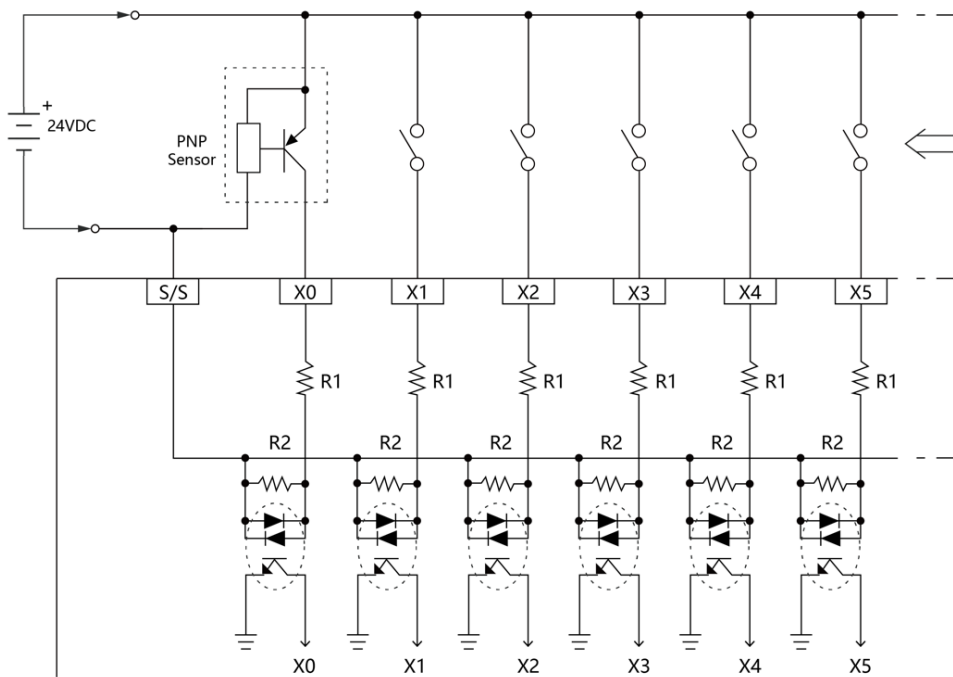

Wiring of single-end common SOURCE input




➤ Transistor Single-End SINK Output

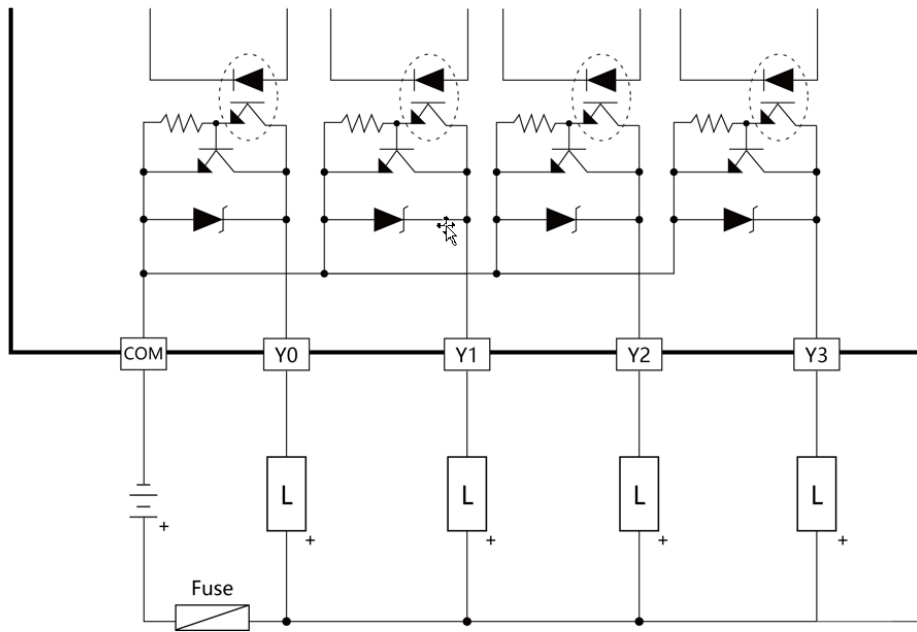

Transistor Single-End SINK Output

➤ Transistor Single-End SOURCE Output

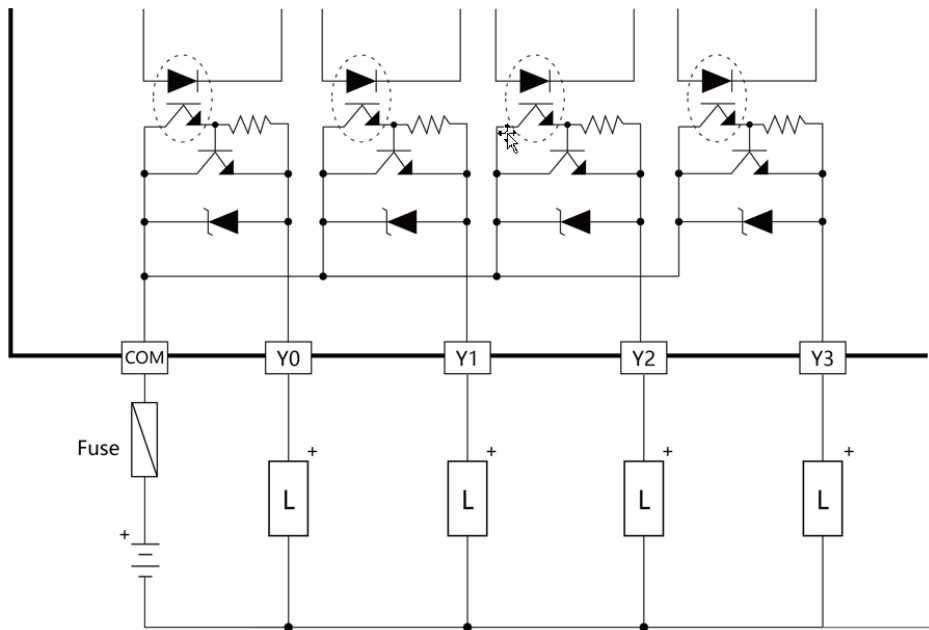


Transistor Single-End SOURCE Output

## 9-4 Analog Input Expansion Module Specifications

If the Analog expansion module of the M-Series CPU module is not enough for a specific application, then expand it with the additional expansion modules.

### 9-4-1 M04AD Specification

#### Appearance and Function

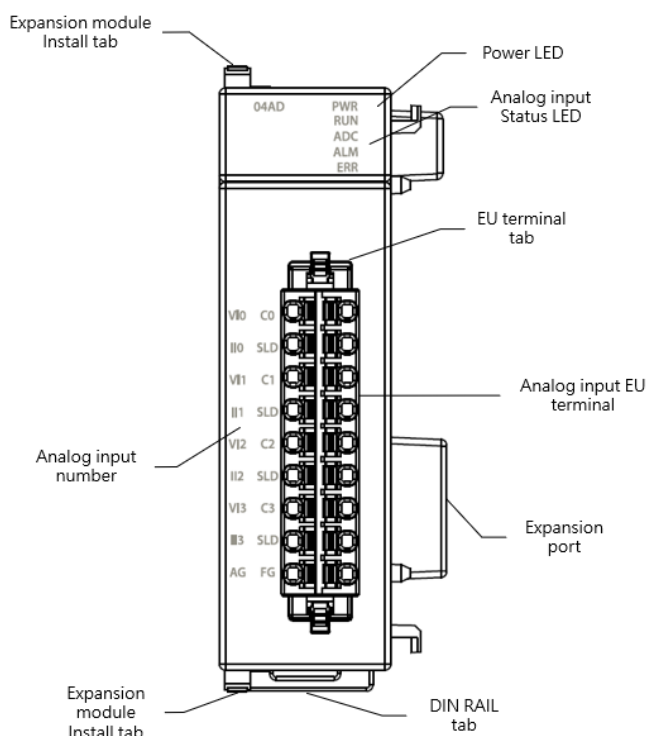

M04AD Appearance

#### Technical Specification

##### M04AD Technical Specification Table

item	Technical Specification			
Model	M04AD			
Input Point	4			
Conversion speed	High Speed: 300us/Ch Medium Speed: 500us/Ch Low Speed: 1ms/Ch 50Hz filter: 80ms/Ch 60Hz filter: 68ms/Ch			
Analog Input Characteristics and Resolution	Analog input range		Resolution	
	Voltage	-10~+10V	-8192~8191	1.22mV
		-5~+5V	-8192~8191	0.61mV
		0~10V	0~16383	0.61mV
		0~5V	0~16383	0.305mV
		1~5V	0~16383	0.244mV
	Current	-20mA~+20mA	-8192~8191	2.44uA
		0~20mA	0~16383	1.22uA


		4~20mA	0~16383	0.976uA
Conversion precision	Voltage	±0.1% (25°C±5°C) ±0.2% (0 ~ 55°C)		
	Current	±0.2% (25°C±5°C) ±0.4% (0 ~ 55°C)		
AD Converter	24-Bit			
Input Resistance	Voltage : 1MΩ Current : 250Ω			
Hardware maximum input	Voltage : - 15V ~ + 15V Current : -30mA~+30mA			
Insulation	Between analog input and CPU : insulated ( Digital isolators, transformers ) Between analog input channels : non-insulated			
Operating Ambient Temperature	0~55°C			
Relative Humidity	5 ~ 95% (non-condensing, RH-2)			
Altitude	≤2000m			
Vibration Resistance (Fixed by DIN RAIL)	5~8.4Hz Amplitude: 3.5 8.4~150Hz Constant acceleration:19.6m/s <sup>2</sup> (2G) 10G, 10 times each along the 3 axes (IEC61131-2 Standard)			
Shockproof	10G, 3 times each along the 3 axes			
Noise Suppression	1500Vp-p, Width: 1us			
Withstand Voltage	1500 VAC 1 minute (Between power terminals and input/output terminals, and between all external terminals and the housing)			

### Status Indicator

#### M04AD Status Indicator Table

Indicator	instruction
PWR Indicator	Power ON: Green Light Power OFF: No Lights
RUN Indicator	Running: Green Light
ADC Indicator	ADC Converting: Yellow Light
ALM Indicator	On Alert: Red Light
ERR Indicator	In ERROR: Red Light


Wiring

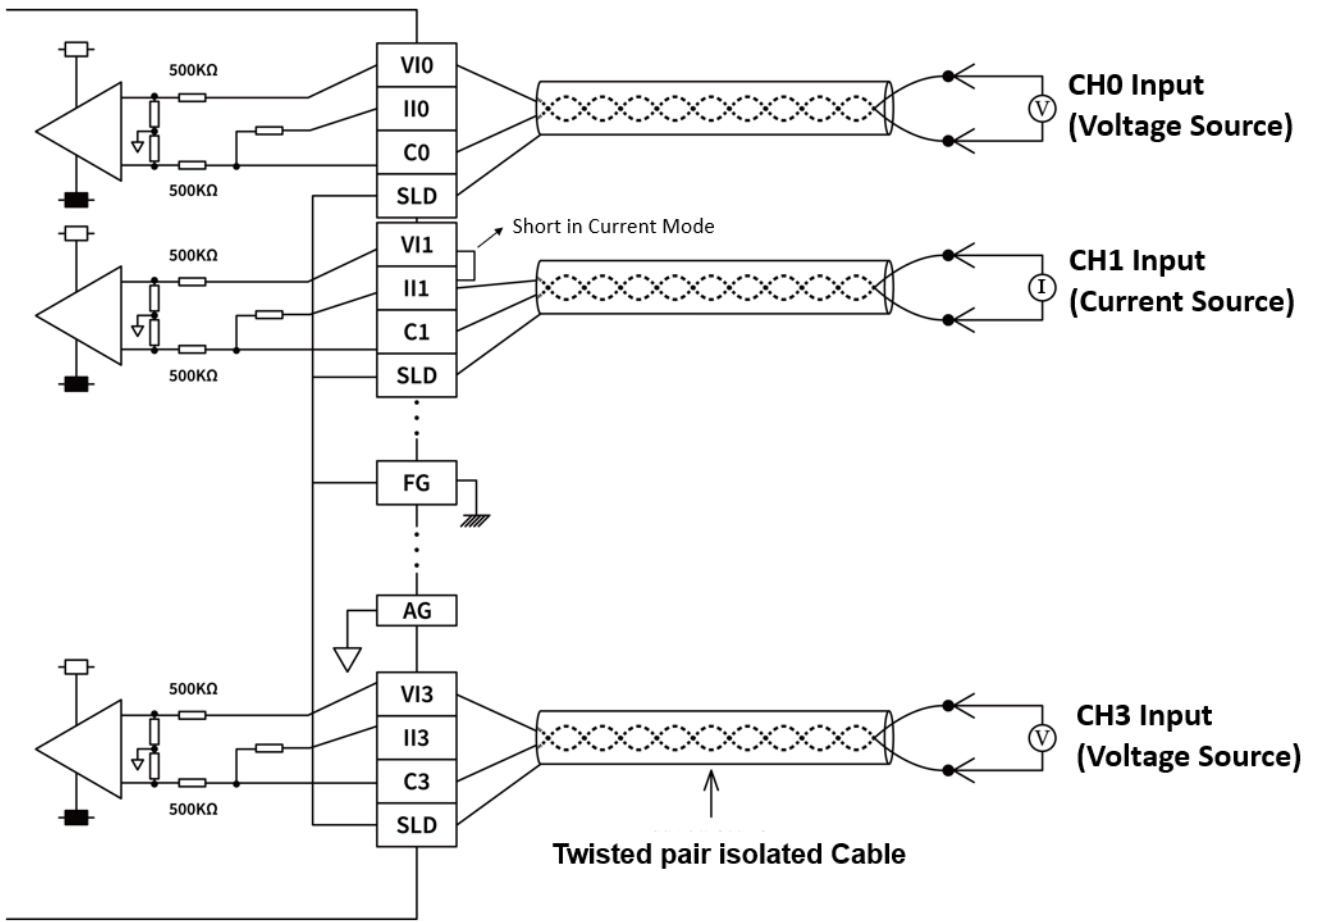

M04AD Wiring

## 9-4-2 M04ADR Specification

## Appearance and Function

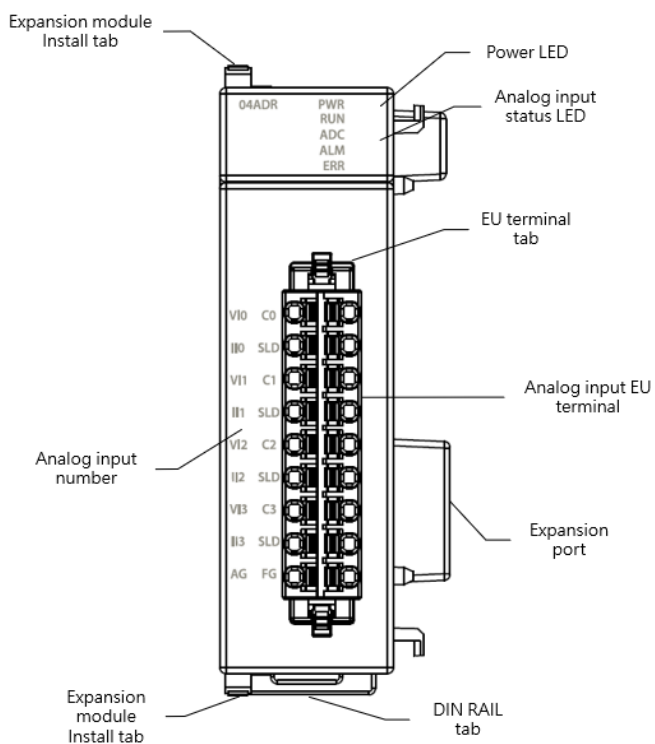

M04ADR Appearance

## Technical Specification

## M04ADR Technical Specification

item	Technical Specification			
Model	M04ADR			
Input Points	4			
Conversion speed	High-Speed: 1.5ms/Ch. Medium-Speed: 4ms/Ch. Low-Speed: 15ms/Ch. 50Hz Filter: 80ms/Ch. 60Hz Filter: 68ms/Ch.			
Analog Input Characteristics and Resolution	Analog input range		Data	
	Voltage	-10~+10V	-80000~80000	0.125mV
		-5~+5V	-80000~80000	0.0625mV
		0~10V	0~80000	0.125mV
		0~5V	0~80000	0.0625mV
		1~5V	0~80000	0.05mV
	Current	-20mA~+20mA	-80000~80000	0.25uA
		0~20mA	0~80000	0.25uA
4~20mA		0~80000	0.2uA	
Conversion precision	Voltage	$\pm 0.1\%$ (25°C $\pm 5^\circ\text{C}$ ) $\pm 0.2\%$ (0 ~ 55°C)		
	Current	$\pm 0.1\%$ (25°C $\pm 5^\circ\text{C}$ ) $\pm 0.2\%$ (0 ~ 55°C)		


AD Converter	24-Bit
Input Resistance	Voltage : 1M $\Omega$ Current : 250 $\Omega$
Hardware maximum input	Voltage : - 15V ~ + 15V Current : -30mA~+30mA
Insulation	Between analog input and CPU : insulated ( Digital isolators, transformers ) Between analog input channels : non-insulated
Operating Ambient Temperature	0~55°C
Relative Humidity	5 ~ 95% (non-condensing, RH-2)
Altitude	$\leq$ 2000m
Vibration Resistance (Fixed by DIN RAIL)	5~8.4Hz Amplitude: 3.5 8.4~150Hz Constant acceleration:19.6m/s <sup>2</sup> (2G) 10G, 10 times each along the 3 axes (IEC61131-2 Standard)
Shockproof	10G, 3 times each along the 3 axes
Noise Suppression	1500Vp-p, Width: 1 $\mu$ s
Withstand Voltage	1500 VAC 1 minute (Between power terminals and input/output terminals, and between all external terminals and the housing)

### Status Indicator

#### M04ADR Status Indicator Table

Indicator	instruction
PWR Indicator	Power ON: Green Light Power OFF: No Lights
RUN Indicator	Running: Green Light
ADC Indicator	ADC Converting: Yellow Light
ALM Indicator	On Alert: Red Light
ERR Indicator	In ERROR: Red Light

Wiring

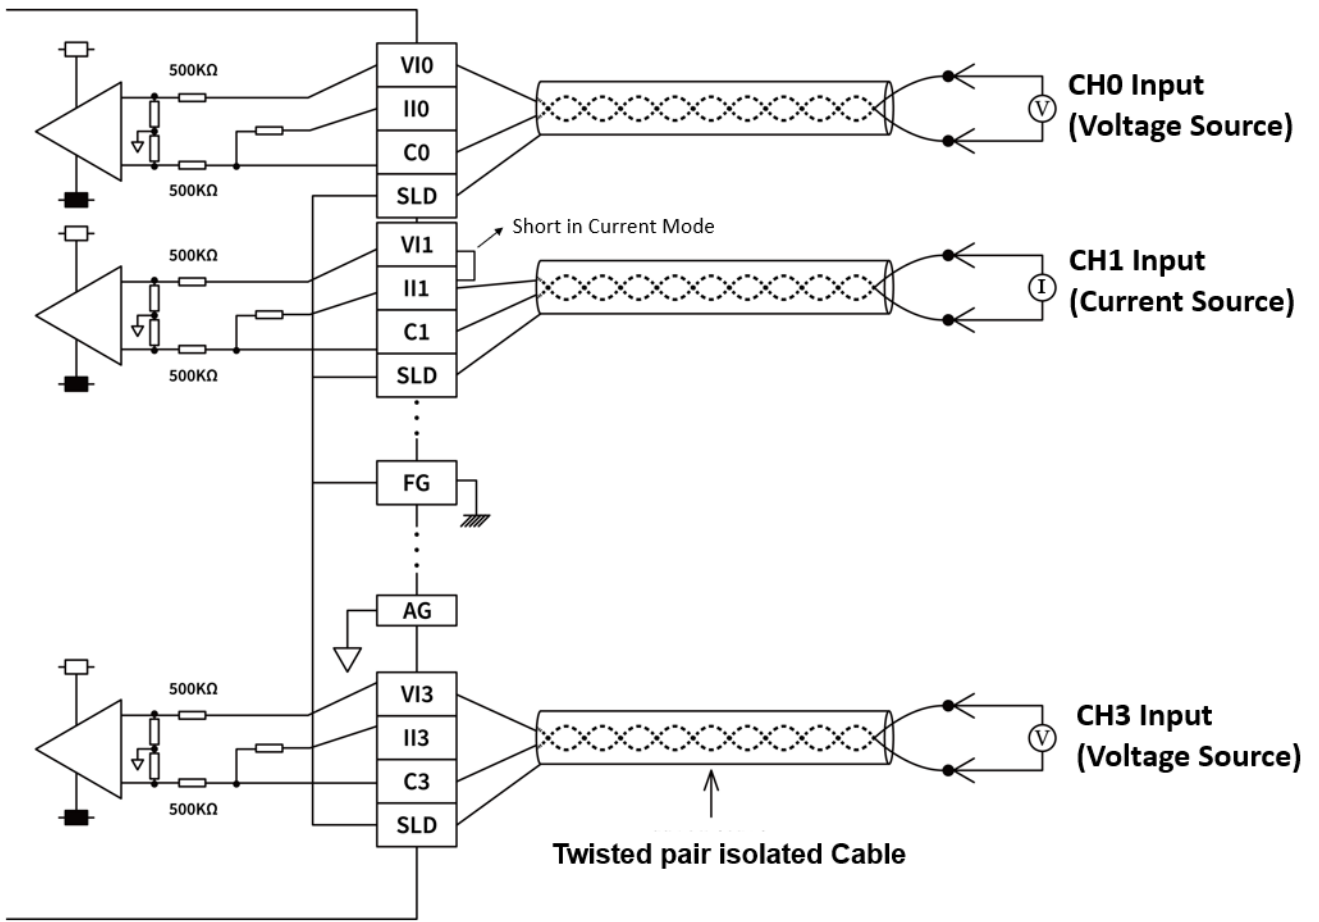


M04ADR Wiring

## 9-5 Analog Output Expansion Module Specifications

If the Analog expansion module of the M-Series CPU module is not provided with analog output interface, then expand it with the additional expansion modules.

### 9-5-1 M04DA Specification

#### Appearance and Function

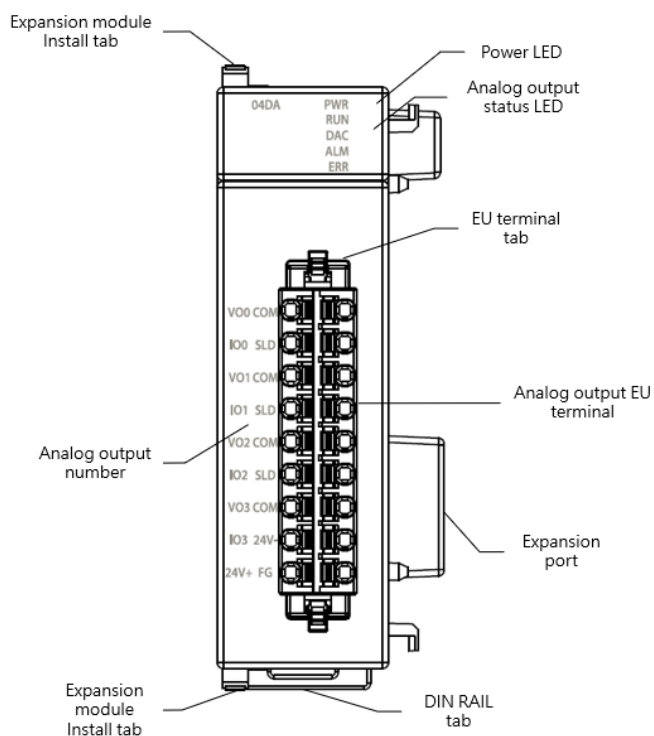

M04DA Appearance

#### Technical Specification

##### M04DA Technical Specification

item	Technical Specification			
model	M04DA			
Output Point	4			
Conversion speed	1ms/channel			
Analog output characteristics and resolution	Analog output range		Data	
	Voltage	-10~+10V	-8192~8191	1.22mV
		-5~+5V	-8192~8191	0.61mV
		0~10V	0~16383	0.61mV
		0~5V	0~16383	0.305mV
		1~5V	0~16383	0.244mV
	Current	0~20mA	0~16383	1.22μA
4~20mA		0~16383	0.976μA	
Conversion precision	Voltage	±0.2% (25°C±5°C) ±0.5% (0~55°C)		
	Current	±0.2% (25°C±5°C) ±0.5% (0~55°C)		




DA Converter	24-Bit	
Minimum load impedance	Voltage : 1k $\Omega$	
Maximum load impedance	Current : 500 $\Omega$	
hardware output	Voltage	-10.2~+10.2V -5.1~+5.1V -0.2~10.2V -0.1~5.1V 0.9~5.1V
	Current	0~20.2mA 4~20.2mA
Insulation	Between analog input and CPU : insulated ( Digital isolators, transformers ) Between analog input channels : non-insulated	
Operating Ambient Temperature	0~55 $^{\circ}$ C	
Relative Humidity	5 ~ 95% (non-condensing, RH-2)	
Altitude	$\leq$ 2000m	
Vibration Resistance (Fixed by DIN RAIL)	5~8.4Hz Amplitude: 3.5 8.4~150Hz Constant acceleration:19.6m/s <sup>2</sup> (2G) 10G, 10 times each along the 3 axes (IEC61131-2 Standard)	
Shockproof	10G, 3 times each along the 3 axes	
Noise Suppression	1500Vp-p, Width: 1 $\mu$ s	
Withstand Voltage	1500 VAC 1 minute (Between power terminals and input/output terminals, and between all external terminals and the housing)	

### Status Indicator

#### M04DA Status Indicator Table


Indicator	instruction
PWR Indicator	Power ON: Green Light Power OFF: No Lights
RUN Indicator	Running: Green Light
DAC Indicator	DAC Converting: Yellow Light
ALM Indicator	On Alert: Red Light
ERR Indicator	In ERROR: Red Light

Wiring

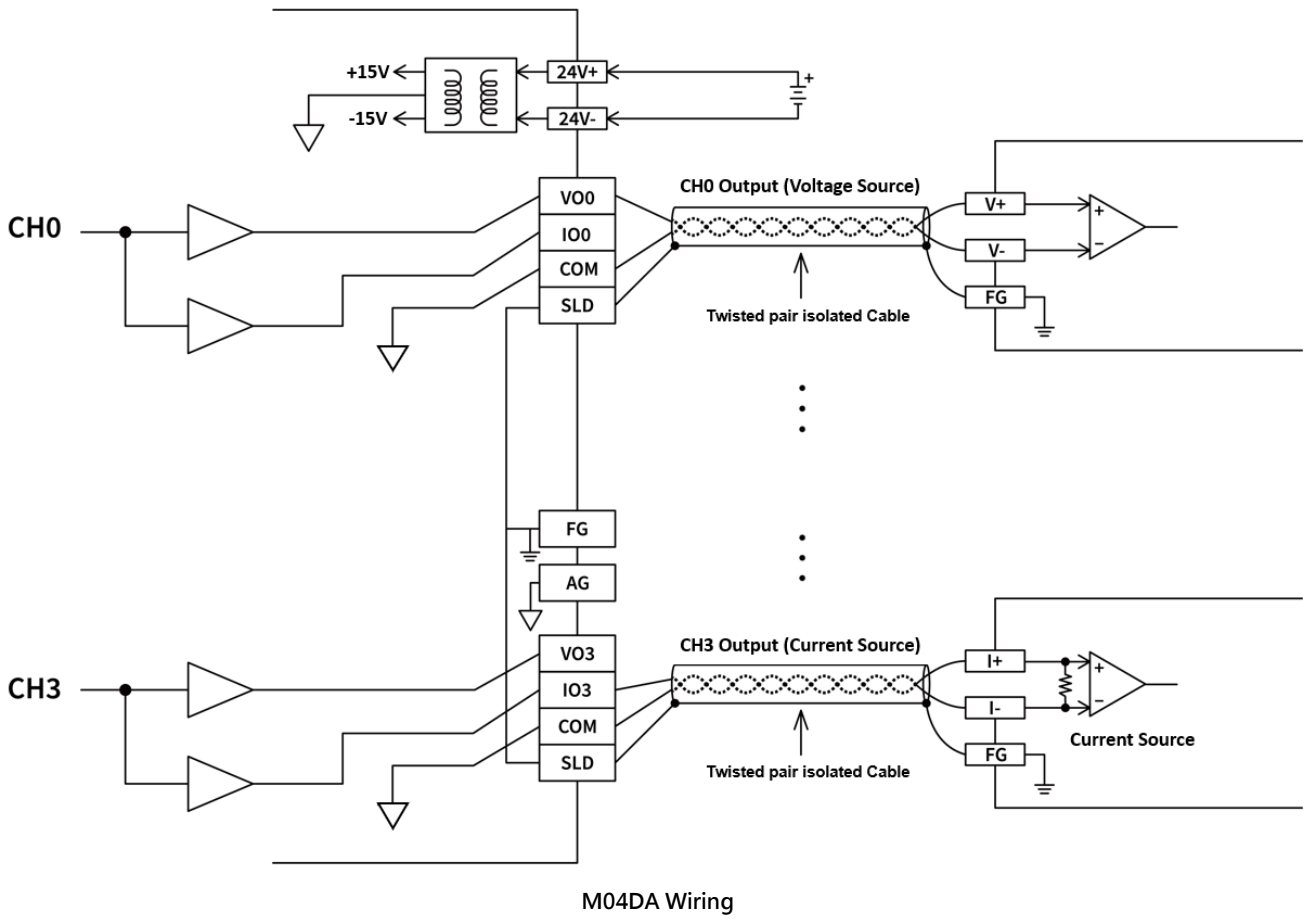

## 9-5-2 M04DAR Specification

### Appearance and Function

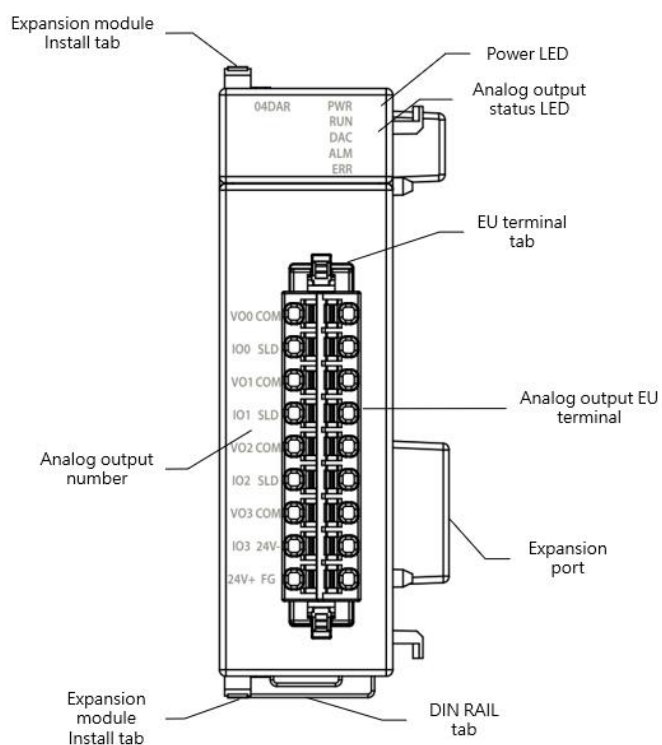

M04DAR Appearance

### Technical Specification

#### M04DAR Technical Specification

item	Technical Specification			
model	M04DAR			
Output Point	4			
Conversion speed	0.5ms/channel			
Analog output characteristics and resolution	Analog output range		Data	
	Voltage	-10~+10V	-27000~27000	0.37mV
		-5~+5V	-27000~27000	0.185mV
		0~10V	0~27000	0.37mV
		0~5V	0~27000	0.185mV
		1~5V	0~27000	0.48mV
	Current	0~20mA	0~27000	0.74μA
4~20mA		0~27000	0.592μA	
Conversion precision	Voltage	±0.05% (25°C±5°C) ±0.3% (0~55°C)		
	Current	±0.05% (25°C±5°C) ±0.3% (0~55°C)		
DA Converter	24-Bit			
Minimum load impedance	Voltage : 1kΩ			
Maximum load impedance	Current : 500Ω			
hardware output	Voltage	-10.2~+10.2V		
		-5.1~+5.1V		


		-0.2~10.2V -0.1~5.1V 0.9~5.1V
	Current	0~20.2mA 4~20.2mA
Insulation	Between analog input and CPU : insulated ( Digital isolators, transformers ) Between analog input channels : non-insulated	
Operating Ambient Temperature	0~55°C	
Relative Humidity	5 ~ 95% (non-condensing, RH-2)	
Altitude	≤2000m	
Vibration Resistance (Fixed by DIN RAIL)	5~8.4Hz Amplitude: 3.5 8.4~150Hz Constant acceleration:19.6m/s <sup>2</sup> (2G) 10G, 10 times each along the 3 axes (IEC61131-2 Standard)	
Shockproof	10G, 3 times each along the 3 axes	
Noise Suppression	1500Vp-p, Width: 1us	
Withstand Voltage	1500 VAC 1 minute (Between power terminals and input/output terminals, and between all external terminals and the housing)	

### Status Indicator

#### M04DAR Status Indicator Table

Indicator	instruction
PWR Indicator	Power ON: Green Light Power OFF: No Lights
RUN Indicator	Running: Green Light
DAC Indicator	DAC Converting: Yellow Light
ALM Indicator	On Alert: Red Light
ERR Indicator	In ERROR: Red Light

Wiring

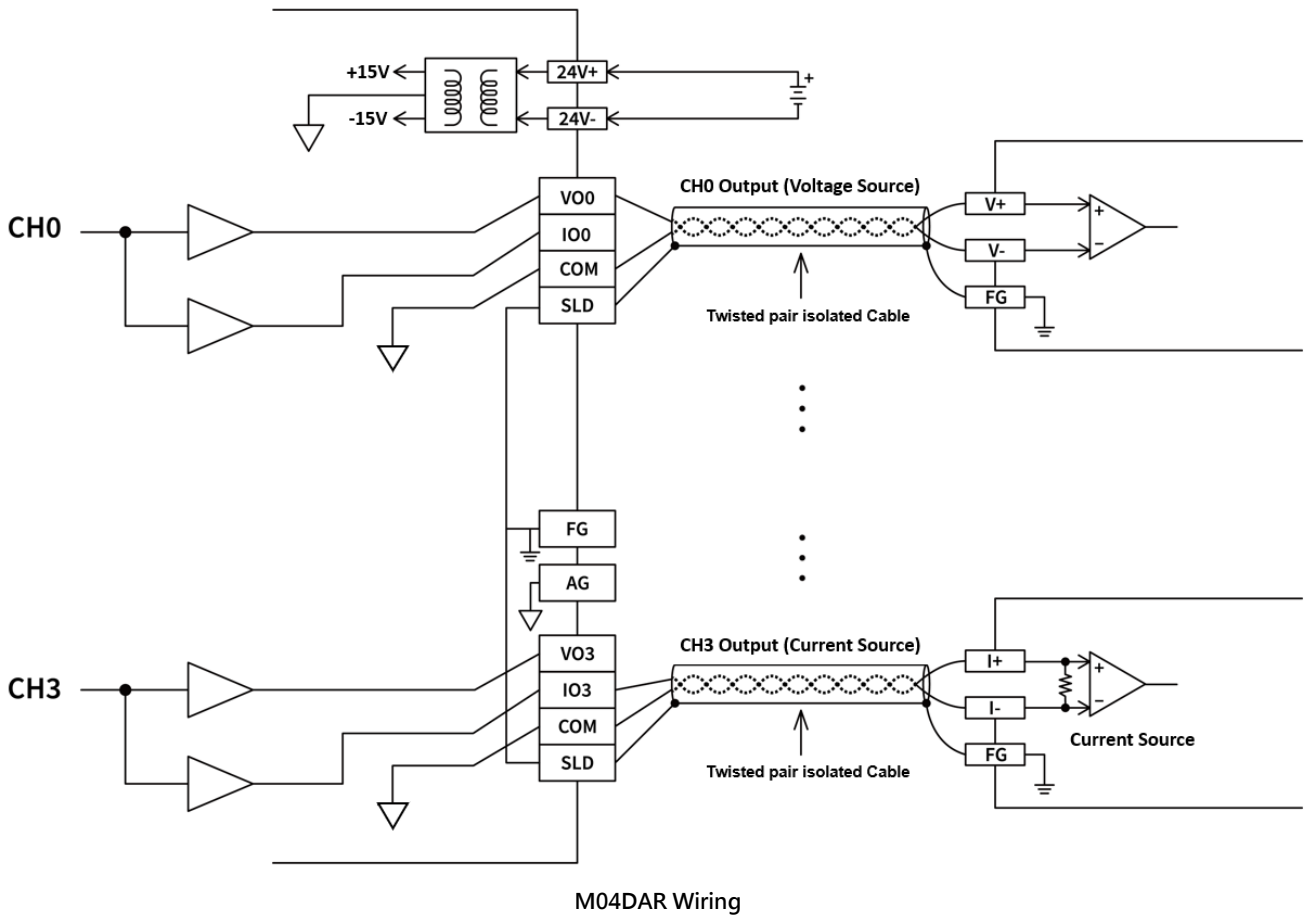


## 9-6 Analog Input/Output Combo Expansion Module Specifications

If the Analog expansion module of the M-Series CPU module is not provided with analog output interface, then expand it with the additional expansion modules.

### 9-6-1 M0202AH Specifications

#### Appearance and Function

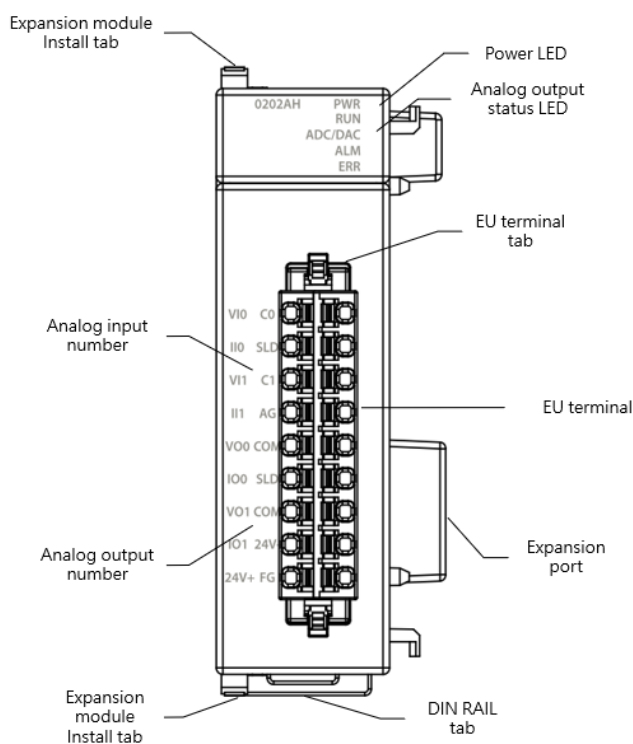

M0202AH Appearance

#### Technical Specification

##### M0202AH Technical Specification

item	Technical Specification			
Model	M0202AH			
Input Specifications				
Input Point	2			
Conversion speed	High-Speed: 300us/Ch Medium-Speed: 500us/Ch Low-Speed: 1ms/Ch 50Hz filter: 80ms/Ch 60Hz filter: 68ms/Ch			
Analog Input Characteristics and Resolution	Analog input range		Data	Resolution
	Voltage	-10~+10V	-8192~8191	1.22mV
		-5~+5V	-8192~8191	0.61mV
		0~10V	0~16383	0.61mV
		0~5V	0~16383	0.305mV
		1~5V	0~16383	0.244mV
	Current	-20mA~+20mA	-8192~8191	2.44uA
0~20mA		0~16383	1.22uA	


		4~20mA	0~16383	0.976μA
Conversion precision	Voltage	±0.1% (25°C±5°C) ±0.2% (0~55°C)		
	Current	±0.2% (25°C±5°C) ±0.4% (0~55°C)		
AD Converter	24-Bit			
Input Resistance	Voltage : 1MΩ Current : 250Ω			
Hardware maximum input	Voltage : - 15V ~ + 15V Current : -30mA~+30mA			
Output Specifications				
Output Point	2			
Conversion speed	1ms/channel			
Analog output characteristics and resolution	Analog output range		Data	Resolution
	Voltage	-10~+10V	-8192~8191	1.22mV
		-5~+5V	-8192~8191	0.61mV
		0~10V	0~16383	0.61mV
		0~5V	0~16383	0.305mV
		1~5V	0~16383	0.244mV
	Current	0~20mA	0~16383	1.22μA
		4~20mA	0~16383	0.976μA
Conversion precision	Voltage	±0.2% (25°C±5°C) ±0.5% (0~55°C)		
	Current	±0.2% (25°C±5°C) ±0.5% (0~55°C)		
DA Converter	24-Bit			
Minimum load impedance	Voltage : 1kΩ			
Maximum load impedance	Current : 500Ω			
hardware output	Voltage	-10.2~+10.2V		
		-5.1~+5.1V		
-0.2~10.2V				
-0.1~5.1V				
0.9~5.1V				
Current	0~20.2mA			
	4~20.2mA			
Common Specifications				
Insulation	Between analog input and CPU : insulated ( Digital isolators, transformers ) Between analog input channels : non-insulated			
Operating Ambient Temperature	0~55°C			
Relative Humidity	5 ~ 95% (non-condensing, RH-2)			
Altitude	≤2000m			
Vibration Resistance (Fixed by DIN RAIL)	5~8.4Hz Amplitude: 3.5 8.4~150Hz Constant acceleration:19.6m/s <sup>2</sup> (2G) 10G, 10 times each along the 3 axes (IEC61131-2 Standard)			
Shockproof	10G, 3 times each along the 3 axes			
Noise Suppression	1500Vp-p, Width: 1us			
Withstand Voltage	1500 VAC 1 minute (Between power terminals and input/output terminals, and between all external terminals and the housing)			

**Status Indicator****M0202AH Status Indicator Table**

Indicator	instruction
PWR Indicator	Power ON: Green Light Power OFF: No Lights
RUN Indicator	Running: Green Light
ADC/DAC Indicator	ADC/DAC Converting: Yellow Light
ALM Indicator	On Alert: Red Light
ERR Indicator	In ERROR: Red Light



Wiring

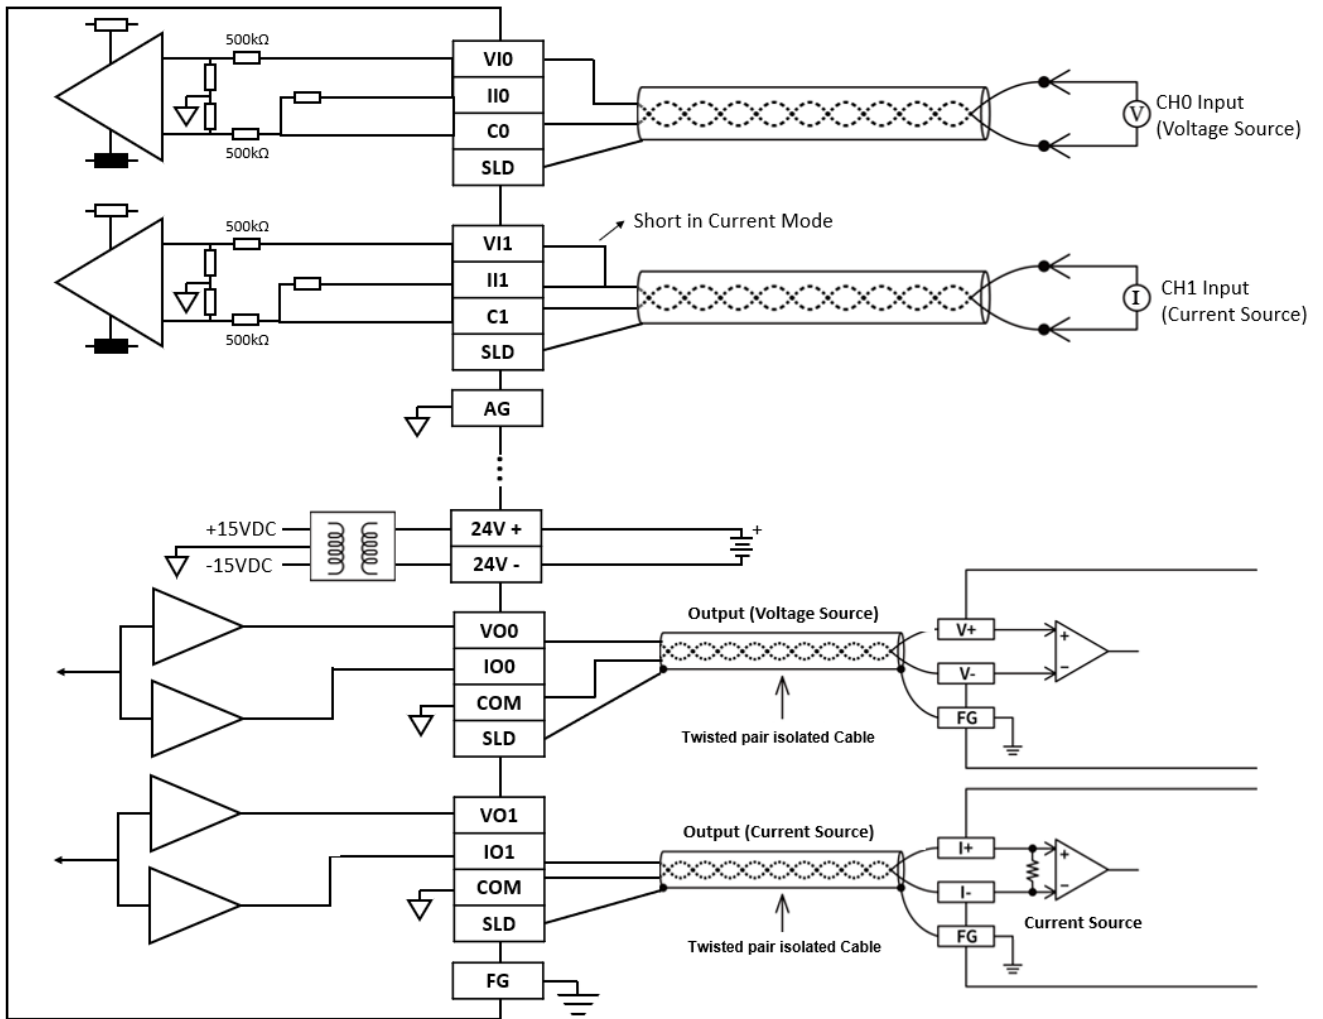


M0202AH Wiring

## 9-7 Temperature Expansion Module Specifications

If the temperature expansion module of the M-Series CPU module is not provided with temperature sensor interface, then expand it with the additional expansion modules.

### 9-7-1 M04TC Specification

#### Appearance and Function

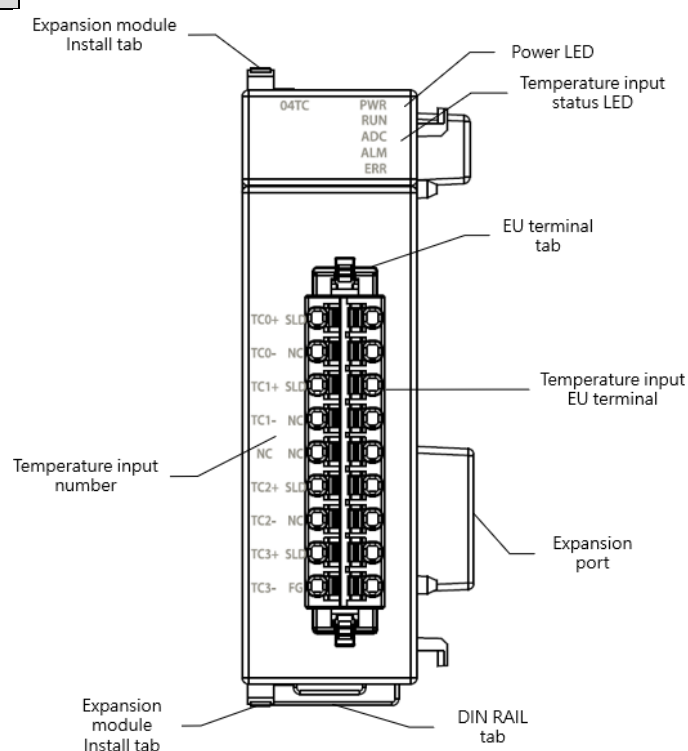

M04TC Appearance

#### Technical Specification

#### M04TC Technical Specifications Table

item	Technical Specification
Model	M04TC
Input Points	4
Resolution	0.1°C
Sampling cycle	High Speed:200ms/ch Standard:400ms/ch
Temperature sensor type	K, J, E, T, R, B, N, S, mV
Conversion precision	±0.5% (25°C±5°C) ±1% (0 ~ 55°C)
AD Converter	24-Bit
Operating mode	PID Control ON/OFF Control
Control cycle	1~100 Second
Tuning	PID Auto Tuning
Insulation	Between analog input and CPU : insulated ( Digital isolators ) Between analog input channels : insulated ( optocoupler isolator )


Operating Ambient Temperature	0~55°C
Relative Humidity	5 ~ 95% (non-condensing, RH-2)
Altitude	≤2000m
Vibration Resistance (Fixed by DIN RAIL)	5~8.4Hz Amplitude: 3.5 8.4~150Hz Constant acceleration:19.6m/s <sup>2</sup> (2G) 10G, 10 times each along the 3 axes (IEC61131-2 Standard)
Shockproof	10G, 3 times each along the 3 axes
Noise Suppression	1500Vp-p, Width: 1us
Withstand Voltage	1500 VAC 1 minute (Between power terminals and input/output terminals, and between all external terminals and the housing)

Status Indicator

M04TC Status Indicator Table

Indicator	instruction
PWR Indicator	Power ON: Green Light Power OFF: No Lights
RUN Indicator	Running: Green Light
ADC Indicator	ADC Converting: Yellow Light
ALM Indicator	On Alert: Red Light
ERR Indicator	In ERROR: Red Light


Wiring

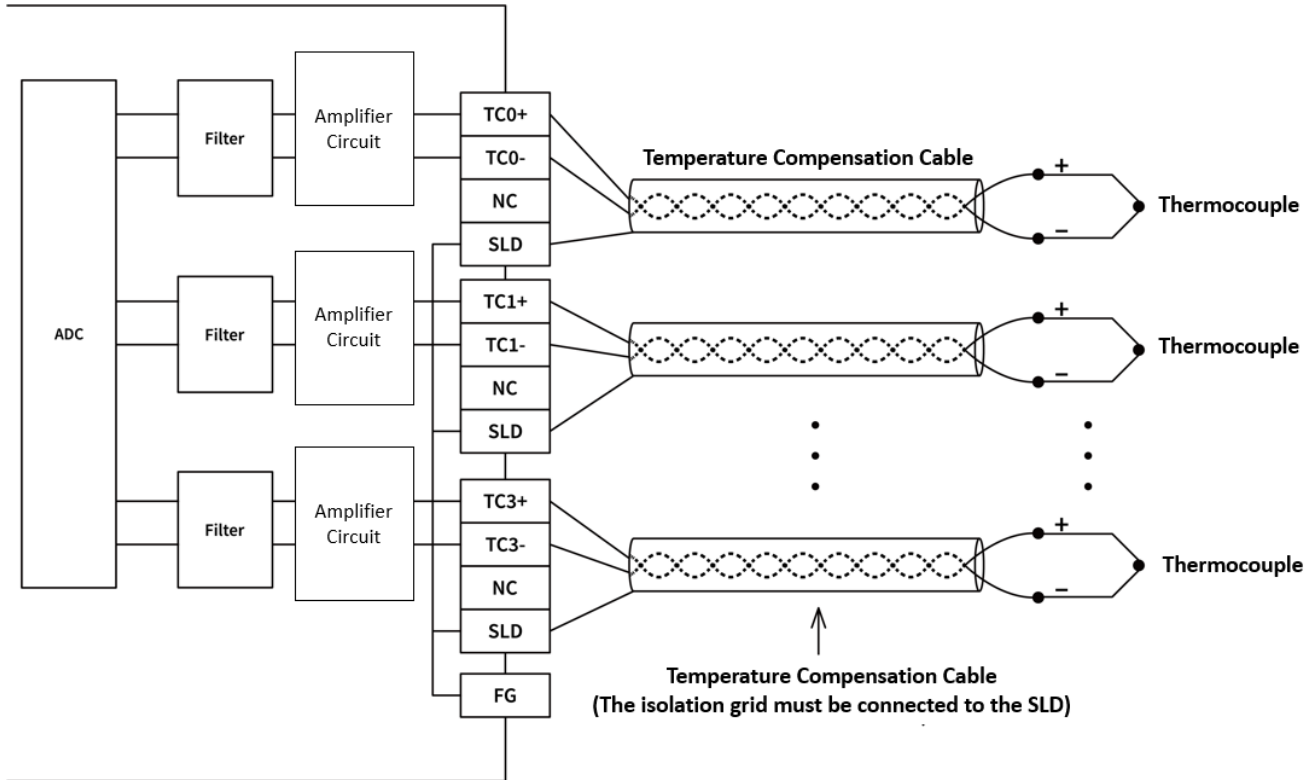

M04TC Wiring

## 9-7-2 M04TCR Specification

### Appearance and Function

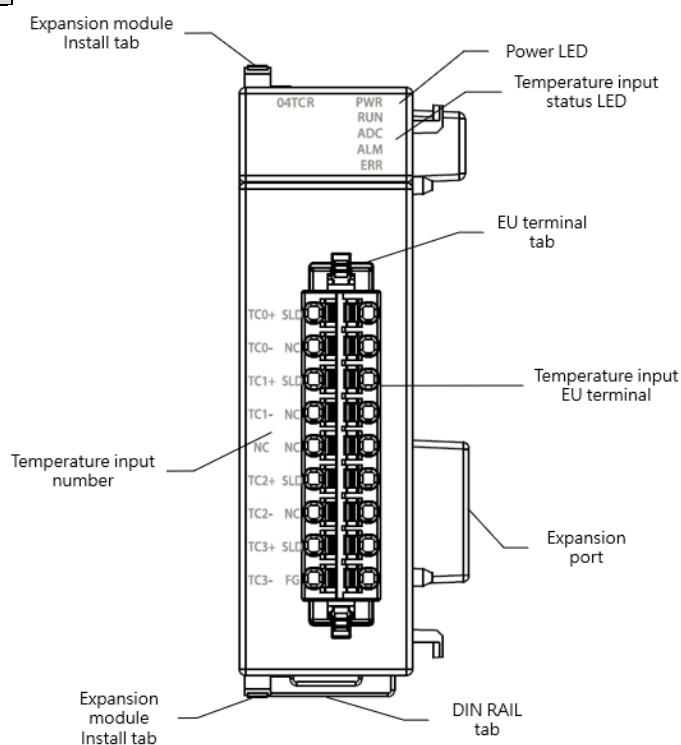

M04TCR Appearance

### Technical Specification

#### M04TCR Technical Specifications Table

item	Technical Specification
Model	M04TCR
Input Points	4
Resolution	0.1°C
Sampling cycle	High Speed:100ms/ch Standard:200ms/ch
Temperature sensor type	K,J,E,T,R,B,N,S,mV
Conversion precision	±0.2% (25°C±5°C) ±0.4% (0 ~ 55°C)
AD Converter	24-Bit
Operating mode	PID Control ON/OFF Control
Control cycle	1~100 Second
Tuning	PID Auto Tuning
Insulation	Between analog input and CPU : insulated ( Digital isolators ) Between analog input channels : insulated ( optocoupler isolator )
Operating Ambient Temperature	0~55°C
Relative Humidity	5 ~ 95% (non-condensing, RH-2)
Altitude	≤2000m
Vibration Resistance	5~8.4Hz Amplitude: 3.5


(Fixed by DIN RAIL)	8.4~150Hz Constant acceleration:19.6m/s <sup>2</sup> (2G) 10G, 10 times each along the 3 axes (IEC61131-2 Standard)
Shockproof	10G, 3 times each along the 3 axes
Noise Suppression	1500Vp-p, Width: 1us
Withstand Voltage	1500 VAC 1 minute (Between power terminals and input/output terminals, and between all external terminals and the housing)

Status Indicator

M04TCR Status Indicator Table

Indicator	instruction
PWR Indicator	Power ON: Green Light Power OFF: No Lights
RUN Indicator	Running: Green Light
ADC Indicator	ADC Converting: Yellow Light
ALM Indicator	On Alert: Red Light
ERR Indicator	In ERROR: Red Light

Wiring

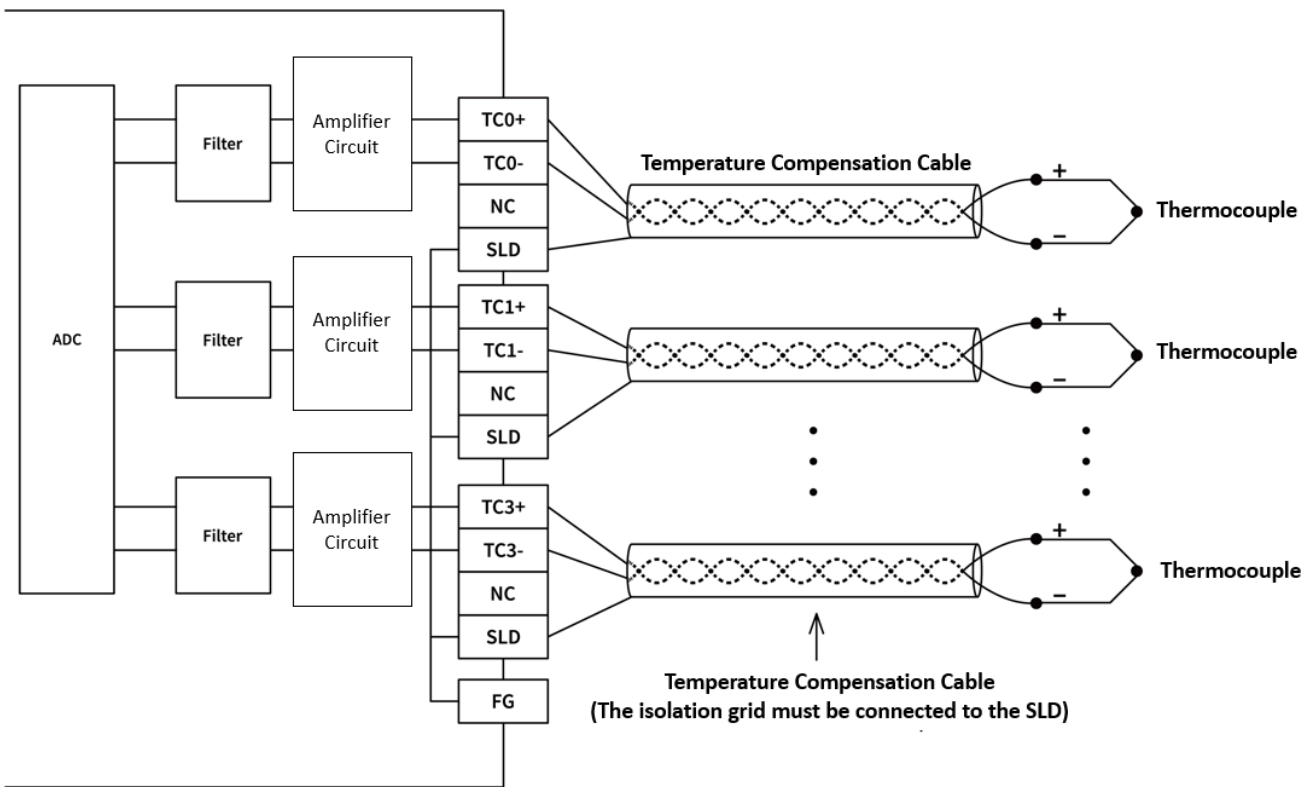


M04TCR Wiring

## 9-8 Temperature Combo Expansion Module Specifications

If the temperature combo expansion module of the M-Series CPU module is not provided with temperature sensor interface, then expand it with the additional expansion modules.

### 9-8-1 M0202TH Specification

#### Appearance and Function

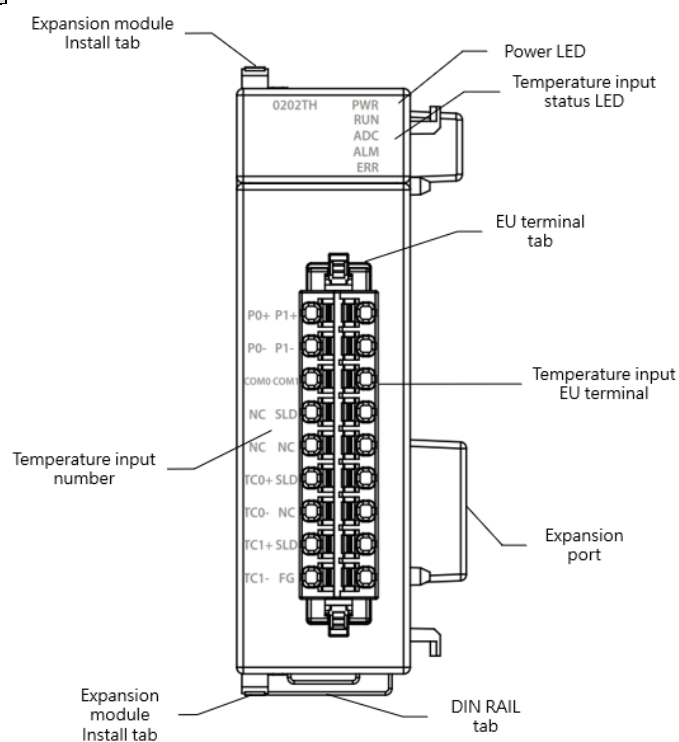

M0202TH Appearance

#### Technical Specification

#### M0202TH Technical Specifications Table

item	Technical Specification
Model	M0202TH
RTD Specifications	
Input Points	2
Resolution	0.1°C
Sampling cycle	100ms/ch
Temperature sensor type	Pt-100, Pt-1000, JPt-100, JPt-1000
Conversion precision	±0.1% (25°C±5°C) ±0.5% (0 ~ 55°C)
AD Converter	24-Bit
TC Specifications	
Input Points	2
Resolution	0.1°C
Sampling cycle	High-Speed: 200ms/ch Standard: 400ms/ch
Temperature sensor type	K, J, E, T, R, B, N, S, mV


Conversion precision	±0.5% (25°C±5°C) ±1% (0 ~ 55°C)
AD Converter	24-Bit
Common Specifications	
Operating mode	PID Control ON/OFF Control
Control cycle	1~100 Seconds
Tuning	PID Auto Tuning
Insulation	Between analog input and CPU : insulated ( Digital isolators ) Between analog input channels : insulated ( optocoupler isolator )
Operating Ambient Temperature	0~55°C
Relative Humidity	5 ~ 95% (non-condensing, RH-2)
Altitude	≤2000m
Vibration Resistance (Fixed by DIN RAIL)	5~8.4Hz Amplitude: 3.5 8.4~150Hz Constant acceleration:19.6m/s <sup>2</sup> (2G) 10G, 10 times each along the 3 axes (IEC61131-2 Standard)
Shockproof	10G, 3 times each along the 3 axes
Noise Suppression	1500Vp-p, Width: 1us
Withstand Voltage	1500 VAC 1 minute (Between power terminals and input/output terminals, and between all external terminals and the housing)

### Status Indicator

#### M0202TH Status Indicator Table

Indicator	instruction
PWR Indicator	Power ON: Green Light Power OFF: No Lights
RUN Indicator	Running: Green Light
ADC Indicator	ADC Converting: Yellow Light
ALM Indicator	On Alert: Red Light
ERR Indicator	In ERROR: Red Light

Wiring

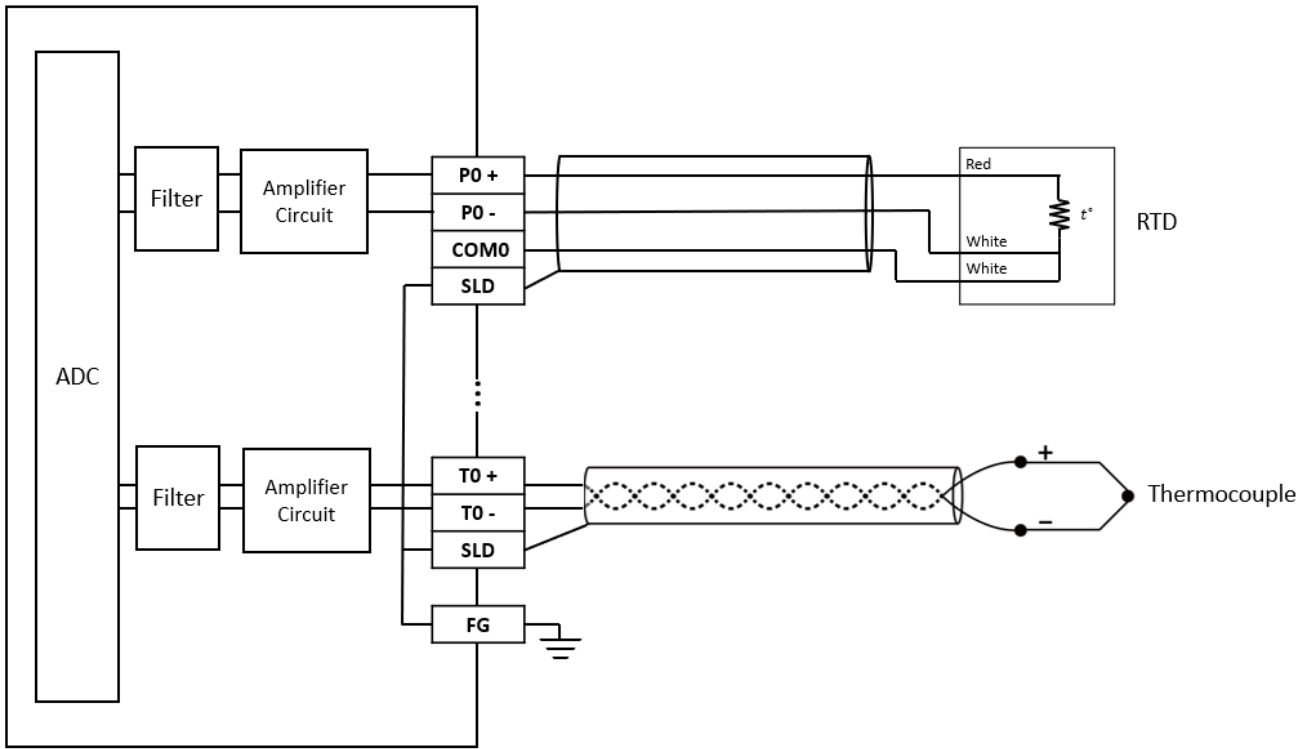

M0202TH Wiring




## 9-9 Load Cell Expansion Module Specifications

If the Load Cell expansion module of the M Series CPU module is not provided with load cell measurement interface, then expand it with the additional expansion modules.

### 9-9-1 M02LC Specifications

#### Appearance and Function

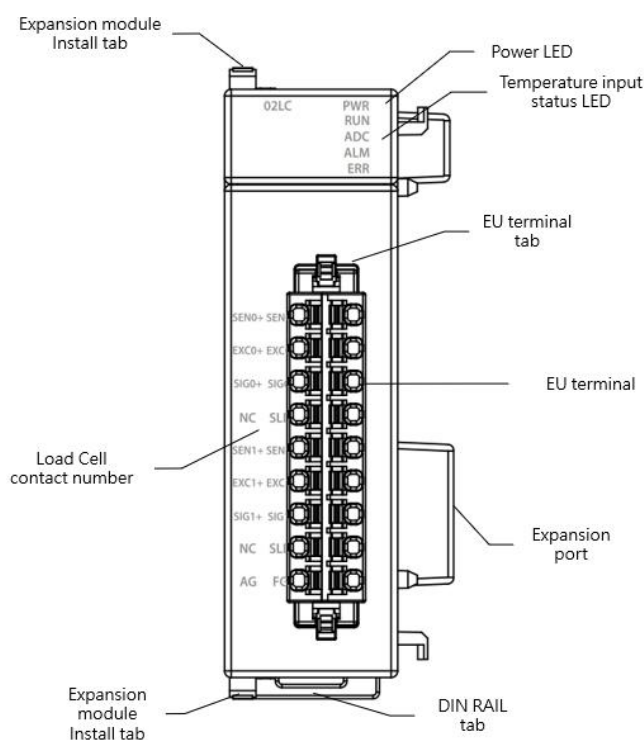

M02LC Appearance

#### Technical Specification

#### M02LC Technical Specifications Table

item	Technical Specification
Model	M02LC
Input Points	2
Excitation Voltage	5VDC $\pm$ 5%, 60mA
Sensor Type	4-wire or 6-wire Load Cell
Number of Sensor Connection	4 * 350 $\Omega$ Sensor
Sensitivity	$\pm$ 1.0mV/V $\pm$ 2.0mV/V $\pm$ 3.0mV/V $\pm$ 4.0mV/V
AD Converter Resolution	24-Bit
Conversion precision	$\pm$ 0.5% (25 $^{\circ}$ C $\pm$ 5 $^{\circ}$ C) $\pm$ 1% (0 ~ 55 $^{\circ}$ C)
Zero Drift	0.2 $\mu$ V/ $^{\circ}$ C
Gain Drift	$\pm$ 10ppm/ $^{\circ}$ C
Sampling cycle	High-Speed: 2ms/ch. (Use Single Point only)


	Standard: 10ms/ch
Insulation	Between analog input and CPU : insulated ( Digital isolators ) Between analog input channels : insulated ( optocoupler isolator )
Operating Ambient Temperature	0~55°C
Relative Humidity	5 ~ 95% (non-condensing, RH-2)
Altitude	≤2000m
Vibration Resistance (Fixed by DIN RAIL)	5~8.4Hz Amplitude: 3.5 8.4~150Hz Constant acceleration:19.6m/s <sup>2</sup> (2G) 10G, 10 times each along the 3 axes (IEC61131-2 Standard)
Shockproof	10G, 3 times each along the 3 axes
Noise Suppression	1500Vp-p, Width: 1us
Withstand Voltage	1500 VAC 1 minute (Between power terminals and input/output terminals, and between all external terminals and the housing)

### Status Indicator

#### M02LC Status Indicator Table

Indicator	instruction
PWR Indicator	Power ON: Green Light Power OFF: No Lights
RUN Indicator	Running: Green Light
ADC Indicator	ADC Converting: Yellow Light
ALM Indicator	On Alert: Red Light
ERR Indicator	In ERROR: Red Light


Wiring

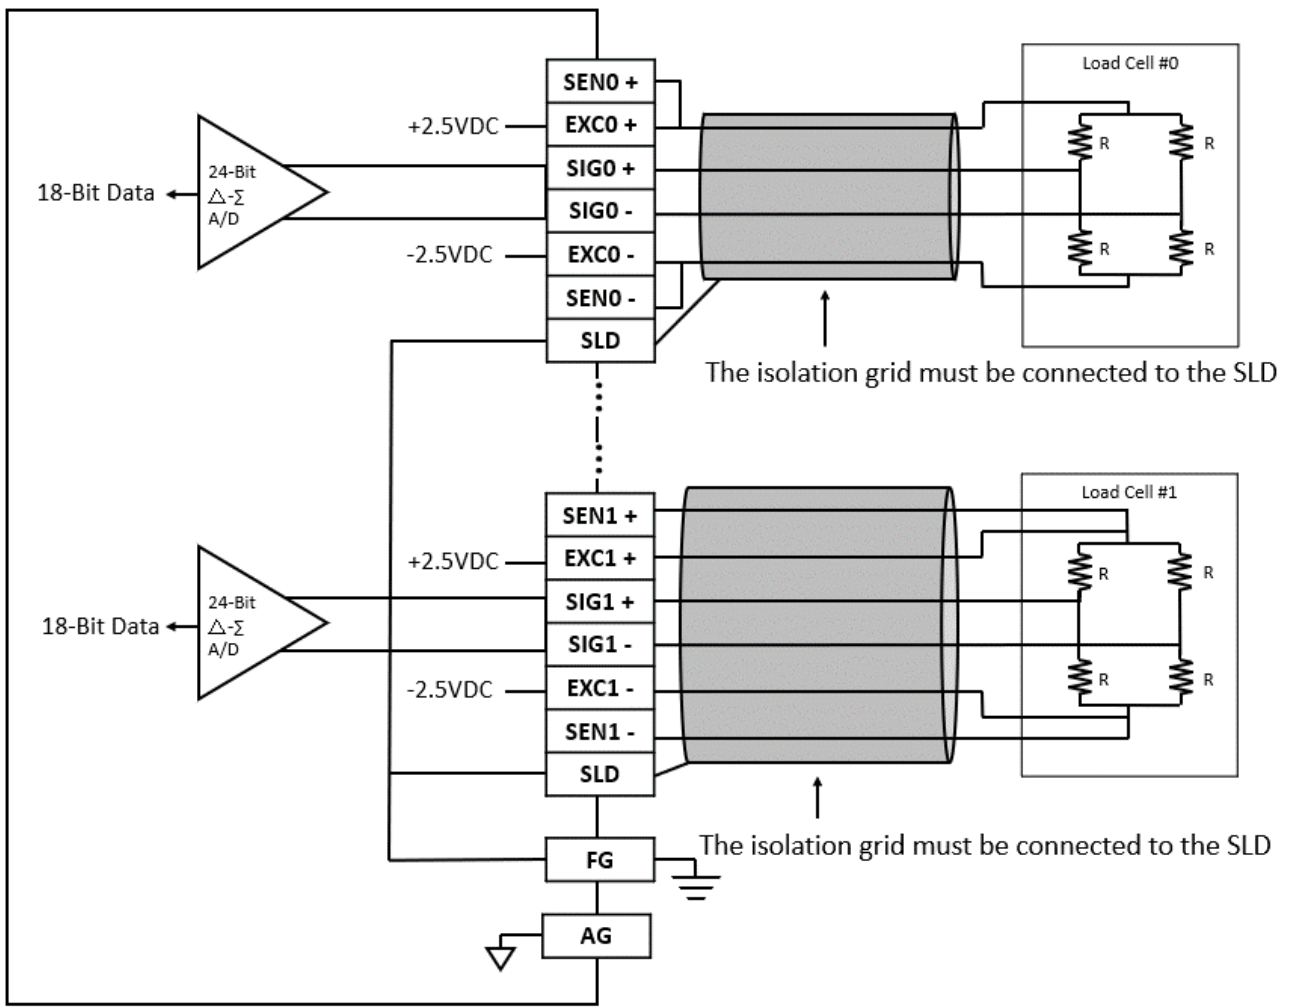

M02LC Wiring

## 9-9-2 M02LCR Specifications

### Appearance and Function

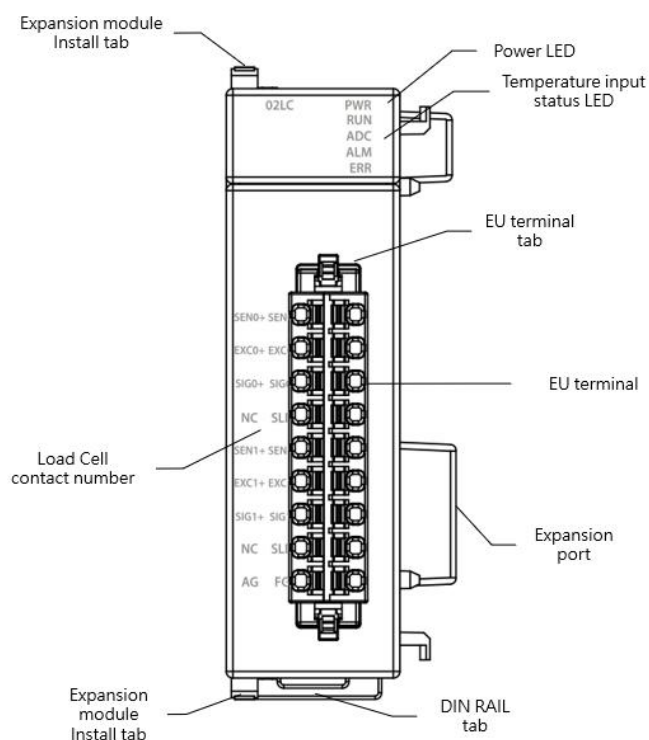

M02LC Appearance

### Technical Specification

#### M02LCR Technical Specifications Table

item	Technical Specification
Model	M02LCR
Input Points	2
Excitation Voltage	5VDC $\pm$ 5%, 60mA
Sensor Type	4-wire or 6-wire Load Cell
Number of Sensor Connection	4 * 350 $\Omega$ Sensor
Sensitivity	$\pm$ 1.0mV/V $\pm$ 2.0mV/V $\pm$ 3.0mV/V $\pm$ 4.0mV/V
AD Converter Resolution	24-Bit
Conversion precision	$\pm$ 0.01% (25 $^{\circ}$ C $\pm$ 5 $^{\circ}$ C)
Zero Drift	0.2 $\mu$ V/ $^{\circ}$ C
Gain Drift	$\pm$ 10ppm/ $^{\circ}$ C
Sampling cycle	Standard: 10ms/ch
Insulation	Between analog input and CPU : insulated ( Digital isolators ) Between analog input channels : insulated ( optocoupler isolator )
Operating Ambient Temperature	0~55 $^{\circ}$ C
Relative Humidity	5 ~ 95% (non-condensing, RH-2)
Altitude	$\leq$ 2000m


Vibration Resistance (Fixed by DIN RAIL)	5~8.4Hz Amplitude: 3.5 8.4~150Hz Constant acceleration:19.6m/s <sup>2</sup> (2G) 10G, 10 times each along the 3 axes (IEC61131-2 Standard)
Shockproof	10G, 3 times each along the 3 axes
Noise Suppression	1500Vp-p, Width: 1us
Withstand Voltage	1500 VAC 1 minute (Between power terminals and input/output terminals, and between all external terminals and the housing)

Status Indicator

**M02LCR Status Indicator Table**

Indicator	instruction
PWR Indicator	Power ON: Green Light Power OFF: No Lights
RUN Indicator	Running: Green Light
ADC Indicator	ADC Converting: Yellow Light
ALM Indicator	On Alert: Red Light
ERR Indicator	In ERROR: Red Light

Wiring

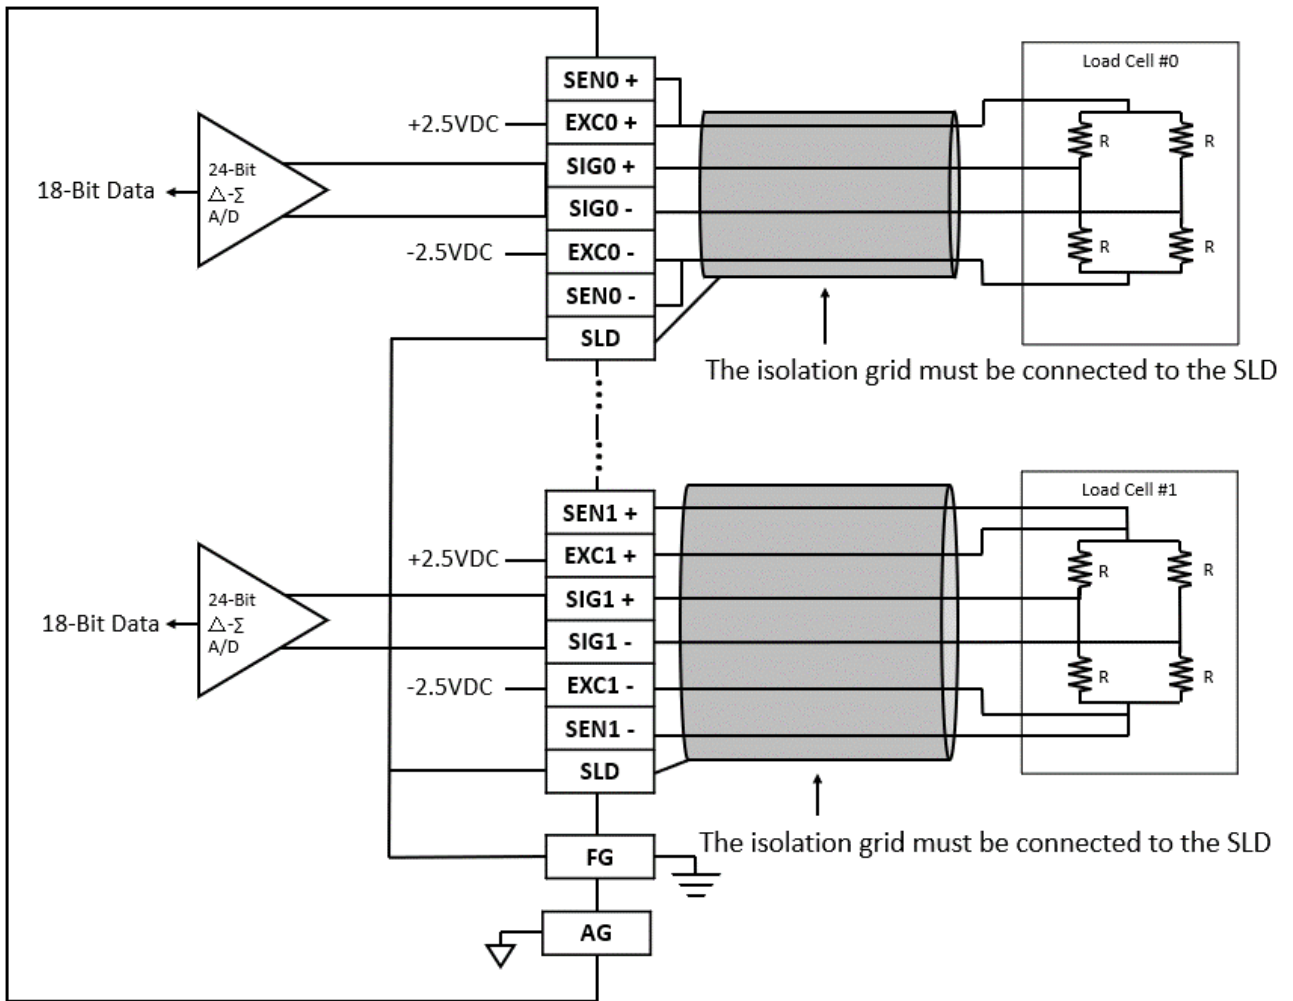

M02LCR Wiring


# 10

## Left Side Expansion Dimensions

10-1 Power Module Dimensions .....2

# 10-1 Power Module Dimensions


## 10-1-1 MPA024-24 Dimensions

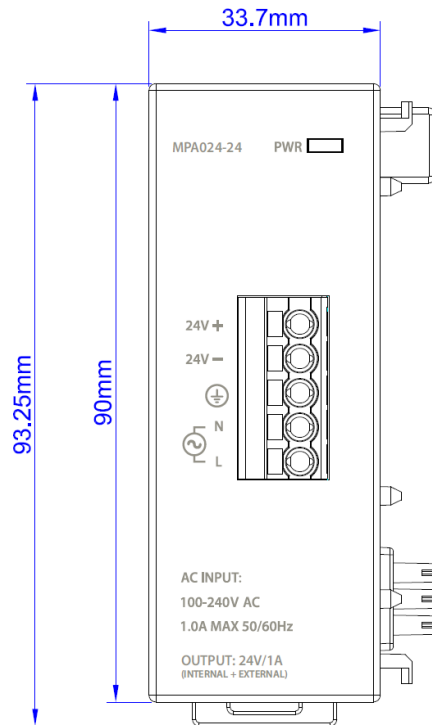

MPA024-24 Dimensions



10-2-2 MPA048-24 Dimensions

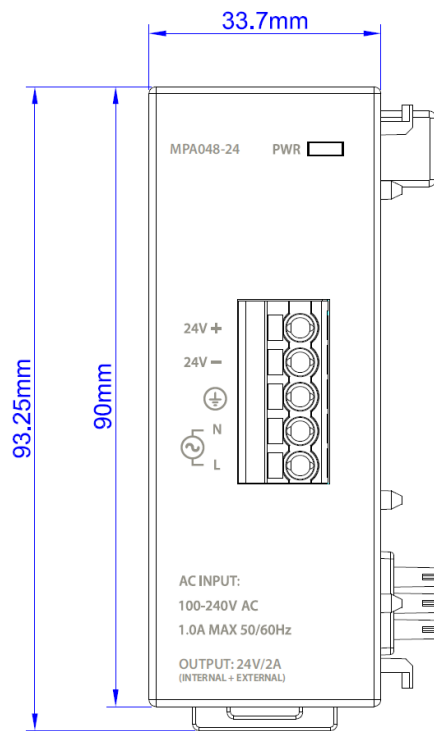

MPA048-24 Dimensions

# 11


## Right Side High-Speed Expansion Dimensions

---

<u>11-1</u>	<u>High-Speed Communication Expansion Module Dimensions .....</u>	<u>2</u>
-------------	---	----------


## 11-1 High-Speed Communication Expansion Module Dimensions

### 11-1-1 MHCM25 Dimensions

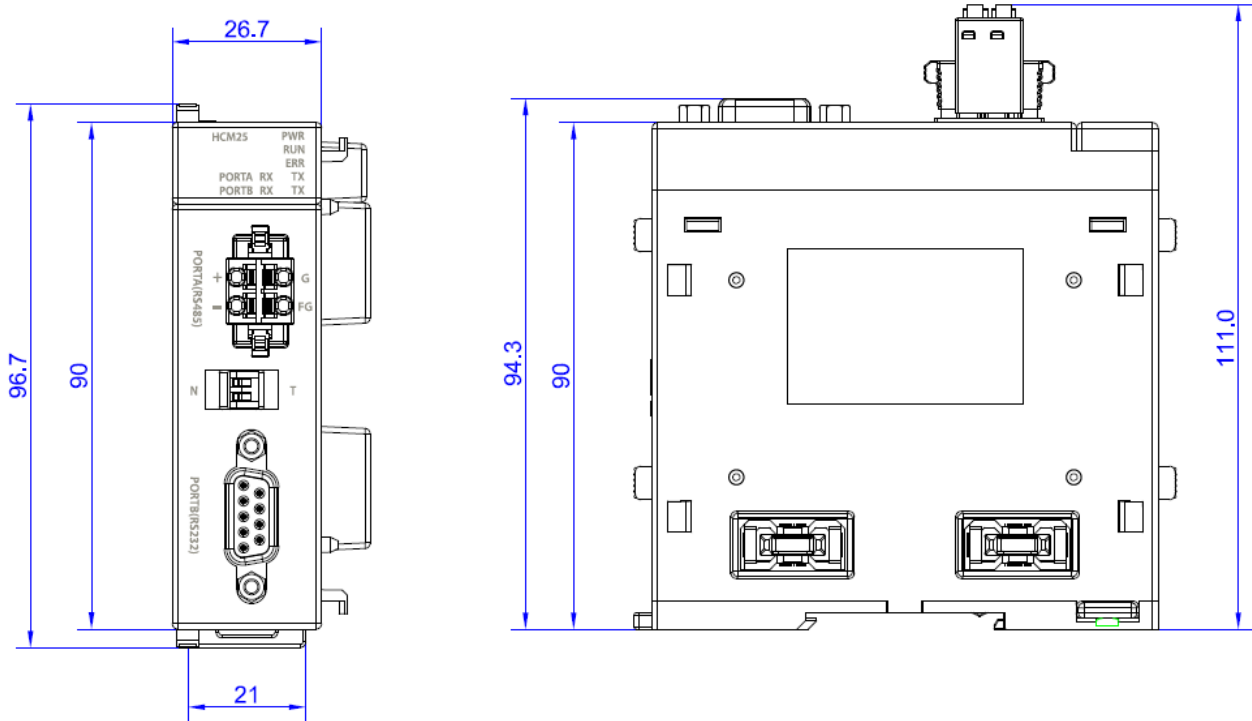

MHCM25 Dimensions

11-1-2 MHCM55 Dimensions

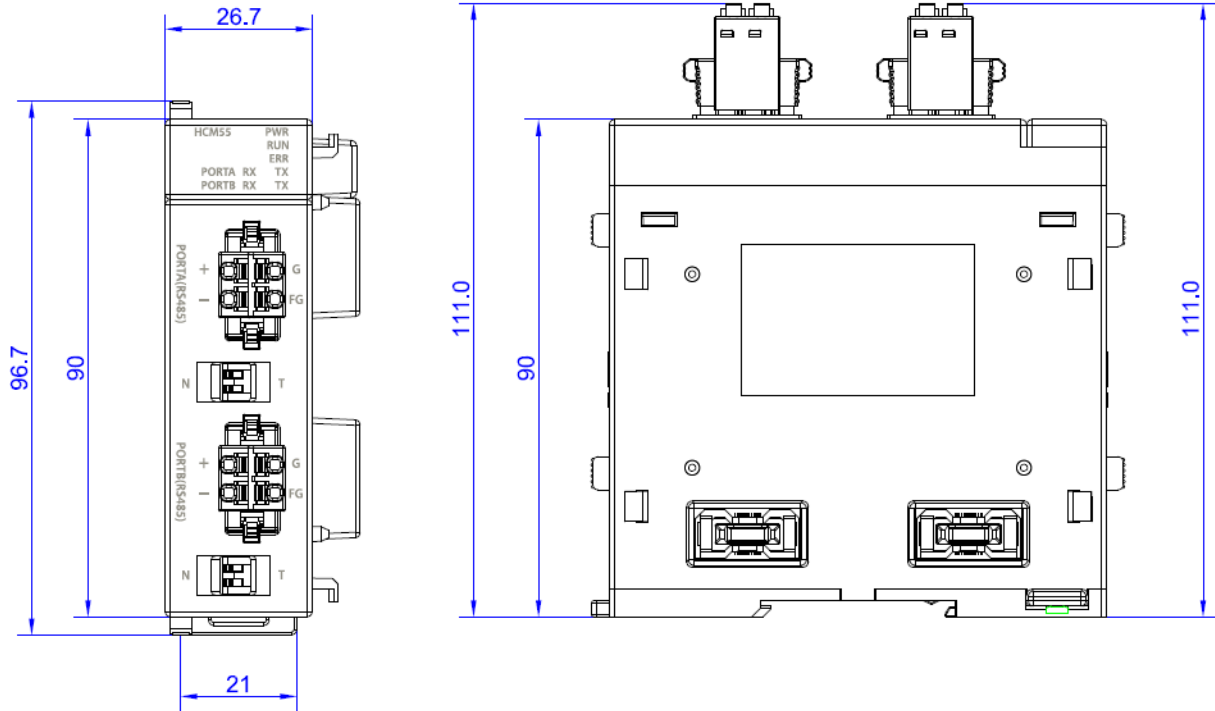

MHCM55 Dimensions


# 12

## Right Side Expansion Dimensions

<u>12-1</u>	<u>Digital input Expansion Module Dimensions</u> .....	2
<u>12-2</u>	<u>Digital Output Expansion Module Dimensions</u> .....	3
<u>12-3</u>	<u>Digital Input/Output Combo Expansion Module Dimensions</u> .....	5
<u>12-4</u>	<u>Analog Input Expansion Module Dimensions</u> .....	6
<u>12-5</u>	<u>Analog Output Expansion Module Dimensions</u> .....	8
<u>12-6</u>	<u>Analog Input/Output Combo Expansion Module Dimensions</u> .....	10
<u>12-7</u>	<u>Temperature Expansion Module Dimensions</u> .....	11
<u>12-8</u>	<u>Temperature Combo Expansion Module Dimensions</u> .....	13
<u>12-9</u>	<u>Load Cell Expansion Module Dimensions</u> .....	14
<u>12-10</u>	<u>End Module Cover Dimensions</u> .....	16

# 12-1 Digital input Expansion Module Dimensions



## 12-1-1 M16X Dimensions

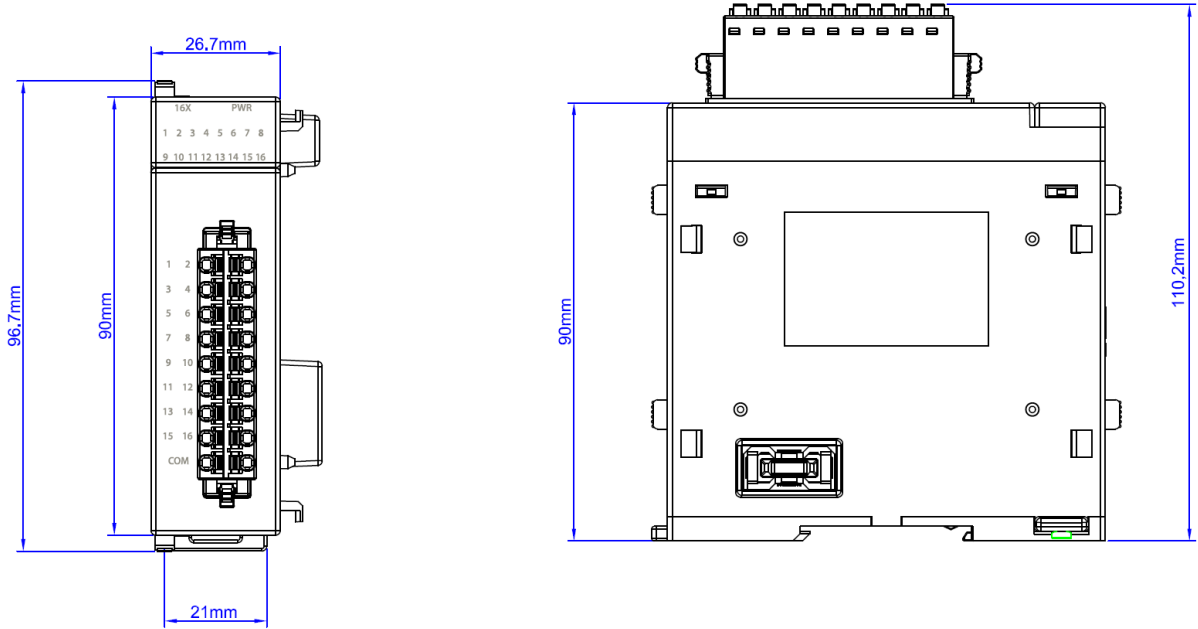



M16X Dimensions

# 12-2 Digital Output Expansion Module Dimensions


## 12-2-1 M16YT/ M16YJ/ M16YR Dimensions

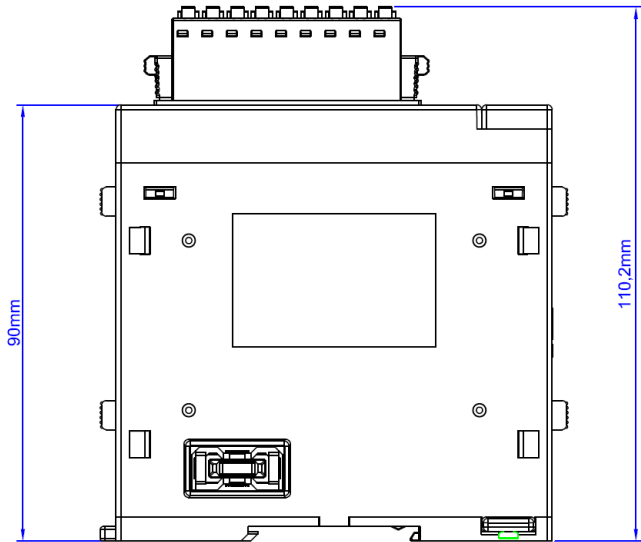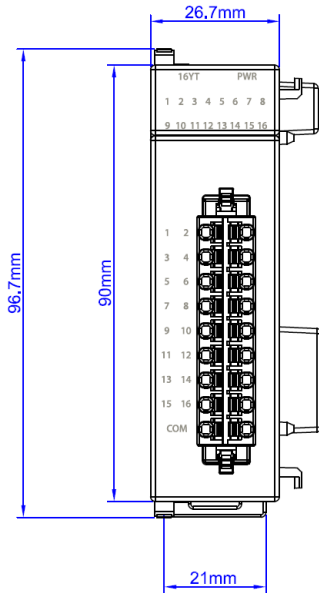

M16YT Dimensions

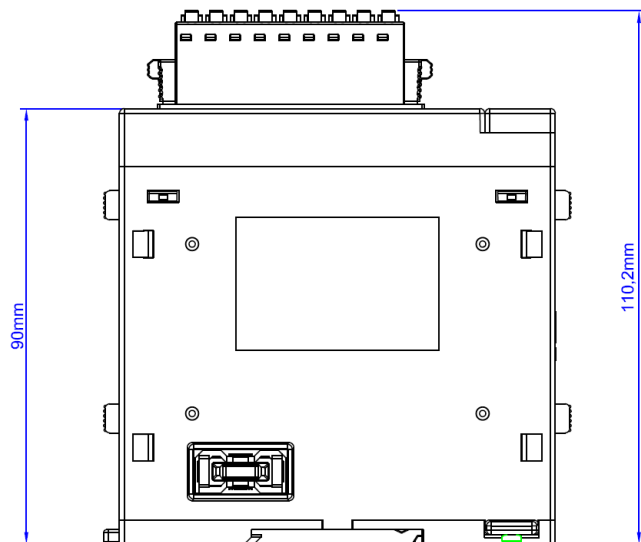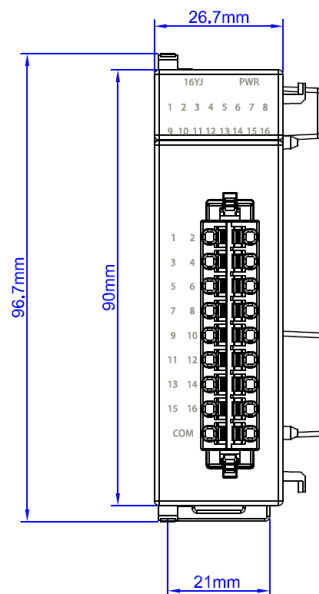

M16YJ Dimensions


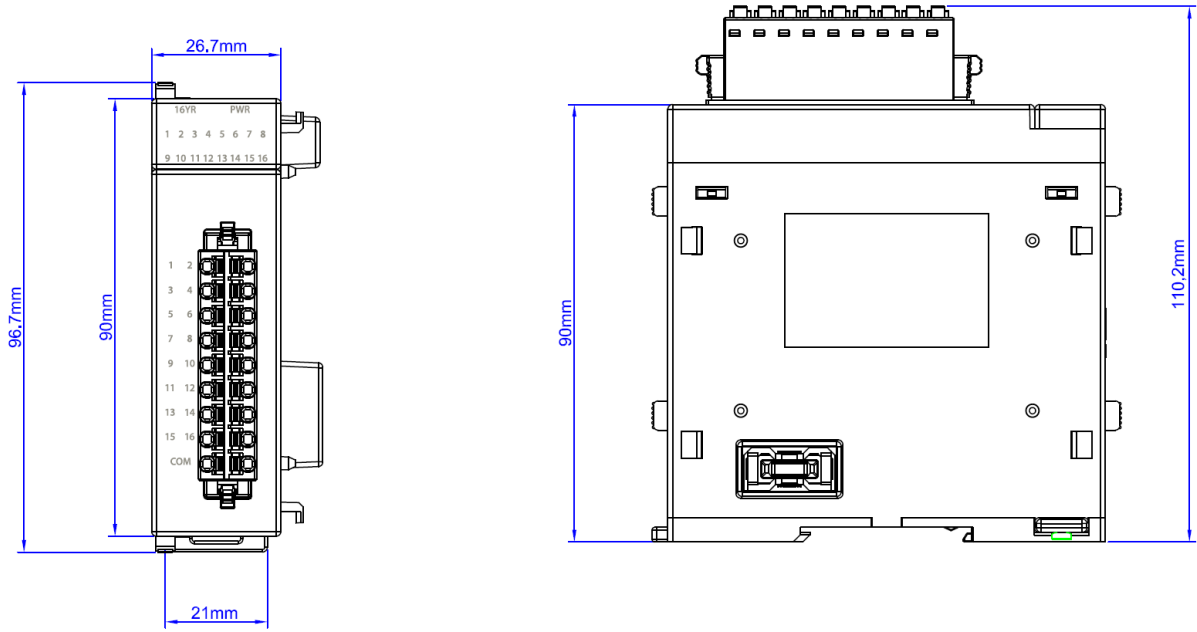


M16YR Dimensions





## 12-3 Digital Input/Output Combo Expansion Module Dimensions

### 12-3-1 M1616XYT/ M161616XYJ Dimensions

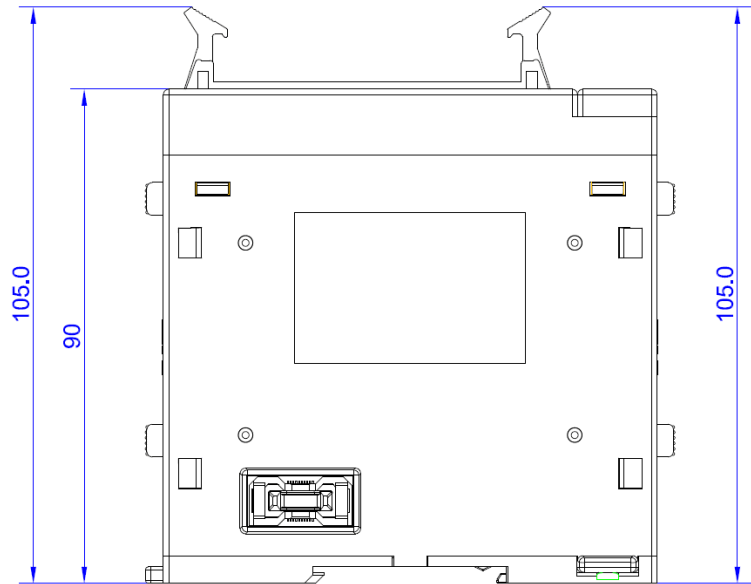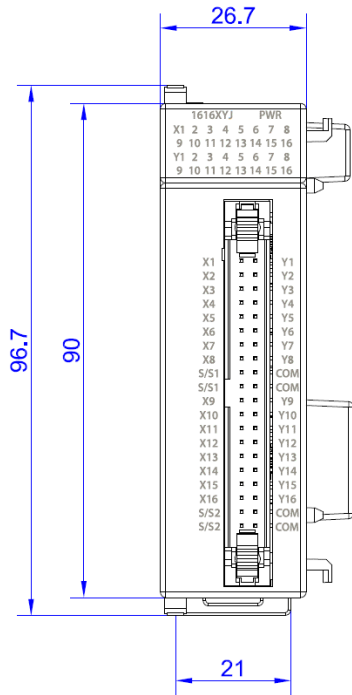


M1616XYT Dimensions

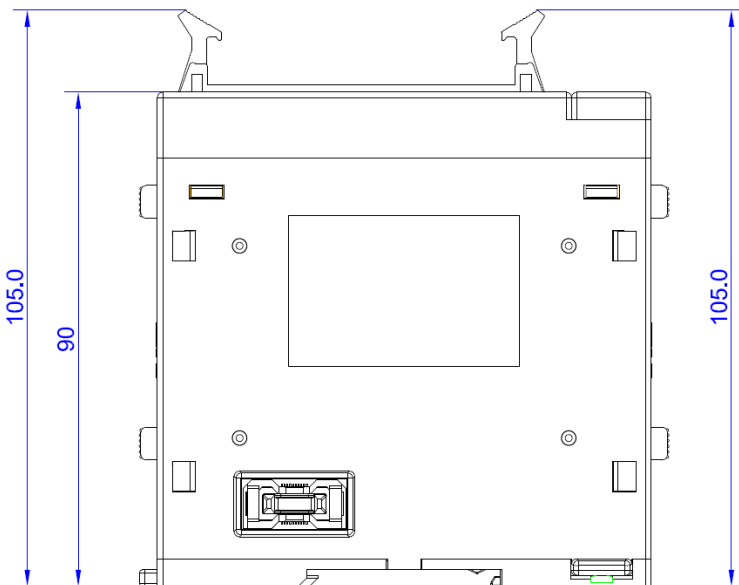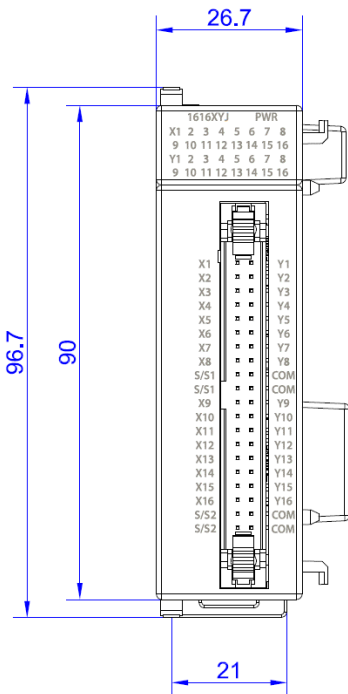

M1616XYJ Dimensions


# 12-4 Analog Input Expansion Module Dimensions

## 12-4-1 M04AD Dimensions

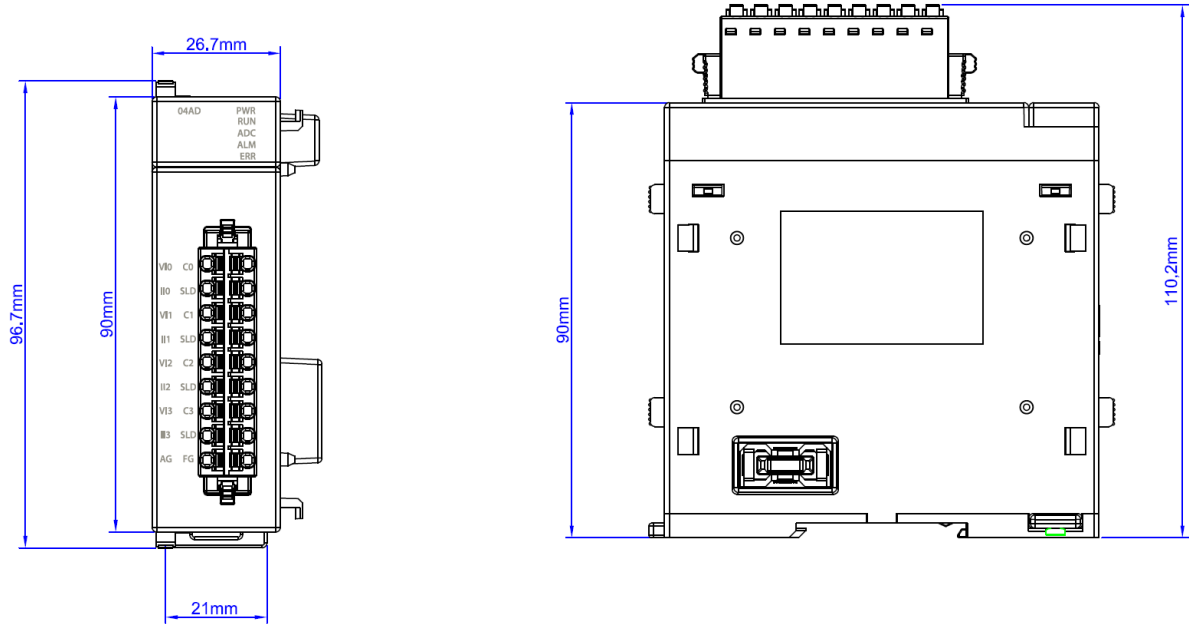

M04AD Dimensions


12-4-2 M04ADR Dimensions

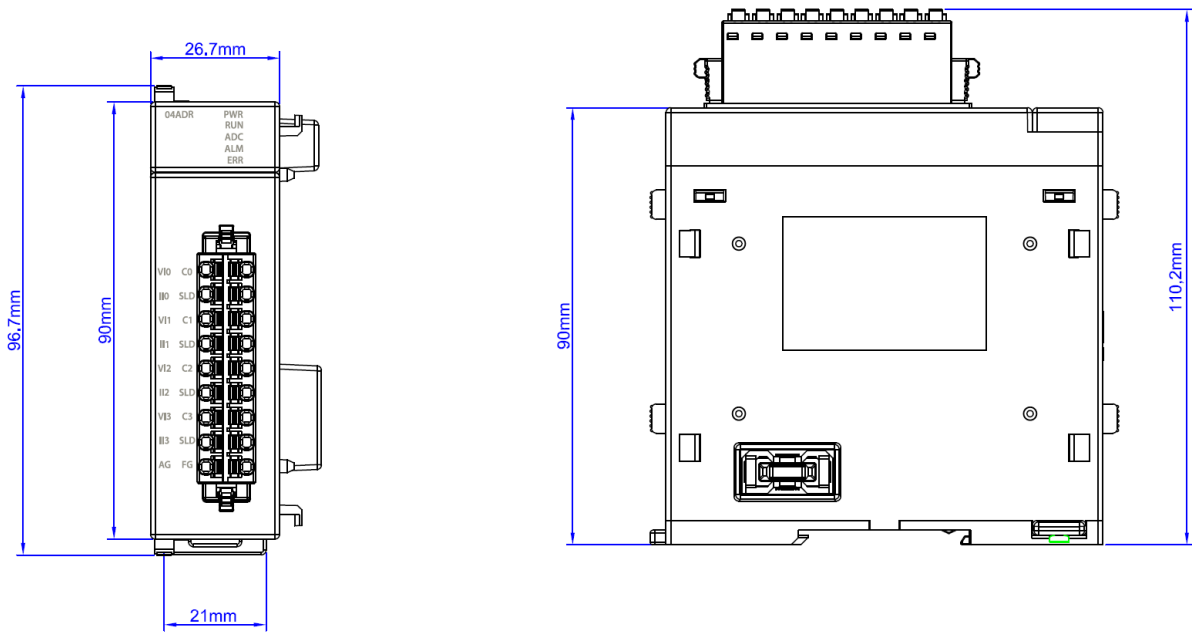

M04ADR Dimensions


# 12-5 Analog Output Expansion Module Dimensions

## 12-5-1 M04DA Dimensions

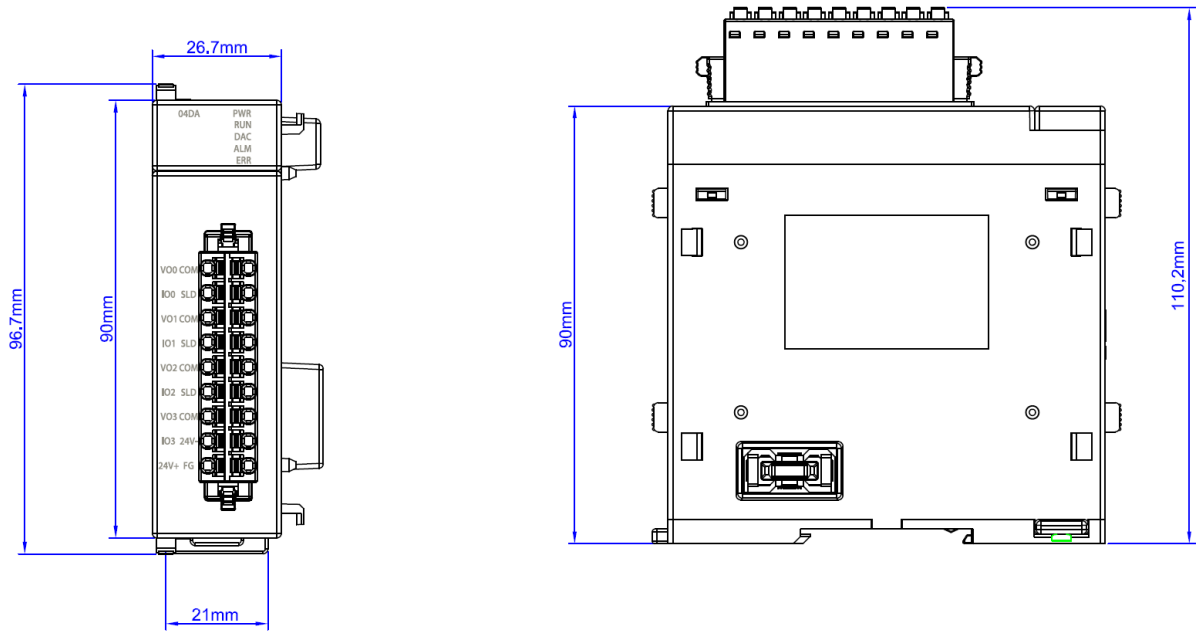

M04DA Dimensions


12-5-2 M04DAR Dimensions

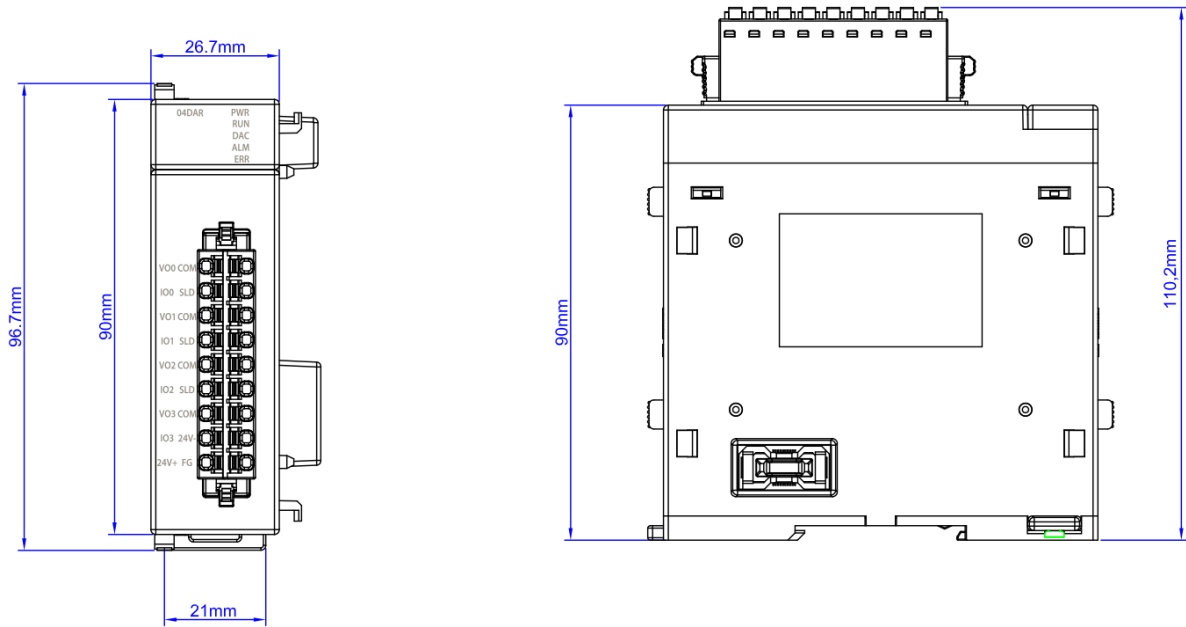

M04DAR Dimensions

## 12-6 Analog Input/ Output Combo Expansion Module Dimensions


### 12-6-1 M0202AH Dimensions

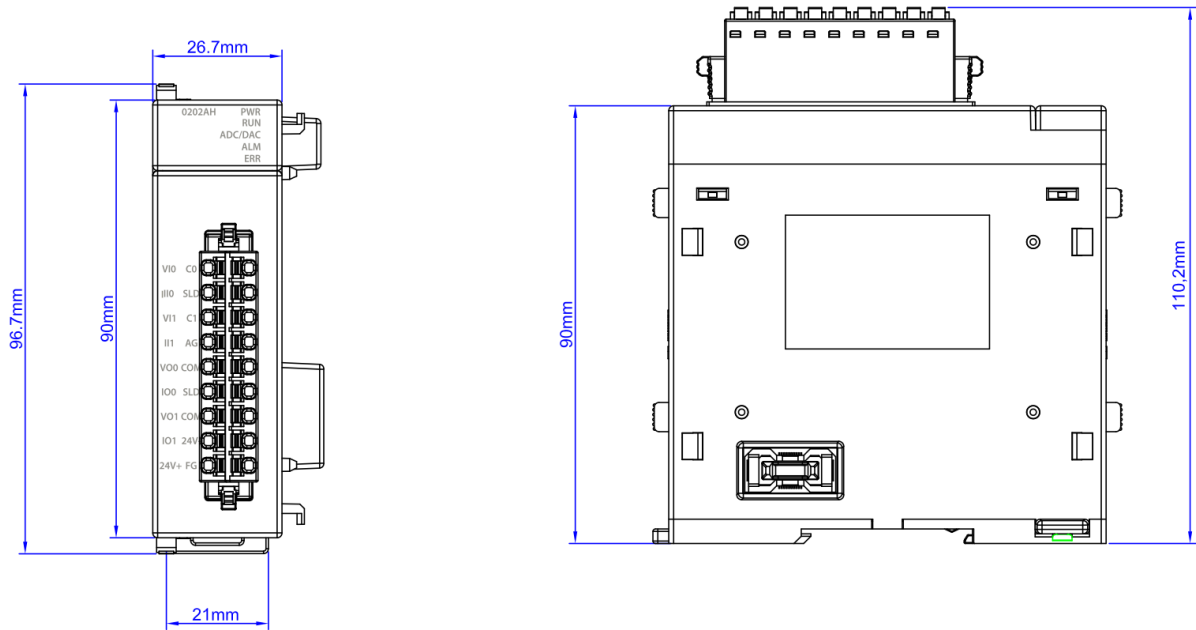

M0202AH Dimensions


# 12-7 Temperature Expansion Module Dimensions

## 12-7-1 M04TC Dimensions

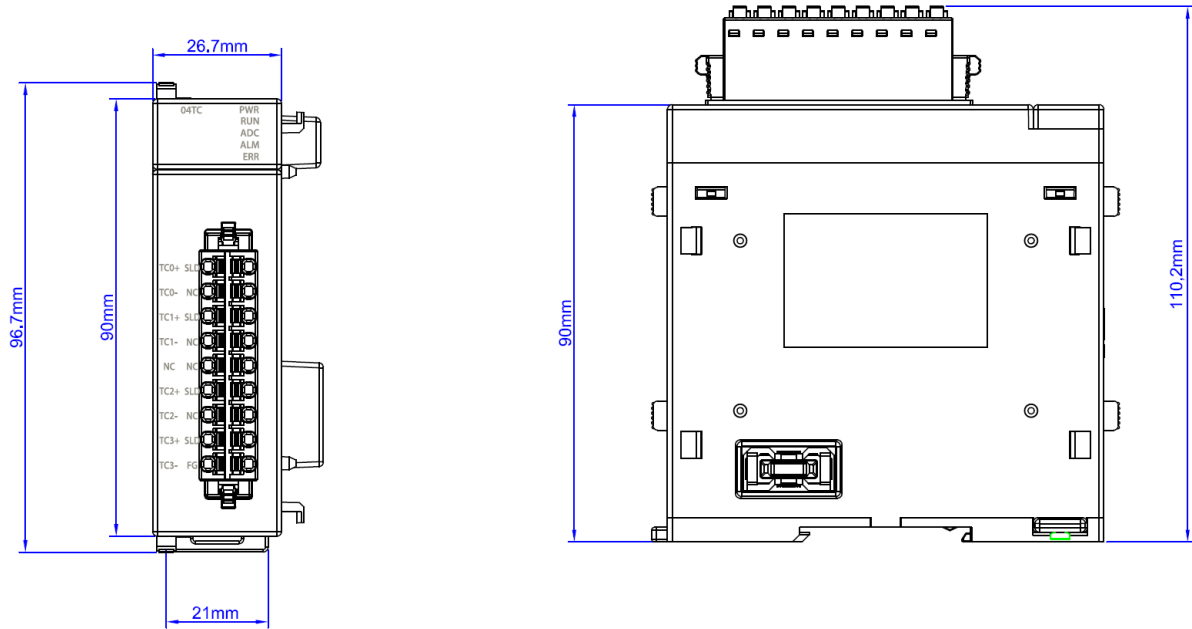

M04TC Dimensions

12-7-2 M04TCR Dimensions

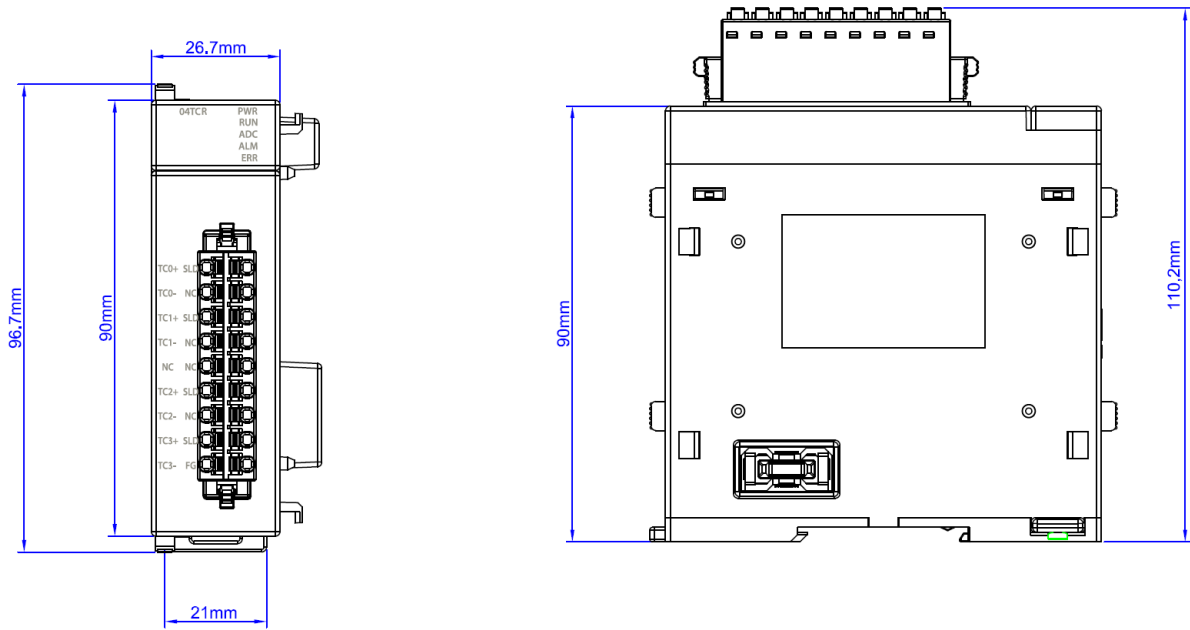


M04TCR Dimensions



## 12-8 Temperature Combo Expansion Module Dimensions


### 12-8-1 M0202TH Dimensions

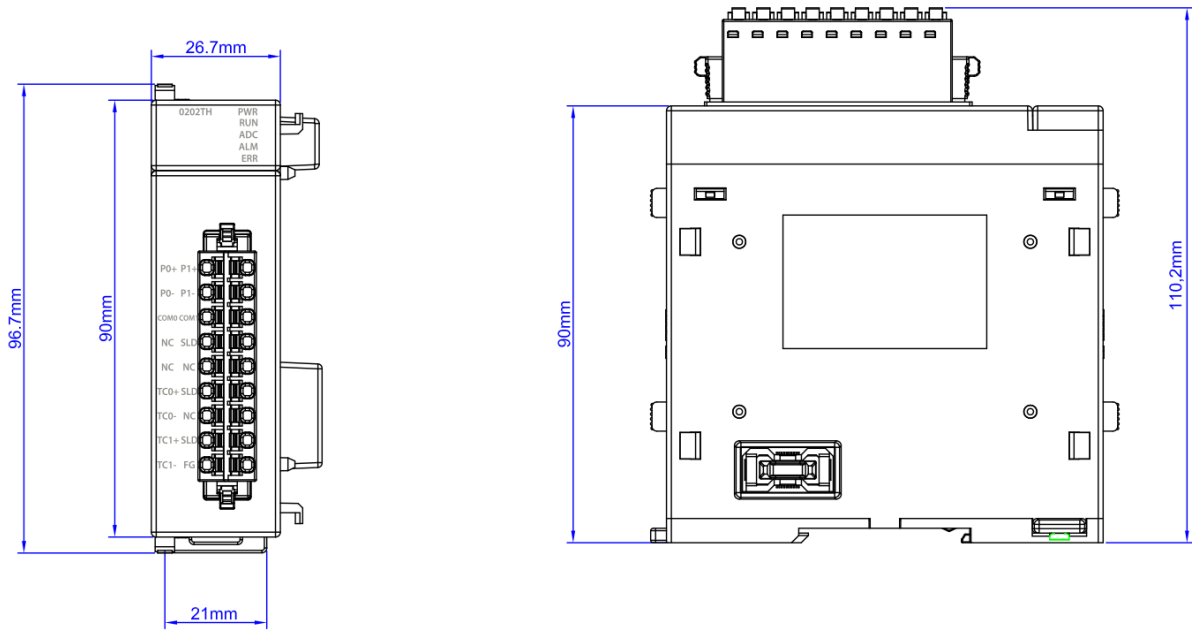

M0202TH Dimensions


# 12-9 Load Cell Expansion Module Dimensions

## 12-9-1 M02LC Dimensions

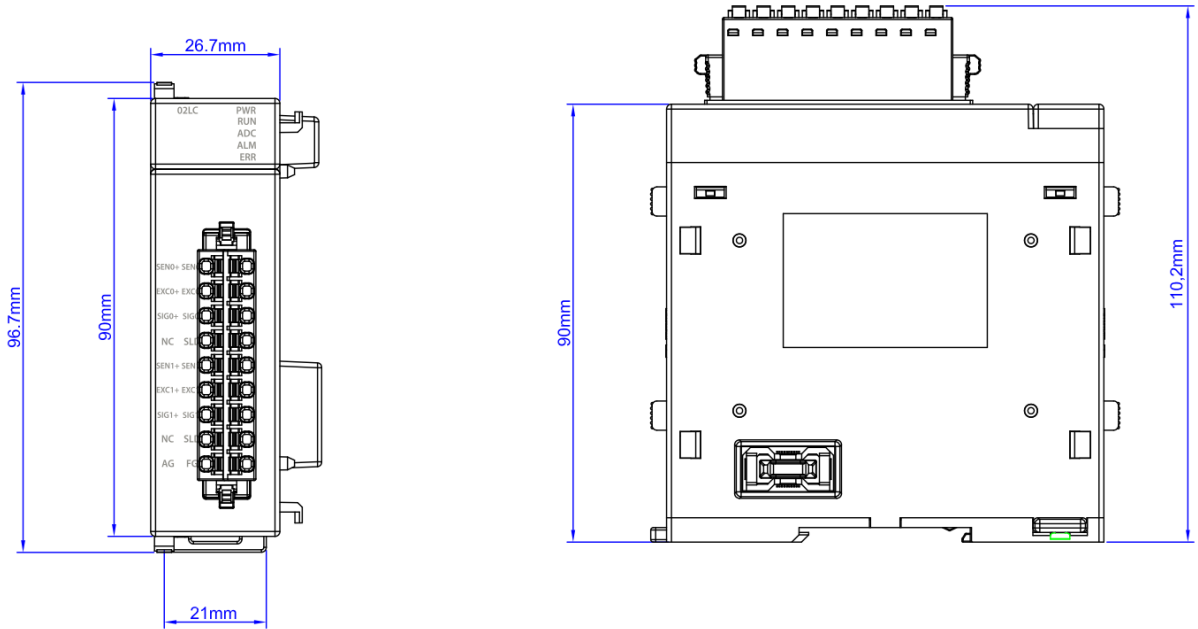

M02LC Dimensions


12-9-2 M02LCR Dimensions

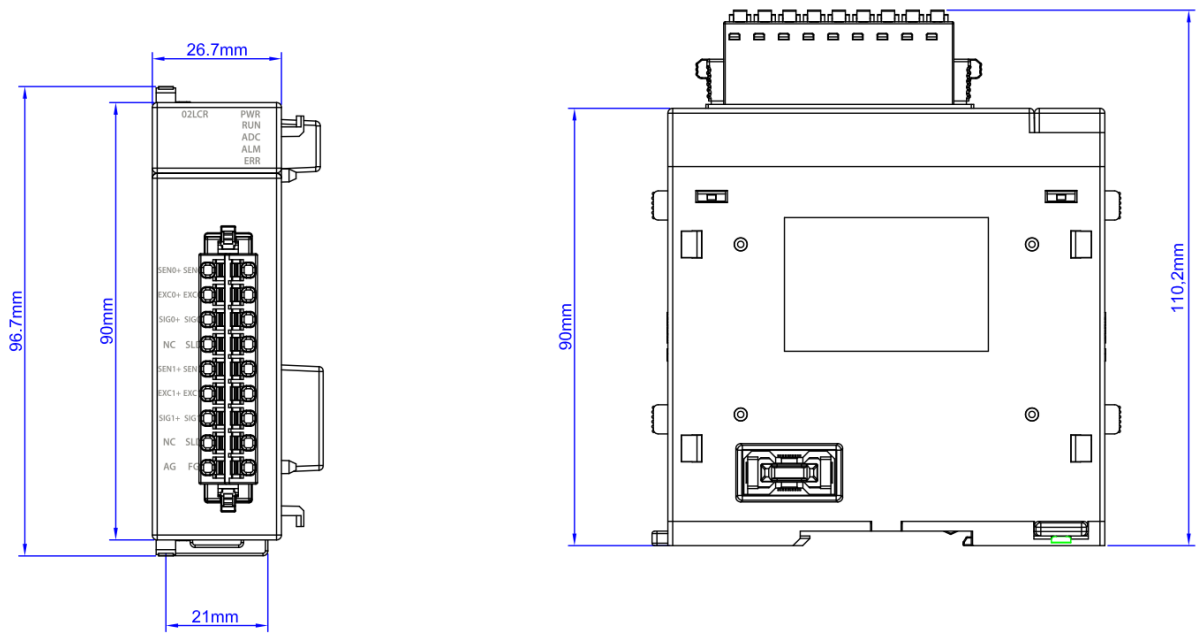

M02LCR Dimensions

## 12-10 End Module Cover Dimensions

### 12-10-1 MRE Dimensions

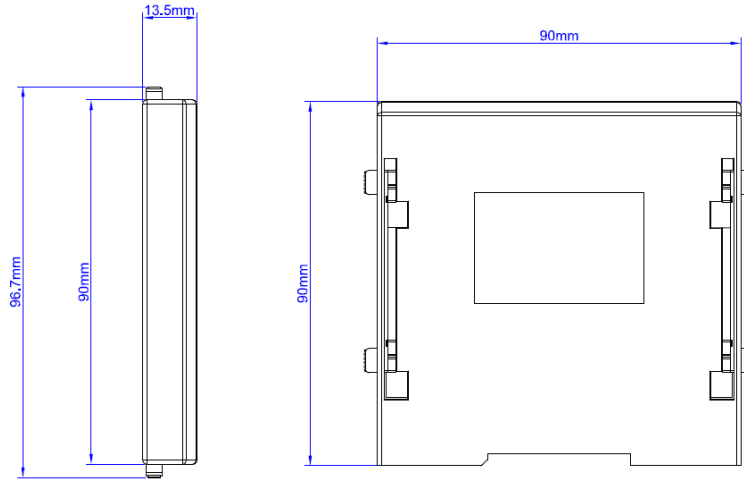

MRE Dimensions

# 13

## Expansion Module Troubleshooting

---

<u>13-1</u>	<u>Digital Input Expansion Module Troubleshooting</u> .....	2
<u>13-2</u>	<u>Digital Output Expansion Module Troubleshooting</u> .....	2
13-3	Digital Input/ Output Expansion Module Troubleshooting	
<u>13-4</u>	<u>Analog Input Expansion Module Troubleshooting</u> .....	2
<u>13-5</u>	<u>Analog Output Expansion Module Troubleshooting</u> .....	2
13-6	Analog Input/ Output Expansion Module Troubleshooting	
<u>13-7</u>	<u>Temperature Input Expansion Module Troubleshooting</u> .....	3
13-8	Temperature Combo Expansion Module Troubleshooting	
13-9	Load Cell Expansion Module Troubleshooting	

## 13-1 Digital Input Expansion Module Troubleshooting

Digital Input Expansion Module Troubleshooting Table

Error Code	Error State	ERR LED	Module behavior	Note

## 13-2 Digital Output Expansion Module Troubleshooting

Digital Output Expansion Module Troubleshooting Table

Error Code	Error State	ERR LED	Module behavior	Note

## 13-3 Digital Input/ Output Expansion Module Troubleshooting

Digital Input/ Output Combo Expansion Module Troubleshooting Table

Error Code	Error State	ERR LED	Module behavior	Note

## 13-4 Analog Input Expansion Module Troubleshooting

Analog Input Expansion Module Troubleshooting Table

Error Code	Error State	ERR LED	Module behavior	Note

## 13-5 Analog Output Expansion Module Troubleshooting

Analog Output Expansion Module Troubleshooting Table

Error Code	Error State	ERR LED	Module behavior	Note

## 13-6 Analog Input/ Output Expansion Module Troubleshooting

Analog Input/ Output Combo Expansion Module Troubleshooting Table

Error Code	Error State	ERR LED	Module behavior	Note

## 13-7 Temperature Expansion Module Troubleshooting

Temperature Input Expansion Module Troubleshooting Table

Error Code	Error State	ERR LED	Module behavior	Note

## 13-8 Temperature Combo Expansion Module Troubleshooting

Temperature Combo Expansion Module Troubleshooting Table

Error Code	Error State	ERR LED	Module behavior	Note

## 13-9 Load Cell Expansion Module Troubleshooting

Load Cell Expansion Module Troubleshooting Table

Error Code	Error State	ERR LED	Module behavior	Note

# 14

## Repairs and Maintenance

---

- [14-1](#) [Precautions](#) .....3
- [14-2](#) [Daily Maintenance](#) .....3
- [14-3](#) [Regular Maintenance](#) .....4



## 14-1 Precautions

---

When performing the required servicing and maintenance, please watch the following requirements because incorrect or careless operations may result in personal injury and equipment damage.

- ⚠ Please confirm that the ambient environment is not exposed to corrosive substances (*e.g.*, chlorides and sulfide gas) and combustible substances (*e.g.*, oil mist and cutting powder) or dusty area to prevent PLC System from failure or causing a fire.
- ⚠ Do not contact the terminal to prevent the terminal from getting oxidized or personnel from electrocution.
- ⚠ Shut down the external power and then dismantle the terminal or the screws to avoid personnel electrocution.
- ⚠ Do not apply heavy force on the cables or drag or clip the cable too hard to prevent cable from damage or terminal from loosening while avoiding electrocution.
- ⚠ Confirm that the input voltage is within the rating scope.
- ⚠ Do not attempt to disassemble or modify the module or repair the module privately; otherwise, it may lead to product failure, fire or personnel injury.
- After replacing the CPU module, confirm that all programs and parameters are being created in the new CPU module and are duly set. Following that, you may start the PLC System to prevent the controlled component from executing a false action.
- Please read the manuals carefully in order to get familiar with the required operation mechanisms when the PLC is running such as procedure change, forced output and RUN/STOP, etc. The purpose is to prevent incorrect output or equipment damage as may be caused by inaccurate operations.
- Before touching the module, please touch the grounding metal first or wear an anti-static bracelet in order to discharge the electrostatic from the human body to prevent it from damaging the module.
- When using a mobile phone or communication device, please keep appropriate distance to prevent from interfering with the system as to cause the false action.
- Do not install the PLC Control System in an environment exposed to direct sunlight or humidity.
- Please confirm that appropriate distance has been maintained between the PLC Control System and the heat source such as coil, heater and resistor, etc. to prevent the component from being exposed to higher temperature.
- Please install an emergency power shutdown system and an over-current protection device as required in order to protect the PLC Control System.
- During the operations and maintenance process, please check the installation stability in order to avoid unexpected vibrations as to damage the PLC Control System and the controlled component.

## 14-2 Daily Maintenance

The connection terminal may present loosening signs after running the PLC System for a longer time. To maintain the PLC System at normal operating status, the inspection should be executed according to daily maintenance items after confirming that the ambient environment meets the environmental specifications that are specified in Chapter 3. When discovering any abnormal signs, please make improvements immediately according to the specified troubleshooting method.

### 14-2-1 Maintenance Tools

- Screwdriver
- Stain removing alcohol
- Cleaning cotton rag
- Swab

### 14-2-2 Daily Maintenance Items

#### Daily maintenance items

No.	Inspection Item		Job Content	Judgment Standard	Action
1	Appearance cleanliness		Visual inspection	If there are any stains.	Wipe off the stains.
2	Appearance completeness		Visual inspection	If there is any damage.	Wipe off the stains.
3	Back board and DIN Rail installation status		If the back board and the DIN rail are securely installed.	The back board and the DIN rail must be securely installed.	Check if the back board and the rail are properly installed.
4	Locking status of module connection area		If the locking of module connection area is detaching or loosening.	The locking device of the module connection area must be located at the locking position.	Move the locking device of the module connection area back to the locking position.
5	Appearance of wiring cable		If the wiring cable is damaged.	The wiring cable shall be intact without any damage.	Replace the wiring cable.
6	Connection status of each terminal		If the terminal is loosening.	The terminal cannot present any loosening sign.	Connect the terminal properly.
7	Power module	PWR indicator	If the PWR indicator is ON.	The PWR indicator must be ON.	For detailed troubleshooting, please refer to "Expansion Module Troubleshooting" section.
8	Expansion module	PWR indicator	If the PWR indicator is ON.	The PWR indicator must be ON.	
		RUN indicator	If the RUN indicator is ON.	The RUN indicator must be ON.	
		ERR indicator	If the ERR indicator is OFF.	The ERR indicator must be OFF.	
		ALM indicator	If the ALM indicator is OFF.	The ALM indicator must be OFF.	

\* Remove the expansion module and then use a swab to wipe off the dust and stains present in inaccessible corners.

## 14-3 Regular Maintenance

When the routine daily maintenance is required, the module should be serviced cyclically according to the actual operating environment. The inspection should be executed according to daily maintenance items after confirming that the ambient environment meets the environmental specifications that are specified in Chapter 3. When discovering any abnormal signs, please make improvement immediately according to the specified troubleshooting method.

### 14-3-1 Maintenance Tools

- Screwdriver
- Stain removing alcohol
- Cleaning cotton rag
- Swab
- Multimeter
- Temperature gauge
- Hygrometer

### 14-3-2 Regular Maintenance Items

Regular maintenance items table.

No.	Inspection Item	Job Content	Judgment Standard	Action
1	Environmental temperature and humidity	Measure with temperature gauge and hygrometer.	Must meet the environmental specifications established for the respective module.	Confirm the reasons causing the environmental change and then remove the problem.
2	Air	Measure the corrosive gas	Corrosive gas should not be detected.	
3	Power voltage	Measured the supplied AC power.	Must meet the power module specifications.	Confirm the power supply system.
4	Dust/stain attaching status	Check the appearance	Should be no dust and stains.	Wipe off the dust and the stains.
5	Module installation status	Check if the module is securely installed.	The module must be securely installed.	For correct installation method, please refer to "Installation and Wiring" section.
6	Locking status of connection area between modules	If the locking of module connection area is detaching or loosening.	The locking device of the module connection area must be located at the locking position.	Move the locking device of the module connection area back to the locking position.
7	Terminal connection status	Check by plugging and unplugging the connection port.	The terminal cannot present any loosening signs.	Connect the terminal properly.
8	Appearance of wiring cable	If the wiring cable is presenting any damage signs.	The wiring cable should be intact without any damage.	Replace the wiring cable.
9	PLC System diagnosis	Check the error record.	Caused by careless error.	For detailed troubleshooting, please refer to "Expansion Module Troubleshooting" section.

10	Max. scanning time	Check the status value of R35371 through the monitoring page.	The maximum scanning time must be without the scope allowed by the system specifications.	Check the reasons causing the extension of scanning time.
----	--------------------	---	---	---

\* Remove the expansion module and then use a swab to wipe off the dust and stains present in inaccessible corners.

# Amendment Record

Version	Date	Description	Author
V1.0	2022/05/31	Draft	Albert